

[Manuals.plus](#) /

› [Jorest](#) /

› JOREST Watch Link Removal Kit - User Manual

Jorest AJJOER0801ORDJPR2

JOREST Watch Link Removal Kit - User Manual

Model: AJJOER0801ORDJPR2

1. INTRODUCTION

Thank you for choosing the JOREST Watch Link Removal Kit. This comprehensive toolset is designed to help you easily adjust and repair your watch bracelets from the comfort of your home. This manual provides detailed instructions to ensure safe and effective use of your new kit.

2. PRODUCT OVERVIEW

The JOREST Watch Link Removal Kit combines essential tools for watch bracelet adjustment and replacement. It features a unique liftable platform for precise alignment and includes various punch needles and pins to accommodate different watch strap types.


2.1 Kit Components

- Watch Link Remover Tool with Liftable Platform
- Double Head Hammer
- 3 PCS Punch Pins (different diameters)
- 9 PCS Replacement Punch Needles (two different lengths)
- Spring Bar Tool
- Cleaning Cloth
- Instruction Manual

WATCH BAND LINK REMOVER



DOUBLE HEAD HAMMER

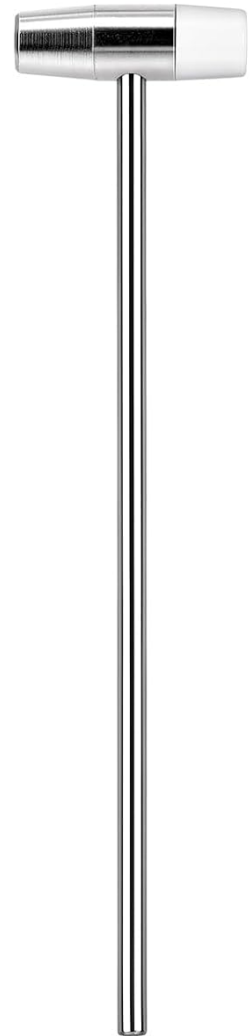

SPARE PUNCH NEEDLES *9



CLEANING CLOTH



INSTRUCTION MANUAL



PIN PUNCHES *3



SPRING BAR TOOL



Figure 1: Overview of the JOREST Watch Link Removal Kit components.



Figure 2: The JOREST Watch Link Removal Kit.

2.2 Key Features

- **Liftable Platform:** Designed for better alignment of the punch pin and the watch link pin hole, enhancing efficiency.
- **Multifunction Design:** Combines watch link remover and strap holder into one tool for both removal and installation of watch link pins. *Note: Not applicable for screw-on watch straps.*
- **Multiple Punch Needles:** Includes 9 replacement punch needles of two different lengths for various strap widths.
- **Varied Punch Pin Diameters:** Three different diameter punch pins are provided to ensure compatibility with a wide range of watch straps.

LIFTABLE PLATFORM

Adaptable to different thicknesses of watchbands



Figure 3: The liftable platform feature for precise pin alignment.



Figure 4: Illustration of the two different lengths of punch needles.

3. SETUP

Before beginning any watch adjustment, ensure you have a clean, well-lit workspace. Gather all necessary components from your JOREST kit. Identify the direction of the pins on your watch bracelet; usually, there are small arrows indicating the push-out direction. Always push pins out in the direction of the arrow.

4. OPERATING INSTRUCTIONS

4.1 Watch Link Removal

There are two primary methods for removing watch links using this kit:

Method 1: Using the Watch Link Remover Tool

1. Place the watch bracelet into the slot of the watch link remover tool, ensuring the pin to be removed is aligned with the punch needle. The arrows on the watch band should point downwards, towards the tool's opening.
2. Adjust the liftable platform if needed to ensure the punch needle is perfectly aligned with the pin hole.

3. Slowly turn the screw handle of the tool clockwise to push the pin out of the watch link. Continue turning until the pin is fully ejected.
4. Carefully remove the ejected pin and the watch link.

ADJUST THE WATCHBAND



Figure 5: Step-by-step guide for watch link removal using the tool.

Method 2: Using the Hammer and Punch Pins

This method is particularly useful for very wide bands or if the tool's screw mechanism is not suitable.

1. Place the watch bracelet on a stable surface or the watch band holder (if available), aligning the pin to be removed with an appropriate punch pin. Ensure the arrows on the watch band point downwards.
2. Select a punch pin with a diameter slightly smaller than the watch pin.
3. Gently tap the end of the punch pin with the double head hammer to push the watch pin out. Apply steady, controlled taps.
4. If the pin is not fully ejected, use a longer punch needle to push it out completely.
5. Remove the ejected pin and the watch link.

TWO WAYS OF REMOVING THE WATCH PIN



Figure 6: Visual guide for both watch pin removal methods.

Video Demonstration: Watch Link Removal

Your browser does not support the video tag.

Video 1: Official JOREST demonstration of watch link removal using the kit.

4.2 Watch Link Installation

To re-install watch links or adjust the bracelet to a smaller size:

1. Align the watch links you wish to connect.
2. Insert a watch pin into the link hole, ensuring it is oriented correctly (opposite to the removal direction).
3. Place the bracelet back into the watch link remover tool or onto a stable surface.
4. Gently push the pin back into place using the screw mechanism of the tool or by lightly tapping with the double head hammer until it is flush with the link.

4.3 Using the Spring Bar Tool

The spring bar tool is used for replacing watch straps or unlinking bracelets that use spring bars instead of pins.

- **V-Head:** Use the V-shaped end to compress the spring bar and remove or replace the watch strap from the watch lugs.
- **O-Head:** Use the pointed end to manipulate smaller spring bars or to assist in unlinking certain types of bracelets.

5. MAINTENANCE

Proper maintenance will extend the life of your JOREST Watch Link Removal Kit:

- **Cleaning:** After each use, wipe down all tools with the provided cleaning cloth to remove any dust, oils, or debris.
- **Storage:** Store all components in their original packaging or a suitable storage case to prevent loss or damage. Keep them in a dry place away from direct sunlight and moisture.
- **Needle Replacement:** The punch needles are consumable items. Replace them when they become bent, dull, or broken to ensure optimal performance and prevent damage to your watch.

6. TROUBLESHOOTING

If you encounter issues while using the kit, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Pin is difficult to remove.	Incorrect alignment; pin is stuck; wrong punch size.	Ensure the punch needle/pin is perfectly aligned with the watch pin. Verify the direction of the arrow on the watch link. Try a slightly smaller punch pin. Apply more force with the hammer if using Method 2.
Punch needle bends or breaks.	Misalignment; excessive force; worn-out needle.	Re-align the tool/pin. Use controlled force. Replace the punch needle with a new one from the spare set.
Watch bracelet gets scratched.	Tool slipping; improper handling.	Ensure the watch bracelet is securely held in place. Use the cleaning cloth or a soft material to protect the watch surface. Exercise caution and precision.
Pin does not go back in easily.	Misalignment; debris in hole.	Ensure the pin is inserted straight and aligned with the hole. Check for any debris in the pin hole and clear it if necessary.

7. SPECIFICATIONS

Attribute	Detail
Manufacturer	JOREST
Part Number	AJJOER0801ORDJPR2
Item Weight	4.2 ounces

Attribute	Detail
Package Dimensions	8.78 x 4.65 x 1.06 inches
Country of Origin	China
Color	Orange
Power Source	Hand Powered
Included Components	Watch link remover
Batteries Required?	No
Date First Available	December 15, 2023

8. WARRANTY AND SUPPORT

JOREST stands behind the quality of its products. For any questions, concerns, or warranty claims regarding your Watch Link Removal Kit, please contact JOREST customer support. Refer to the contact information provided with your product packaging or visit the official JOREST website for assistance.

We hope this manual helps you effectively use your JOREST Watch Link Removal Kit. Enjoy the convenience of adjusting your watch bracelets at home!

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQC7D9DV>

More documents and user manuals: <https://manuals.plus/>