Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- GROWNSY /
- GROWNSY LS-BE916 Compact Electric Steam Baby Bottle Sterilizer and Dryer User Manual

GROWNSY LS-BE916

GROWNSY LS-BE916 Compact Electric Steam Baby Bottle Sterilizer and Dryer User Manual

Model: LS-BE916

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your GROWNSY LS-BE916 Compact Electric Steam Baby Bottle Sterilizer and Dryer. Please read this manual thoroughly before first use and retain it for future reference.

PRODUCT OVERVIEW

The GROWNSY LS-BE916 is designed to sterilize and dry baby bottles, pacifiers, pump parts, and other baby feeding essentials using natural steam and efficient drying technology. Its compact design offers convenience and space-saving benefits.

Key Features:

- Compact design for efficient use of space.
- 99.99% steam sterilization.
- Integrated drying function to prevent mold growth.
- Faster drying cycle compared to standard models.
- Versatile capacity for various bottle brands, pacifiers, and pump parts.
- Multiple functional modes: Sterilize & Dry, Sterilize Only, Dry Only, and Storage System.
- Built-in filter to prevent secondary contamination from airborne particles.
- Constructed with heat-resistant die-cast aluminum for durability and easy cleaning.
- Equipped with auto-off protection for low water levels.
- BPA-free materials ensure safety.

Components:

The sterilizer and dryer consists of several parts designed for easy assembly and use.



Image 1: Fully assembled GROWNSY LS-BE916 Bottle Sterilizer and Dryer. This image displays the base unit, the main sterilization chamber with bottles, and the upper tray with pacifiers, all covered by a transparent lid.

- Base Unit: Contains the heating plate and control panel.
- Lower Basket: For larger items like baby bottles.
- Upper Basket: For smaller items such as pacifiers, nipples, and pump parts.
- Lid: Covers the baskets during sterilization and drying.
- Measuring Cup: For adding the correct amount of water.
- Tongs: For safely handling hot sterilized items.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.

- 2. Clean Before First Use: Wash all removable parts (baskets, lid) with warm soapy water, rinse thoroughly, and dry. Wipe the base unit with a damp cloth.
- 3. **Assemble:** Place the lower basket onto the base unit, then the upper basket on top of the lower basket. Finally, place the lid securely on the upper basket.
- 4. **Position:** Place the unit on a flat, stable, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.



Image 2: The sterilizer demonstrating its maximum capacity, showing how different items like bottles, pacifiers, and pump parts can be arranged in the upper and lower baskets. The image also illustrates the three possible configurations: using only the upper bin for small items, only the lower bin for bottles, or both bins together.

OPERATING INSTRUCTIONS

Before operating, ensure all items to be sterilized are thoroughly cleaned of milk residue or food particles. This unit is designed for sterilization and drying, not cleaning.

Step-by-Step Usage:

1. **Add Water:** Pour 70-80ml of distilled water into the heating plate of the base unit using the provided measuring cup. Do not overfill.

2. Load Items:

- Place bottles upside down in the lower basket.
- Arrange pacifiers, nipples, and pump parts in the upper basket.
- Ensure items are not tightly packed to allow steam circulation.
- 3. Assemble: Place the baskets and lid onto the base unit.
- 4. Power On: Plug the unit into a power outlet. The power indicator light will illuminate.
- 5. **Select Mode:** Use the control panel buttons to select your desired function.



Image 3: Close-up of the GROWNSY LS-BE916 control panel, showing the power button and icons for Sterilizer, Dryer, Auto (Sterilize & Dry), Fast Auto, and 24H Storage functions. A hand is shown pressing the power button.

- Sterilize & Dry (Auto): This mode sterilizes items with steam and then automatically proceeds to a
 drying cycle. This is the recommended mode for most uses.
- Sterilize Only: This mode performs steam sterilization without drying.
- Dry Only: This mode only dries items. Useful for items that have already been sterilized or cleaned.
- **Storage System:** After a Sterilize & Dry cycle, the unit can maintain a sterile environment for up to 24 hours by periodically running a short drying cycle.
- 6. **Start Cycle:** Press the Start button to begin the selected cycle. The unit will automatically shut off when the cycle is complete.
- 7. **Cool Down & Remove:** Allow the unit to cool for a few minutes after the cycle finishes. Use the provided tongs to carefully remove the sterilized and dried items. Be cautious of residual steam and hot surfaces.

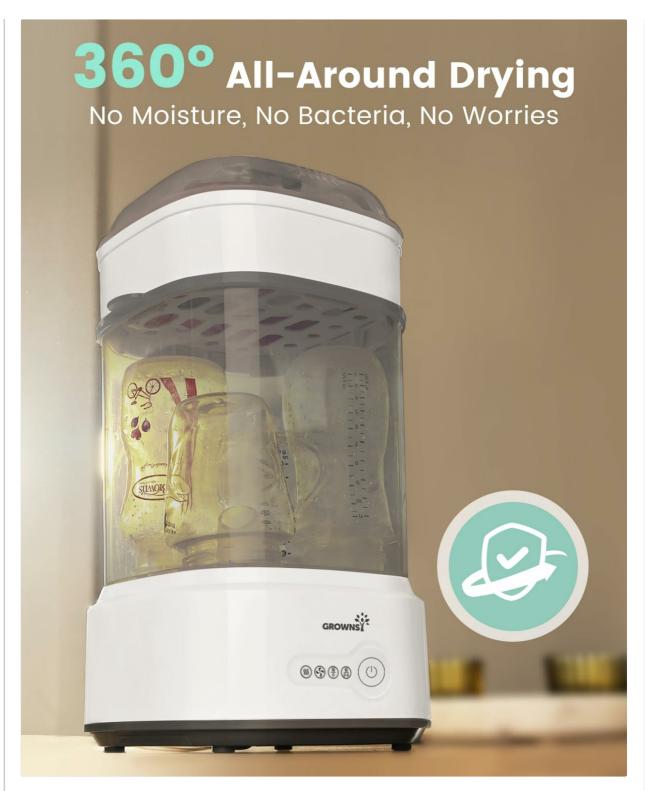


Image 4: The GROWNSY LS-BE916 in operation, illustrating the 360-degree drying process inside the chamber, ensuring all surfaces are thoroughly dried to prevent moisture and bacteria growth.



Image 5: The GROWNSY LS-BE916 actively sterilizing with steam, highlighting its efficiency in eliminating 99.99% of germs. The image also mentions a 30% faster sterilization process.

MAINTENANCE

Regular cleaning and descaling are essential to maintain the performance and longevity of your sterilizer and dryer.

Daily Cleaning:

- Always unplug the unit and allow it to cool completely before cleaning.
- Wash the baskets, lid, and tongs with warm soapy water and rinse thoroughly.
- Wipe the heating plate and exterior of the base unit with a damp cloth. Do not immerse the base unit in water.

• Ensure all parts are dry before reassembling or storing.

Descaling (Monthly or as needed):

Mineral deposits (limescale) may build up on the heating plate, especially in areas with hard water. This can affect performance.

- 1. Unplug the unit and ensure it is cool.
- 2. Mix 50ml of white vinegar with 100ml of water.
- 3. Pour the mixture onto the heating plate.
- 4. Allow it to soak for 30 minutes to 1 hour, or until the limescale loosens. For stubborn deposits, gently scrub with a soft brush or sponge.
- 5. Pour out the vinegar solution and rinse the heating plate thoroughly with clean water.
- 6. Wipe dry with a clean cloth.

Note: Do not use abrasive cleaners, scouring pads, or solvents, as these can damage the unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet issue; unit malfunction.	Ensure the unit is securely plugged into a working outlet. Check the power cord for damage.
Sterilization cycle not effective.	Insufficient water; items not cleaned prior to sterilization; items too tightly packed.	Add the correct amount of water (70-80ml). Pre-clean all items. Arrange items to allow steam circulation.
Items are still wet after drying cycle.	Overloaded unit; insufficient drying time; filter clogged.	Reduce the number of items. Select a longer drying cycle if available. Clean or replace the air filter (if applicable, refer to product diagram for location).
White/brown residue on heating plate.	Limescale buildup from hard water.	Perform descaling as described in the Maintenance section. Use distilled water to prevent future buildup.
Unpleasant odor during operation.	Residue on items or heating plate; new unit odor.	Ensure all items are thoroughly cleaned. Perform a descaling cycle. The odor from a new unit should dissipate after a few uses.

SPECIFICATIONS

• Model Number: LS-BE916

• Product Dimensions: 8.1 x 7.5 x 14.94 inches

• Item Weight: 3.78 pounds

• Power Source: Electric (Batteries not required)

• Functions: Sterilize, Dry, Sterilize & Dry, Storage

• Material: BPA-free components, Heat-resistant die-cast aluminum heating plate.

• Safety Features: Auto-off protection for low water levels.



Image 6: The GROWNSY LS-BE916 unit displayed with prominent "BPA FREE" labeling and various safety certifications (ASTM International, CPSC, CPSIA, California Proposition 65 Compliant, FC), indicating adherence to safety standards.

WARRANTY AND SUPPORT

Warranty Information:

The GROWNSY LS-BE916 Bottle Sterilizer and Dryer comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

Customer Support:

For any questions, concerns, or warranty claims, please contact GROWNSY customer support. You can typically find contact information on the product packaging, the official GROWNSY website, or through your retailer's customer service portal.

Please have your model number (LS-BE916) and proof of purchase ready when contacting support.

© 2023 GROWNSY. All rights reserved.

Related Documents - LS-BE916




GROWNSY Baby Bottle Sterilizer & Dryer Instruction Manual (LS-BE916)

Comprehensive instruction manual for the GROWNSY Baby Bottle Sterilizer & Dryer, Model LS-BE916. Learn about features, operation, cleaning, maintenance, and troubleshooting.




Grownsy Bottle Sterilizer Instruction Manual


Comprehensive instruction manual for the Grownsy Bottle Sterilizer (Model LS-B321), covering setup, usage, cleaning, descaling, and customer support.

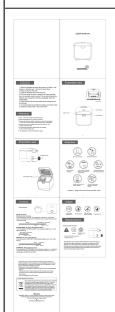

GROWNSY UV Sterilizer Box User Manual - Instructions and Specifications

Comprehensive user manual for the GROWNSY UV Sterilizer Box (Models S5, S5D), detailing product use, instructions, control functions, cleaning, maintenance, safety precautions, and warranty information.

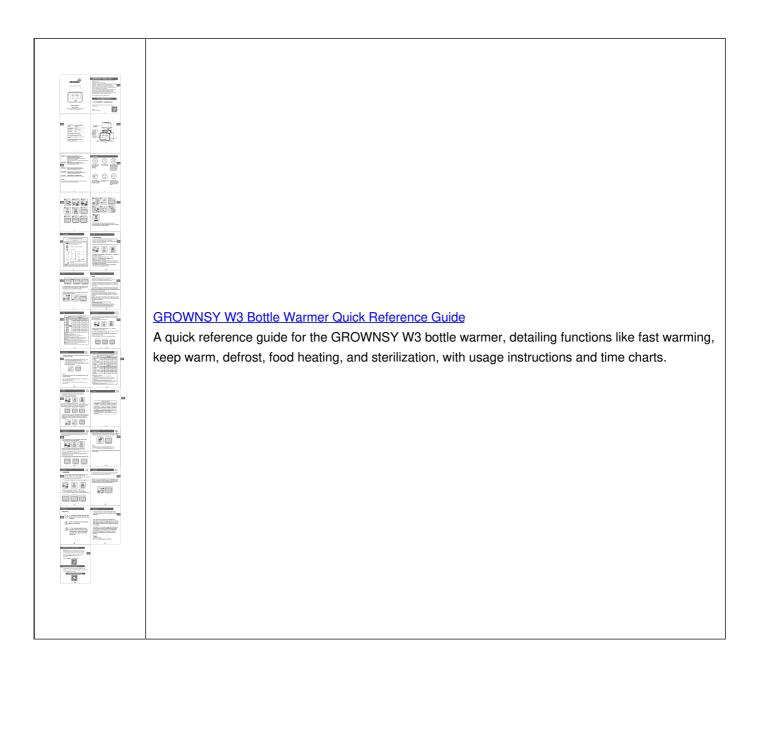

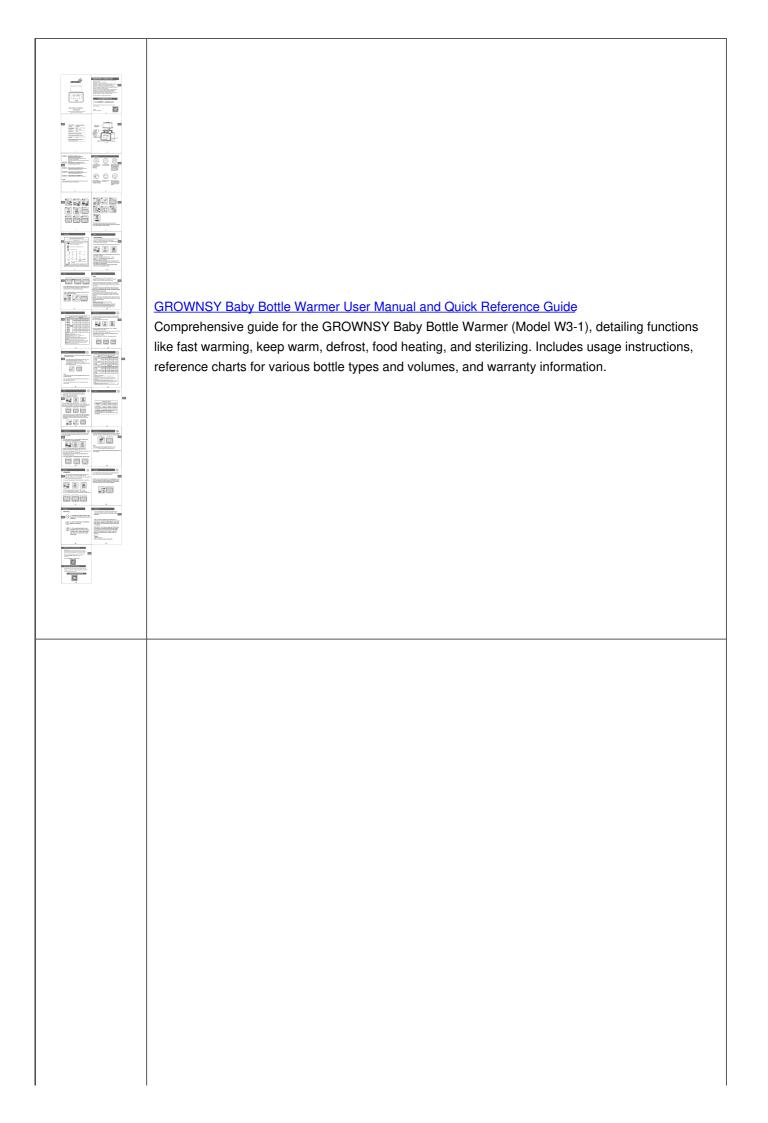



GROWNSY SP01A UV Sanitizer User Manual

User manual for the GROWNSY SP01A UV sanitizer, detailing its features, operation, safety guidelines, and warranty information. Learn how to effectively sterilize household items with UV-C light.