

MLily NL200

Instruction Manual

Replacement Remote Control for MLily Adjustable Bed Base (for MLily NL200)

IMPORTANT COMPATIBILITY INFORMATION

This replacement remote control is specifically designed for certain MLily adjustable bed base models. To ensure proper functionality, please verify the following:

- This remote **only fits** for the control box made by Richmat, model number HJC9.
- It is compatible with the Richmat HJC25Z-0-0 NLP200 127780C250059 Control Box.
- Your existing remote control must be **identical** to this one in appearance and button layout for successful pairing.
- This remote is **not universal**. If you are unsure about compatibility, it is recommended to send details of your control box (under the bed) for verification before ordering.

Note: Batteries are not included. This remote requires 2 AAA batteries.

SETUP AND PAIRING INSTRUCTIONS

Follow these steps carefully to pair your new remote control with your adjustable bed base.

1. Install Batteries

Open the battery compartment on the back of the remote control. Insert 2 AAA batteries, ensuring correct polarity (+/-). Close the battery compartment securely.




Image: Rear view of the remote control with the battery cover open, illustrating where to insert the two AAA batteries.

2. Prepare the Bed Base

1. **Unplug and disconnect the power** from the adjustable bed base.
2. Wait for **5 seconds**.
3. Plug the power cord back into the outlet.

3. Initiate Pairing on Control Box

Locate the control box under the bed. This box often contains a battery backup. Double-click the "reset" button on the control box twice. This button may also be labeled "Learn" or "Reset Coding".

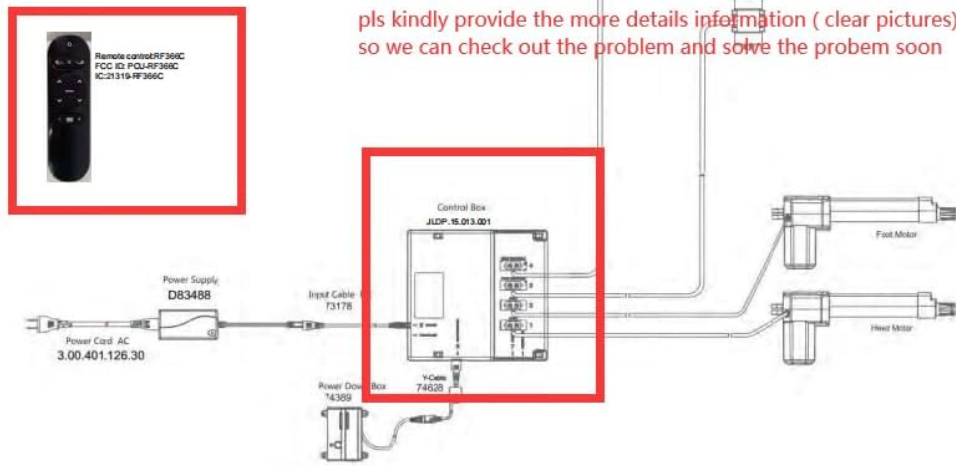

pls kindly provide the more details information (clear pictures) to us , so we can check out the problem and solve the problem soon

2. Function Picture

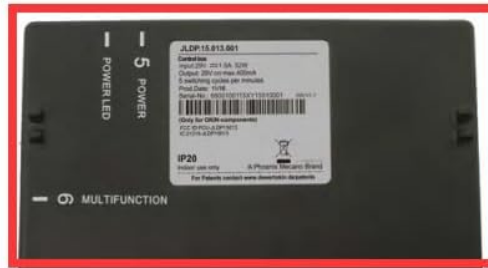


Image: A diagram illustrating the connection points of the bed base control box, along with a magnified view of the control box's identification label.

Important: Pairings must be completed within 15 seconds of initiating the reset on the control box. If 15 seconds pass, you must unplug the power again and restart from step 2. Ensure to pair when the light on the control box is on, as it will go out if not paired within 15 seconds.

4. Pair the Remote Control

1. On the remote control, simultaneously press and hold the "head up" button and the "foot up" button for **10 seconds**.
2. While still holding these two buttons, press and release the "Learn" or "Reset Coding" button on the side of the control box under the bed. **Do not press and hold this button.**
3. Once you hear beeps, this indicates that the remote control has successfully synced with the bed base.



Pairing Method press and hold Head up and Foot Up buttons together.

While holding the two buttons on the remote ,press the Reset Coding button indicated on the control box (it may be labeled something else but it works the same)

Image: The remote control with the "head up" and "foot up" buttons outlined in red, illustrating the buttons to press and hold during the pairing process.

OPERATING THE REMOTE CONTROL

Once paired, your remote control allows you to adjust your MLily adjustable bed base. The remote features intuitive buttons for various positions.



Image: A clear view of the remote control's front face, displaying all functional buttons for bed adjustment.

Button Icon	Function	Description
↶ (Head Up)	Head Section Up	Raises the head section of the bed.
↷ (Head Down)	Head Section Down	Lowers the head section of the bed.
↵ (Foot Up)	Foot Section Up	Raises the foot section of the bed.
↽ (Foot Down)	Foot Section Down	Lowers the foot section of the bed.
FLAT	Flat Position	Returns the bed to a completely flat position.
M	Memory Position	Activates a pre-set memory position (if configured on your bed base).

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always use 2 new AAA batteries.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote not controlling the bed.	Remote is not paired with the bed base.	Follow the "Setup and Pairing Instructions" carefully to re-pair the remote.
Bed only responds intermittently.	Weak batteries or interference.	Replace batteries. Ensure no strong electronic devices are causing interference near the bed base.
Remote does not look like the original.	Incorrect remote model purchased.	Verify your original remote and control box model number against the compatibility information. This remote is specifically for Richmat HJC9 control boxes and MLily NL200.

SPECIFICATIONS

- **Model:** For MLily NL200 Adjustable Bed Base
- **Compatible Control Box:** Richmat HJC9, Richmat HJC25Z-0-0 NLP200 127780C250059
- **Power Source:** 2 x AAA Batteries (not included)
- **Color:** White
- **Max Number of Supported Devices:** 1
- **Manufacturer:** SZHKHXD

WARRANTY AND SUPPORT

For any issues not covered in this manual or for warranty inquiries, please contact the seller or manufacturer directly.

- **Manufacturer:** SZHKHXD
- Refer to your purchase documentation for specific warranty terms and contact information.