

[Manuals.plus](#) /

› [Tastyle](#) /

› Tastyle Single Serve Coffee Maker Instruction Manual

Tastyle b9ec3698-2fb6-4d28-93b8-7f4d6fed3f74

Tastyle Single Serve Coffee Maker Instruction Manual

Model: b9ec3698-2fb6-4d28-93b8-7f4d6fed3f74

INTRODUCTION

Thank you for choosing the Tastyle Single Serve Coffee Maker. This versatile appliance is designed to brew both hot and iced coffee from K-pods, ground coffee, or tea. With its user-friendly interface and multiple brew size options, you can enjoy a personalized coffee experience. Please read this manual thoroughly before first use to ensure proper operation and maintenance.



Image: The Tastyle Single Serve Coffee Maker in black, actively brewing hot coffee into a blue mug. Various coffee accessories, including K-pods, ground coffee, and an iced coffee tumbler, are displayed around the machine, highlighting its versatility.

SETUP

Initial Cleaning

Before brewing your first cup, it is recommended to run a cycle with water only. This cleanses the coffee maker and enhances the flavor extraction for subsequent brews.

1. Fill the water reservoir with fresh water.
2. Ensure no K-pod or ground coffee filter is in the brewing chamber.
3. Close the lid and place an empty mug on the drip tray.
4. Press the "Hot Brew" button to run a full water cycle.

5. Discard the hot water.

Water Reservoir

The coffee maker features a removable 40 oz water tank, allowing you to brew up to 4 cups without frequent refilling. Ensure correct installation of the water tank to prevent leakage.

Removable 40oz. Water Reservoir

Allows you to brew up to 4 cups
before refills



Multiple Brew Sizes:
6/8/10/12/16/24 oz

For OVER ICE brew
style, the brew sizes
are between 6–12 oz.



Image: The Tastyle Single Serve Coffee Maker with its transparent 40oz removable water reservoir detached from the side, illustrating its capacity and ease of refilling.



Image: A hand refilling the removable water reservoir of the coffee maker under a kitchen faucet, demonstrating the ease of refilling.

Brewing Options (K-Cup, Ground Coffee, Tea)

Your coffee maker is compatible with K-pods, ground coffee, and tea. It comes with a capsule holder and a reusable basket filter.

- **For K-pods:** Insert the K-pod into the capsule holder.
- **For Ground Coffee/Tea:** Use the reusable basket filter. Place your desired amount of ground coffee or tea leaves into the filter.

All accessories are dishwasher safe for easy maintenance.

Compatible with K Cup Grounds & Tea

The Parts are Removable and Dishwasher Safe



Image: A close-up of the coffee maker's brewing chamber, showing both the K-pod holder and the reusable basket filter for ground coffee or tea, emphasizing the machine's versatility.

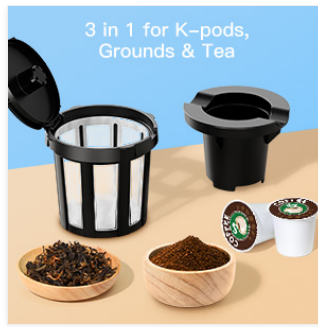


Image: A reusable ground coffee filter is shown alongside bowls of coffee grounds and tea leaves, demonstrating the different types of consumables the machine can use.

Removable Drip Tray

The removable drip tray minimizes splashing and can accommodate travel mugs up to 7.3 inches tall (without the drip tray). For smaller cups, attach the drip tray and place the drip tray plate in reverse to reduce splashing.

Removable Drip Tray & Travel Mugs Friendly



Image: The coffee maker is shown with a tall travel mug, illustrating how the removable drip tray allows for larger cups. Insets demonstrate how to adjust the drip tray for smaller mugs to prevent splashing.



Image: A close-up view of the removable drip tray, highlighting its two-sided design which can be flipped to accommodate different mug heights and minimize splashing.

OPERATING INSTRUCTIONS

Brewing Hot Coffee

1. Ensure the water reservoir is filled to the desired level.
2. Insert your K-pod or reusable filter with ground coffee/tea into the brewing chamber.
3. Close the lid securely.
4. Place your mug on the drip tray.
5. Select your desired brew size (6, 8, 10, 12, 18, or 24 oz) using the "OZ" button.
6. Press the "Hot Brew" button to start brewing.

3 Brew Styles for Hot or Iced Coffee



REGULAR



BOLD



OVER ICE



Image: The coffee maker is shown with various coffee drinks, illustrating the three available brew styles: Regular, Bold, and Over Ice.



Image: An array of different cup sizes (6oz, 8oz, 10oz, 12oz, 18oz, 24oz) are displayed, indicating the machine's customizable brew volume options.

Brewing Iced Coffee

For a refreshing iced coffee, follow these steps:

- 1. Fill your mug with the recommended amount of ice (see table below).
- 2. Insert your K-pod or reusable filter with ground coffee/tea.
- 3. Close the lid securely.
- 4. Select your desired brew size (6-12 oz for iced coffee) using the "OZ" button.
- 5. Press the "OVER ICE" button to start brewing.

Recommended Ratios for Delicious Iced Coffee:

Ice	Water	K-pod
6oz	6oz	1 count
Ice	Water	Grounds
6oz	6oz	0.4oz (12g)
8oz	8oz	0.5oz (15g)
10oz	10oz	0.7oz (19g)
12oz	12oz	0.8oz (22g)
14oz	14oz	0.9oz (26g)
16oz	16oz	1.0oz (30g)

P.S. The suggested ice to water ratio is 1:1.



Image: The coffee maker is shown brewing iced coffee into a glass filled with ice, demonstrating the "OVER ICE" function.



Image: A finger pressing the "OVER ICE" button on the coffee maker's control panel, indicating the action to start the iced coffee brewing process.

Official Product Video: How to make iced coffee & descale the machine?

Your browser does not support the video tag.

Video: This official video from Tastyle demonstrates the process of making iced coffee and how to descale the machine for optimal performance.

MAINTENANCE

Descaling

The descale indicator on this coffee maker signals when cleaning is required. Regular descaling helps to prolong the service life of the unit.

- When the descale light illuminates (red), it's a reminder to descale the unit.
- Pour 14 oz of descaling solution into the water tank. (You can mix 20g/0.7 oz of citric acid with 14 oz of water for a homemade solution).
- Press the "OVER ICE" button for 3 seconds to initiate the descaling procedure.
- If the descale light appears during first use, press the "OVER ICE" button for 3 seconds to reset it.

Descaling Reminder & Cleaning Function for Longer Service Life



DESCALE ►►

Descale light illuminates in red when descaling is needed.



◀◀ OVER ICE

Press the **OVER ICE** button for 3s to start the descaling cycle.



Image: The coffee maker's control panel highlighting the "DESCALE" indicator light and the "OVER ICE" button used to initiate the descaling cycle.

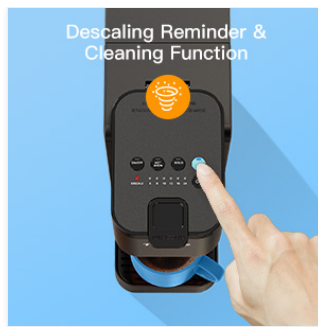


Image: A finger pressing the "OVER ICE" button on the coffee maker's control panel, indicating the action to start the descaling process.

Cleaning Components

The capsule holder and reusable basket filter are dishwasher safe for easy cleaning.

TROUBLESHOOTING

Here are some common issues and their solutions:

- **All indicators flashing rapidly for 3 seconds, and the coffee maker cannot work after pressing any button:**
 - The water tank is empty.
 - The top cover does not close completely.
- **No coffee or only a small amount of coffee dispensed:**
 - Empty water tank.
 - Excessive buildup of mineral deposits (descale needed).
 - Clogged ground coffee filter.
 - Use of an unsuitable capsule.
 - Clogged needle.
 - Malfunctioning machine.
- **Iced and hot coffee maker stopping during the coffee-making process:**
 - The amount of water in the reservoir is less than the selected cup size.
 - The top cover is open.
- **Coffee overflow from the brew holder:**
 - Too much coffee grounds in the basket filter.
 - Ground coffee too fine.
 - Clogged ground filter.
 - Expired or clumped capsule.
 - Upper/bottom of the capsule not pierced by the needle.
 - Unsuitability of the capsule.

SPECIFICATIONS

Feature	Detail
Brand	Tastyle

Feature	Detail
Model Number	b9ec3698-2fb6-4d28-93b8-7f4d6fed3f74
Color	Black
Product Dimensions	4.7"D x 10.3"W x 12"H
Item Weight	3.5 pounds
Voltage	120 Volts
Water Reservoir Capacity	40 oz
Brew Sizes	6, 8, 10, 12, 18, 24 oz
Included Components	Capsule Holder, Ground Filter

WARRANTY AND SUPPORT

This Tastyle Single Serve Coffee Maker comes with a **1-Year Warranty**.
For any support or inquiries, please contact us:

- **Phone:** 1-972-467-4438
- **Email:** support@mytastyle.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

The ounce selected isn't the amount brewed on my Tastyle Single Serve Coffee Maker. What do I need to do?

If your Tastyle Single Serve Coffee Maker is dispensing less coffee than the selected ounce setting (6, 8, 10, 12, 18, or 24 oz) even after descaling, please check the following potential causes based...

[Read full answer](#)

I just descaled my Tastyle Single Serve Coffee Maker, but now it will not brew with a new pod. I have owned the maker for about three months; what should I do?

If your Tastyle Single Serve Coffee Maker is failing to brew after a descaling cycle, it is possible the machine is still in a specific mode or has a physical blockage. Please try the...

[Read full answer](#)

Why am I getting a lot of coffee grounds in my cup when using K-cup pods with my Tastyle Single Serve Coffee Maker?

If you are finding coffee grounds in your cup while using K-cup pods with your Tastyle Single Serve Coffee Maker, it is typically caused by issues with the pod's seal or the machine's piercing...

[Read full answer](#)

I noticed Hot Brew and Over Ice options on my Tastyle Single Serve Coffee Maker, but what is the BOLD setting?

On the Tastyle Single Serve Coffee Maker, the BOLD setting is one of the three available brew styles (alongside Regular and Over Ice). It is designed to provide a more intense and rich flavor...

[Read full answer](#)