

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [RL LIVE YOUR LIGHT](#) /
- › [Reality Leuchten R57791102 Maxima LED Table Lamp Instruction Manual](#)

RL LIVE YOUR LIGHT R57791102

Reality Leuchten Maxima LED Table Lamp

Model: R57791102

INTRODUCTION

Thank you for choosing the Reality Leuchten Maxima LED Table Lamp. This versatile and portable lamp is designed to provide flexible lighting solutions for various environments. Featuring a magnetic connection, it can be easily attached to the included stand, wall mount, or clamping device, offering multiple usage options. This manual provides essential information for the safe and efficient operation of your new lamp.

SAFETY INSTRUCTIONS

- Read all instructions carefully before use and retain for future reference.
- Do not expose the lamp to water or excessive moisture.
- Do not attempt to disassemble or modify the lamp. This product contains an integrated LED light source that is not user-replaceable.
- Use only the provided USB-C cable for charging.
- Keep out of reach of children and pets.
- Ensure the lamp is placed on a stable surface when using the stand, or securely mounted when using the wall mount or clamp.
- Avoid direct eye exposure to the light source.

PACKAGE CONTENTS

Please check the package for the following items:

- Maxima LED Lamp (1 unit)
- Table Stand (1 unit)
- Wall Mount (1 unit)
- Clamping Device (1 unit)
- USB-C Charging Cable (1 unit)



Image: The Maxima LED Lamp shown with its complete set of accessories, including the main lamp unit, the circular table stand, the flat wall mount, and the spring-loaded clamping device.

SETUP

Charging the Lamp

Before first use, fully charge the lamp's battery. Connect the included USB-C cable to the charging port on the lamp and the other end to a compatible USB power adapter (not included). Charging takes approximately 3 hours. A full charge provides

approximately 3 hours of light duration.



Image: The black USB-C charging cable included with the lamp, used for recharging the internal battery.

Attaching the Lamp to Accessories

The Maxima lamp features a magnetic base for easy attachment to its various accessories:

1. **Table Stand:** Simply place the lamp's magnetic base onto the designated magnetic point on the table stand. Ensure it is stable.
2. **Wall Mount:** Secure the wall mount to a clean, flat surface using appropriate fasteners (not included). Once mounted, attach the lamp's magnetic base to the magnetic point on the wall mount.
3. **Clamping Device:** Open the clamp and secure it to a suitable edge (e.g., shelf, desk). Then, attach the lamp's magnetic base to the magnetic point on the clamping device.



Image: The Maxima LED Lamp positioned on a wooden desk, utilizing its included table stand for stable placement.



Image: The Maxima LED Lamp clamped onto a wooden shelf, demonstrating its use with the versatile clamping device.

OPERATING INSTRUCTIONS

Power On/Off and Brightness Adjustment

The Maxima lamp features a touch sensor for control:

- **To Turn On:** Lightly touch the sensor area on the lamp.
- **To Adjust Brightness:** Continue to touch the sensor area to cycle through three different brightness levels.
- **To Turn Off:** After cycling through all brightness levels, the next touch will turn the lamp off.



Image: The Maxima LED Lamp displayed alongside graphical icons representing its key features: battery power, USB-C charging capability, and touch-sensitive operation.

MAINTENANCE

To ensure the longevity and optimal performance of your Maxima LED Lamp:

- **Cleaning:** Disconnect the lamp from any power source before cleaning. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish or internal components.
- **Storage:** When not in use for extended periods, store the lamp in a cool, dry place.
- **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. Recharge the lamp regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted.	Charge the lamp using the USB-C cable.

Problem	Possible Cause	Solution
Lamp does not charge.	Faulty USB-C cable or power adapter.	Try a different USB-C cable or power adapter. Ensure connections are secure.
Light is dim or flickers.	Low battery.	Recharge the lamp.
Touch control is unresponsive.	Sensor area is dirty or obstructed.	Clean the sensor area with a soft, dry cloth.

SPECIFICATIONS

Feature	Detail
Model Number	R57791102
Brand	RL LIVE YOUR LIGHT / Reality Leuchten
Light Source	Integrated LED
Power Consumption	3 W
Luminous Flux	Max. 250 Lumens
Color Temperature	3000 K (Warm White)
Lifespan	Approx. 30,000 hours
Battery Charge Time	Approx. 3 hours
Battery Light Duration	Approx. 3 hours (on full charge)
Material	Metal
Color	Matte Black
Dimensions (Lamp on Stand)	20 x 13.2 x 41 cm (L x W x H)
Weight	Approx. 689 g
Energy Efficiency Class	F



Image: A diagram illustrating the key dimensions of the Maxima LED Lamp when assembled with its table stand, showing height and base diameter.

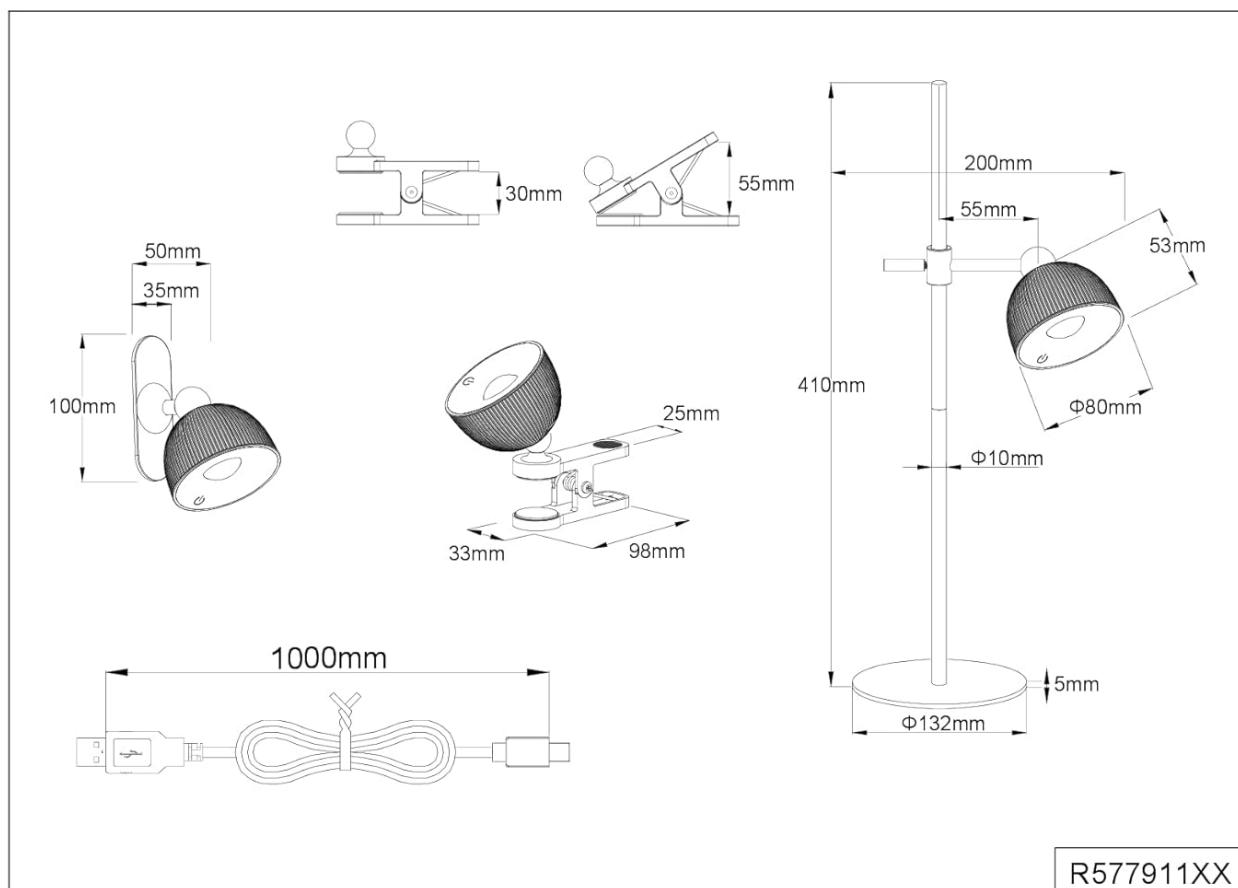


Image: A comprehensive technical drawing providing detailed measurements for the Maxima LED Lamp, including its main body, stand,

wall mount, and clamping device, along with the USB cable length.

DISPOSAL AND RECYCLING

This product contains electronic components and an integrated battery. Do not dispose of it with general household waste. Please follow local regulations for the recycling of electronic products and batteries. For information on how to clean and dispose of broken or damaged light sources, please consult local waste management guidelines.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2024 RL LIVE YOUR LIGHT. All rights reserved.