

Airpher AW-2

Airpher Cordless Vacuum Cleaner User Manual

Model: AW-2

1. INTRODUCTION

Thank you for purchasing the Airpher Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before use and keep it for future reference.

The Airpher Cordless Vacuum Cleaner is designed for powerful and convenient cleaning, featuring a 48KPa strong suction, a long-lasting detachable battery, and a versatile design for various cleaning needs.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, read and follow all instructions carefully.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- This appliance is for household use only.

3. PACKAGE CONTENTS

Carefully unpack all components and check against the list below. If any items are missing or damaged, please contact customer support.



Image: The Airpher Cordless Vacuum Cleaner with all its components and accessories laid out.

お手入れ簡単



① ワンタッチでゴミ捨て



② フィルターを取り外します



③ フィルターを水で洗浄します



④ ぜひ乾燥後で使いください

Image: A detailed diagram showing each component included in the package, such as the main body, dust cup, roller brush, battery, various nozzles, filters, and charging adapter.

Component	Description
Main Body	Contains motor, dust cup, and control panel.
Telescopic Pipe	Adjustable extension for reaching different areas.
Roller Brush Head	Main cleaning head with LED lights for floors and carpets.
Detachable Battery	Rechargeable Lithium-ion battery.
Crevice Nozzle	For narrow gaps and corners.
Multi-purpose Brush Nozzle	For upholstery, shelves, and car interiors.
HEPA Filters (2 sets)	High-efficiency particulate air filters.
Metal Filter	Pre-filter for larger particles.
Cleaning Tool	For cleaning filters and brush head.
Wall-mount Bracket	For convenient storage.
Power Adapter	For charging the battery.

4. SETUP

4.1 Assembly

1. Insert the telescopic pipe into the main body until it clicks into place.
2. Attach the roller brush head to the other end of the telescopic pipe, ensuring it locks securely.
3. Ensure the dust cup is properly installed on the main body.

4.2 Charging the Battery

The Airpher vacuum cleaner features a detachable battery for flexible charging options.



Image: Close-up of the detachable battery pack and illustrations of charging methods, including charging the battery separately or while attached to the main unit.

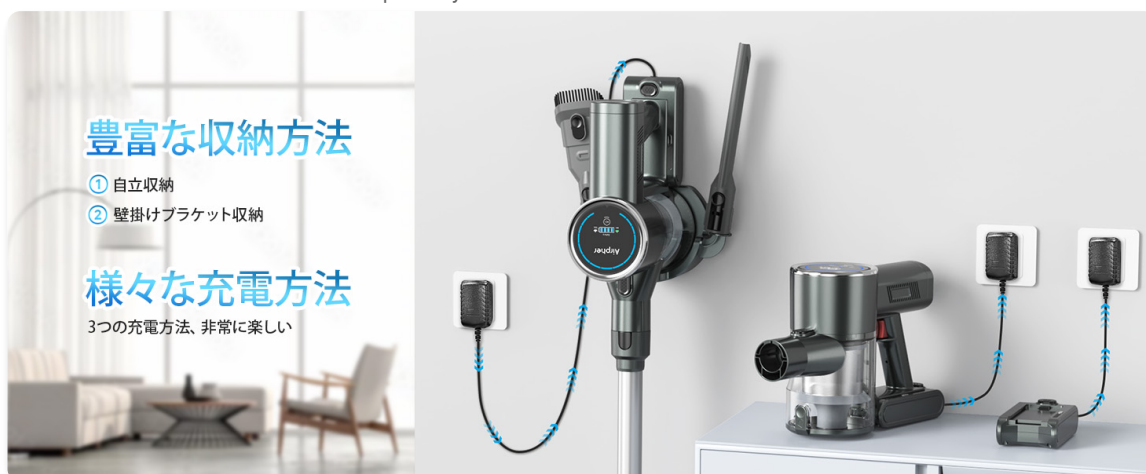


Image: Illustrates three convenient charging methods: charging the battery directly, charging the main unit with the battery attached, and charging via the wall-mount bracket.

- Connect the power adapter to a power outlet and to the charging port on the battery (either attached to the vacuum or detached).
- The LED display will show the charging status. A full charge takes approximately 4.5 hours.
- For optimal performance, fully charge the battery before first use.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Suction Modes



Image: The vacuum's LED display indicating battery level and current suction mode (Min/Max).



Image: A graphic highlighting the large touch-sensitive LED display, showing battery remaining, charging status, and suction level adjustment.

- Press the power button once to turn on the vacuum cleaner. It will start in the default suction mode.
- Use the touch controls on the LED display to switch between suction modes (e.g., Min/Max). The display will show the current battery level and selected mode.
- Press the power button again to turn off the vacuum cleaner.

5.2 Using Different Attachments

The Airpher vacuum comes with various attachments for versatile cleaning.



Image: The Airpher vacuum cleaner shown with its main body, telescopic pipe, roller brush head, and various attachments, demonstrating different assembly configurations for diverse cleaning tasks.

6 in 1 多機能コードレス掃除機

隙間ノズルや多目的なノズルを差し込んで、ソファやコーナー、段階、キーボードなどの隙間を掃除できます。



Image: A visual representation of the vacuum's 6-in-1 functionality, showing how different nozzles can be attached for cleaning sofas, corners, stairs, keyboards, and other hard-to-reach areas.

- **Roller Brush Head:** Ideal for general floor cleaning, including hard floors and carpets. The built-in LED lights illuminate dust in dark areas.
- **Crevice Nozzle:** Attach directly to the main body or the telescopic pipe for cleaning tight spaces like sofa crevices, car seats, and window sills.
- **Multi-purpose Brush Nozzle:** Use for dusting delicate surfaces, cleaning upholstery, or removing pet hair from fabrics.

5.3 Adjustable Pipe

1L 大容量 & 操作简单

お手を汚さずに簡単ゴミ捨て



Image: The vacuum cleaner with its telescopic pipe extended, demonstrating its ability to reach high areas like blinds or ceilings.

パイプ部分自由に伸ばせる！

金属製の伸縮パイプ部分に55-73cm自由で伸縮可能で、ユーザーの身長に応じて長さを簡単に調整できます。



指挟み防止設計、
なめらかに使える



ボタン式で、
指挟みやすい



Image: A graphic illustrating the adjustable metal telescopic pipe, which can be extended from 55cm to 73cm, allowing users to customize the length according to their height for comfortable cleaning.

The telescopic pipe can be adjusted to your desired length for comfortable cleaning and reaching high or low areas. Simply press the release button and extend or retract the pipe.

5.4 Self-Standing Feature

自立式な進級式掃除機

壁に穴を開ける必要なし、家をオリジナルのままにする



Image: The Airpher vacuum cleaner standing upright on its own, highlighting its self-standing design and the absence of a need for wall drilling for storage.



進級式自立デザイン！

お部屋の好きな場所でどこでも置き可能！
穴を開ける必要もなしで、とても便利なステック
掃除機コードレスです。

自立可能！

Image: A graphic emphasizing the advanced self-standing design, allowing the vacuum to be placed anywhere in a room without needing to drill holes in walls for storage.

The Airpher vacuum cleaner features a unique self-standing design, allowing it to stand upright on its own without needing to lean against a wall or be placed in a dock. This provides convenient temporary storage during cleaning breaks.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dust Cup



Image: The vacuum's dust cup being emptied into a trash bin with a single touch, demonstrating the hygienic disposal process.



Image: A step-by-step visual guide showing how to empty the dust cup and detach it for cleaning.

- When the dust cup is full, or suction power decreases, it's time to empty it.
- Hold the vacuum over a trash can and press the dust cup release button to open the bottom flap and empty the contents.
- For thorough cleaning, the dust cup can be detached and rinsed with water. Ensure it is completely dry before reattaching.

6.2 Cleaning the Filters

5段階 濾過システム



Image: A diagram illustrating the vacuum's 5-stage filtration system, showing the path of air and how dust is separated and captured by different filters.



Image: A four-step guide demonstrating easy maintenance: one-touch dust disposal, filter removal, washing filters with water, and ensuring they are dry before reuse.

- The vacuum uses a 5-stage filtration system, including a metal filter and HEPA filters.
- Twist and pull to remove the filters from the dust cup.
- Tap off loose dirt or rinse the filters under running water. Do not use hot water or detergents.
- Allow filters to air dry completely for at least 24 hours before reinserting them. Using wet filters can damage the motor.

6.3 Cleaning the Roller Brush Head

- To remove the roller brush, unlock the latch on the side of the brush head.
- Remove any tangled hair or debris from the brush using the provided cleaning tool or scissors.
- Reinsert the roller brush and lock the latch.

7. TROUBLESHOOTING

If you encounter any issues with your Airpher vacuum cleaner, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Charge the battery. Ensure the battery is securely clicked into place.
Low suction power.	Dust cup is full. Filters are clogged. Brush head is blocked.	Empty the dust cup. Clean the filters. Remove any blockages from the brush head.
Roller brush not spinning.	Brush head is jammed by debris.	Turn off the vacuum and remove any hair or debris from the roller brush.
Unusual noise during operation.	Blockage in the pipe or brush head.	Check for and remove any blockages in the telescopic pipe or brush head.
Battery not charging.	Power adapter not connected properly. Faulty adapter or battery.	Ensure the adapter is securely plugged into both the outlet and the battery. If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Airpher
Model Number	AW-2
Suction Power	Up to 48KPa

Feature	Detail
Rated Power	130 W
Battery Type	Lithium-ion
Runtime	Up to 60 minutes (depending on mode)
Charging Time	Approx. 4.5 hours
Dust Cup Capacity	1 Liter
Filtration System	5-stage, including HEPA filter
Dimensions (Product)	44.5 x 34 x 17.5 cm
Package Weight	3.48 kg
Special Features	Self-standing, LED display, LED lights on brush head, telescopic pipe, low noise
Certification	Japanese PSE Certified

9. WARRANTY AND SUPPORT

Airpher provides comprehensive customer support for your product.

Airpher



安心なサポート
商品にご不明な点/使用問題
10:00-20:00 (平日)



30日返金/返品保証
商品性能はご期待に添えない
場合、返金・返品対応可能



2年間品質保証
保証期間以内、何か不具合があ
れば、すぐ対応いたします



会員登録・保証延長
弊社の会員登録すれば、1年
保証延長できます

Image: A graphic detailing Airpher's customer support, 30-day refund/return guarantee, 2-year quality warranty, and

warranty extension program.

- **Quality Guarantee:** The product comes with a 2-year quality guarantee. For initial defects or natural failures under normal use, we offer free exchange or 100% refund.
- **Customer Service:** If you have any questions or issues during use, please contact our support team.
- **Email Support:** support@airpher.jp (24-hour response)
- **Phone Support:** Monday-Friday, 10:00-13:00 and 14:30-19:00 (Japan time)

Please refer to the contact information provided in the product manual or on our official website for the most up-to-date support details.