

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AIKE](#) /

› [AIKE Magnetic Charging Waterproof Automatic Soap Dispenser User Manual](#)

AIKE AK1337

AIKE Magnetic Charging Waterproof Automatic Soap Dispenser User Manual

Model: AK1337

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)
[Warranty & Support](#)

1. PRODUCT OVERVIEW

The AIKE Magnetic Charging Waterproof Automatic Soap Dispenser (Model AK1337) is designed to provide a hygienic and convenient solution for dispensing liquid soap. Featuring a durable stainless steel finish and advanced sensor technology, this dispenser offers touchless operation and adjustable dispensing levels. Its magnetic charging port ensures a high IPX7 waterproof rating, allowing for easy cleaning and long-lasting performance.



Image: The AIKE AK1337 Automatic Soap Dispenser, showcasing its sleek brushed stainless steel body and black dispenser head.



Rechargeable Sensor Pump

High-performance meets timeless elegance, bring years of unparalleled convenience.

Image: A banner highlighting the "Rechargeable Sensor Pump" feature, emphasizing high performance and convenience.


2. SETUP GUIDE

2.1 Initial Charging

Before first use, fully charge the dispenser using the provided magnetic charging cable. Connect the magnetic end to the charging port on the dispenser and the USB end to a 5V USB adapter (not included). Do not use a fast charger. The indicator light will show charging status.

MAGNETIC CHARGING CABLE

Delivers IPX7 waterproof rating, bring outstanding performance even in humid environment. More reliable than other charging methods.

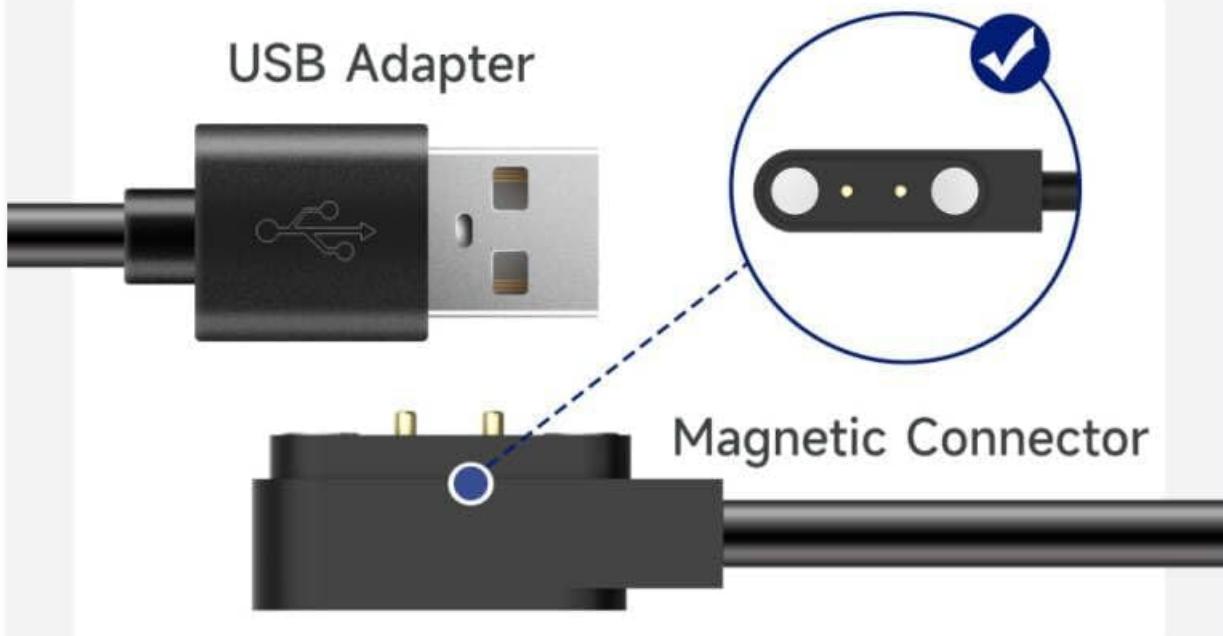

(You will need a 5V USB adapter, that not included in the package)

Image: Diagram illustrating the magnetic charging cable and its USB adapter connection. Note: A 5V USB adapter is required and not included.

2.2 Filling the Dispenser

1. Carefully remove the top section of the dispenser.
2. Pour your preferred liquid soap into the reservoir. The dispenser has a capacity of approximately 14 fl.oz (413.65 ml).
3. Ensure not to overfill.
4. Replace the top section securely.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

To power on the dispenser, press and hold the power button located on the top. Repeat to power off.

3.2 Dispensing Soap

Place your hand directly under the nozzle. The infrared sensor will detect your hand and automatically dispense a measured amount of soap.

3.3 Adjusting Dispensing Levels

The dispenser offers 5 adjustable dispensing levels. Briefly press the power button to cycle through the levels. Each press will change the dispensed volume, allowing you to customize the amount of soap for different tasks, from handwashing to dishwashing.



Image: A hand positioned under the dispenser, demonstrating the automatic soap dispensing function.

3.4 Child Lock Function

The dispenser includes a child lock function to prevent accidental touches. Refer to the detailed user guide (if provided separately) or the instructional video for specific activation and deactivation steps. This feature helps conserve soap and prevents unintended dispensing.



Clear Window

Easily detect liquid level



Non-slip Base

Rubber ring secures it in place



Child Lock Function

Avoid accidental touching

Image: A graphic highlighting key features: a clear window to monitor soap levels, a non-slip base for stability, and the child lock function.

4. MAINTENANCE AND CARE

4.1 Cleaning the Dispenser

Thanks to its IPX7 waterproof rating, the AIKE soap dispenser can be confidently rinsed with water to keep it clean and new. Use a soft, damp cloth and mild soap to wipe down the exterior. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

IPX7 WATERPROOF



Confidently rinse with water
to keep it looking clean and new

AIKE



Image: The AIKE dispenser shown with water droplets, illustrating its IPX7 waterproof capability for easy rinsing.

IPX7 WATERPROOF

Enhanced sealing structure to extend service life, resists water impact allowing worry free daily cleaning.



Image: A banner emphasizing the "IPX7 Waterproof" feature, indicating enhanced sealing for extended service life and worry-free cleaning.

4.2 Preventing Clogs

To prevent clogs, especially when using thicker soaps, it is recommended to dilute the soap with a small amount of water.

Regularly clean the nozzle to remove any dried soap residue.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser not working/no soap dispensed.	Low battery; Soap reservoir empty; Sensor obstructed; Soap too thick; Child lock active.	Charge the dispenser; Refill soap; Clean sensor area; Dilute soap with water; Deactivate child lock.
Dispenser not charging.	Improper connection; Faulty adapter; Non-5V adapter used.	Ensure magnetic cable is securely connected; Try a different 5V USB adapter; Do not use fast chargers.
Soap leaks or clogs.	Soap consistency; Nozzle blockage.	Dilute soap if too thick; Clean the nozzle thoroughly.

6. PRODUCT SPECIFICATIONS

Model: AK1337

Brand: AIKE

Color: Brushed Stainless Steel Finish

Material: Stainless Steel

Product Dimensions (L x W x H): 4.3" x 3" x 8" (10.9 cm x 7.6 cm x 20.3 cm)

Liquid Volume Capacity: 14 fl.oz (413.65 Milliliters)

Item Weight: 11.6 ounces (328.9 grams)

Batteries: 1 Lithium Polymer battery (included)

Waterproof Rating: IPX7

Charging: Magnetic USB Charging (5V USB adapter required, not included)

Manufacturer: Zhejiang AIKE Appliances Co., Ltd.



Image: Visual representation of the dispenser's dimensions, showing its length, width, and height.

7. WARRANTY AND SUPPORT


7.1 One-Year Warranty

AIKE provides a one-year warranty for this product, which includes replacement charging cables. This warranty ensures your peace of mind regarding the product's quality and performance.

7.2 Customer Support

For any questions, concerns, or warranty claims, please contact AIKE customer support. Refer to the product packaging or the official AIKE website for the most current contact information.

Related Documents - AK1337

	<p>AIKE AK1333 Automatic Soap Dispenser User Manual and Specifications</p> <p>Detailed user manual and specifications for the AIKE AK1333 Automatic Sensor Soap Dispenser, including how to use, warnings, packing list, and liquid adjustment features.</p>
	<p>AIKE AK1205 Automatic Soap Dispenser User Manual</p> <p>User manual for the AIKE AK1205 Automatic Soap Dispenser. Provides detailed instructions on installation, operation, liquid adjustment, battery management, troubleshooting, and specifications for the AIKE automatic soap dispenser.</p>
	<p>AIKE AK1335 Automatic Soap Dispenser User Manual</p> <p>User manual for the AIKE AK1335 automatic soap dispenser, detailing specifications, operation, charging, and maintenance. Learn how to use and care for your AIKE dispenser.</p>
	<p>AIKE AK1333 Automatic Soap Dispenser User Guide</p> <p>Official user guide for the AIKE AK1333 automatic soap dispenser. Learn how to use, charge, and maintain your dispenser for optimal performance. Includes instructions on operation, charging, and cleaning.</p>
	<p>AIKE AK1205 Automatic Soap Dispenser User Guide</p> <p>This document provides a user guide for the AIKE AK1205 Automatic Soap Dispenser, covering packing list, installation instructions, usage guidelines, and battery replacement reminders in multiple languages.</p>
	<p>AIKE High Speed Hand Dryer AK2822 User Manual</p> <p>User manual for the AIKE High Speed Hand Dryer, model AK2822. Provides instructions on operation, routine maintenance, cleaning the air filter, installation, troubleshooting, and technical specifications.</p>