

[Manuals.plus](#) /

› [Dreo](#) /

› Dreo CLF513 44-inch Low Profile Ceiling Fan User Manual

Dreo CLF513

Dreo CLF513 44-inch Low Profile Ceiling Fan User Manual

Model: CLF513 | Brand: Dreo

IMPORTANT SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product. Failure to do so could lead to electric shock, fire, or serious personal injury.

- Always disconnect power by turning off circuit breakers before installation or maintenance.
- The ceiling fan must be grounded. If the ground wire for the installation site is not present, immediately STOP installation and consult a qualified electrician.
- Ensure the installation site can support a fan of 15.9 kg (35 lbs) or less.
- Do not bend the blade holders during installation, balancing, or cleaning.
- Do not insert foreign objects between rotating fan blades.
- For your safety, please tighten all screws in place using a screwdriver.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation.



Image: All components of the Dreco CLF513 Ceiling Fan, including the main fan body, light kit, remote control, and four fan blades.

- 1 Ceiling Fan Body
- 1 LED Integrated Light Kit
- 1 Remote and Holder (Equipped with battery)
- 4 Blades
- Balancing Weight and Clips
- Quick Start Guide
- User Manual

INSTALLATION GUIDE

The Dreco CLF513 ceiling fan features a preassembled design for simplified installation. For a visual guide, please refer to the official installation video below.



Video: Official installation guide for the Dreo CLF513 Ceiling Fan. This video demonstrates each step of the assembly and wiring process.

1. Before Installation

Before starting, ensure the power is disconnected at the circuit breaker. It is recommended to consult a professional electrician if you lack installation experience or electrical knowledge.

3. Hanging the Ceiling Fan and Wiring

Hang the ceiling fan body in place using the L-shaped hook on the ceiling bracket. Release your grip once the fan is securely hung. Connect the green wire to the ground wire, the black wire to the live wire, and the white wire to the neutral wire. Ensure all connections are secure with wire nuts. The ceiling fan must be grounded. If the ground wire for the installation site is not present, immediately STOP installation and consult a qualified electrician. Carefully unhook the ceiling fan body from the L-shaped hook. Position the ceiling fan body facing upward, align its oval-shaped screw slot with the L-shaped hook on the ceiling bracket. Slightly rotate counterclockwise to securely fasten them to the L-shaped slots. Ensure that every screw is firmly seated within the L-shaped slots. Align and secure the previously removed fourth screw with the oval-shaped slot on the ceiling bracket. Tighten all four screws in place using a screwdriver.

4. Assembling the Blades

Make sure that the two blade slots align with the vertical tabs of the ceiling fan body. Partially insert the screws and washers into the blade's holes and then use a screwdriver to securely tighten them. Follow these steps to complete the assembly of the remaining three blades.

Save Time and Hassles

Innovative Preassembled Design

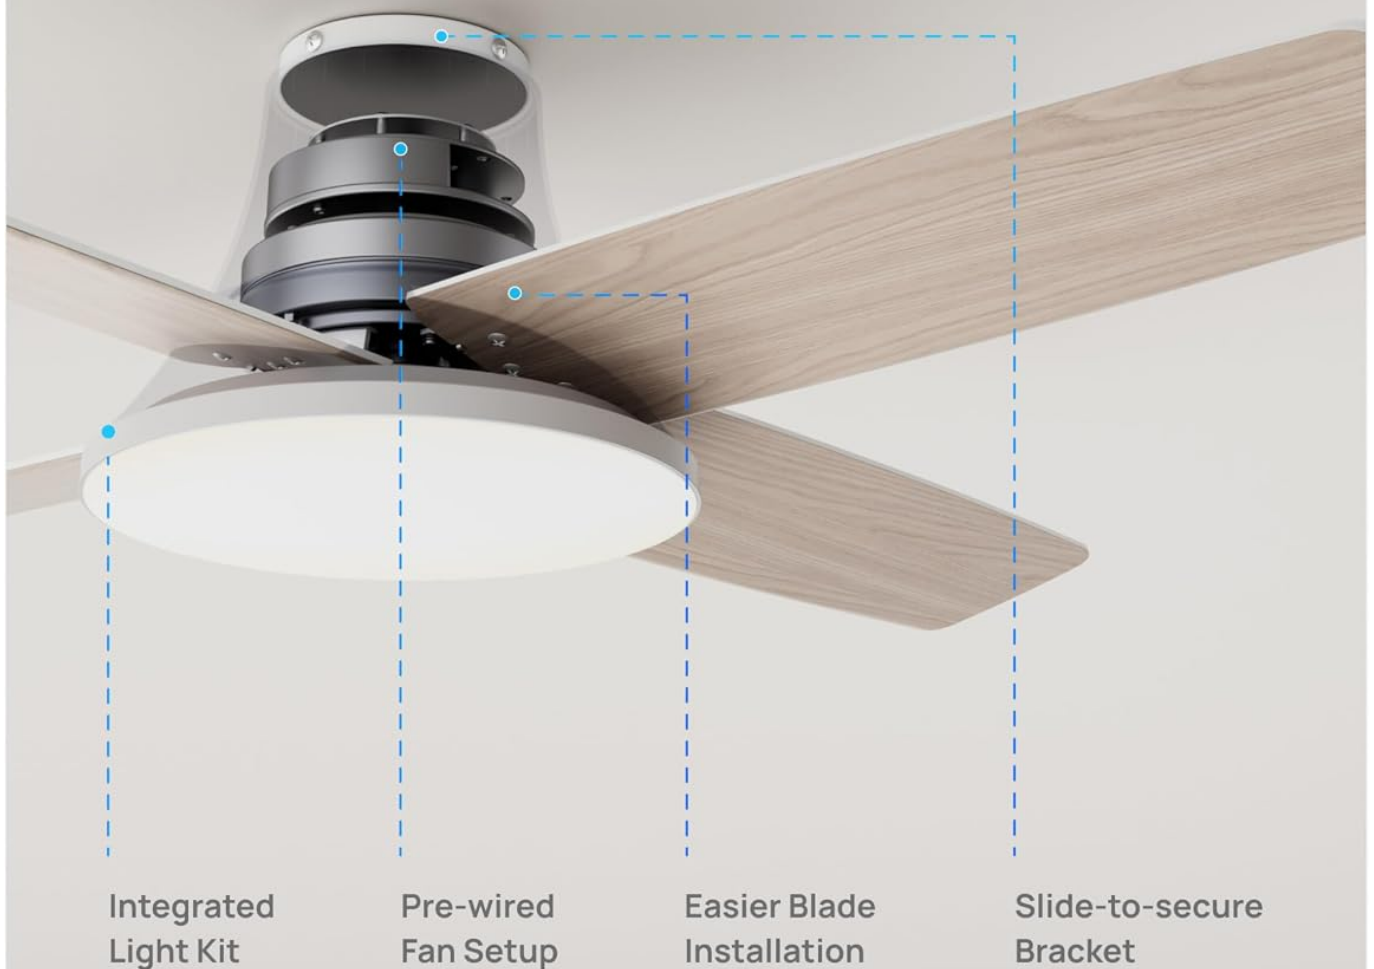


Image: Diagram illustrating the preassembled design of the Dreo CLF513 Ceiling Fan, highlighting the integrated light kit, pre-wired fan setup, simplified blade installation, and the slide-to-secure bracket for easy mounting.

5. Assembling the Light Kit

Connect the ports of the wires from the ceiling fan body to the light kit. Rotate the light kit clockwise to ensure you hear a 'click' sound, indicating it is securely fastened.

6. Remote Control Holder Installation

The remote control holder can be installed using two methods:

1. **Option 1: 3M Glue**

Peel off the protective film from the 3M adhesive on the back of the remote holder and firmly press it onto a clean, dry wall surface.

2. **Option 2: Wall-mounted Screws**

Drill two corresponding holes in the wall where you wish to mount the holder. Insert two screws into the holes and slide the backboard upward to secure the holder.

OPERATING YOUR CEILING FAN

The Dreco CLF513 ceiling fan is controlled via the included remote. Ensure the remote has a working battery (included).

Expand Your Lighting Options



2400*

Lumens

As bright as a 24w
light bulb

6 level light



5%

100%

5 light temperatures



2700K

6500K

* Max brightness tested without diffuser installed.

Image: The Dreo CLF513 Ceiling Fan installed in a room, illustrating its lighting capabilities with 6 brightness levels (up to 2400 lumens) and 5 light temperatures (2700K to 6500K).

1. Speed Adjustment

The fan offers 6 speed settings. Use the fan speed buttons on the remote to increase or decrease the airflow. The fan's Brushless DC Motor ensures quiet operation even at higher speeds.

DREO | Ceiling Fan Series

Wind Power. Brighter Than Ever.



UP to **3171 CFM***
Air Volume

10%[↑] Larger volume
than others

*Certified by DOE under highest fan settings.

Image: The Dreo CLF513 Ceiling Fan in a living space, highlighting its air volume capacity of up to 3171 CFM, indicating powerful air circulation.

2. Brightness Level Adjustment

The integrated LED light kit provides 6 brightness levels. Use the light brightness buttons on the remote to adjust the illumination from dim to bright (up to 2400 lumens).

3. Color Temperature Adjustment

Choose from 5 color temperatures, ranging from warm white (2700K) to cool daylight (6500K), to suit your preference and room ambiance. Use the color temperature buttons on the remote to cycle through the options.

4. Soft Light Mode

Activate the soft light mode for a gentle, low-intensity illumination, ideal for nighttime use or creating a relaxed atmosphere.

5. Reversible Effect

The fan features a one-touch reversible mode. In summer, the fan blades rotate counter-clockwise to push cool air downwards. In winter, they rotate clockwise to draw cool air up and circulate warm air downwards. This function is controlled directly from the remote, eliminating the need for manual adjustment.

Reverse the Wind Without Touching the Fan

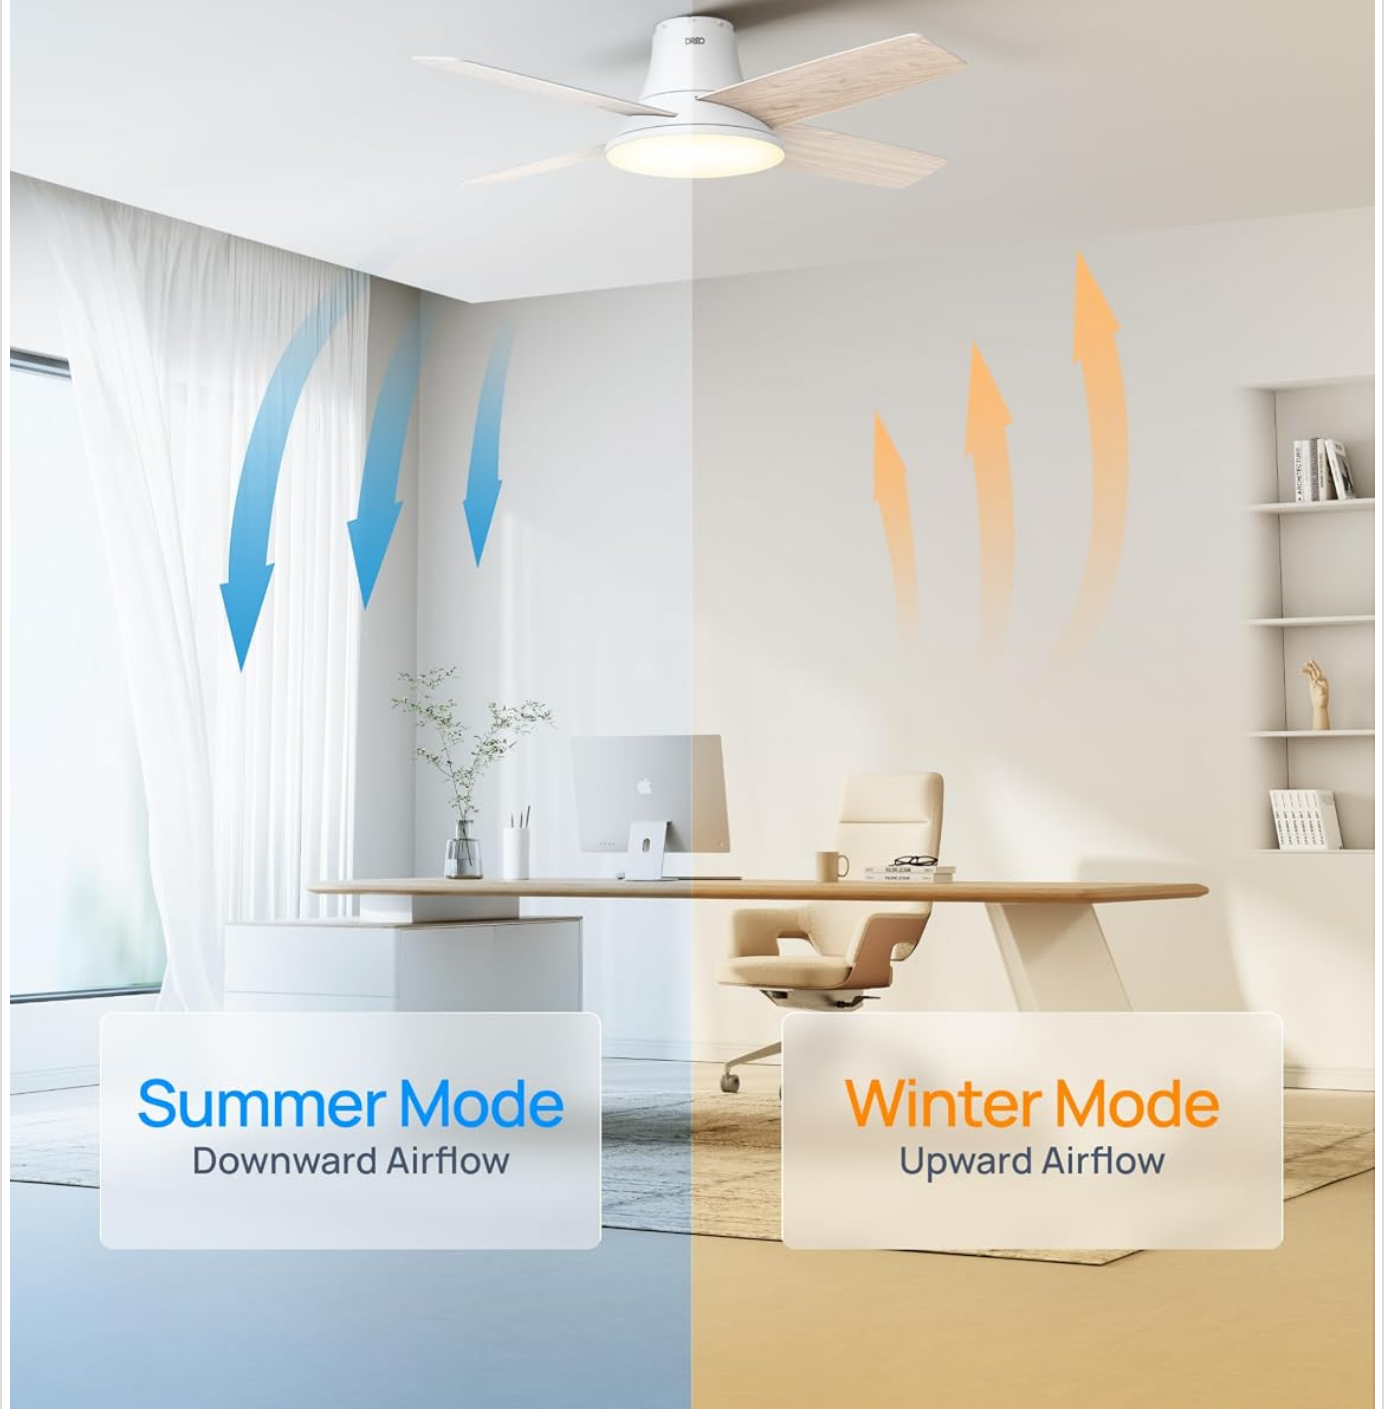


Image: Illustration of the Dreco CLF513 Ceiling Fan's reversible airflow feature, depicting downward airflow for summer cooling and upward airflow for winter heat circulation.

6. Timer Function

Set the fan to automatically turn off after 1, 4, or 8 hours using the timer buttons on the remote control. This is convenient for bedtime or when leaving a room.

7. Memory Function

The fan remembers your last used speed and light settings, so it will resume those settings when turned back on.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Dreo ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.
- **Blade Balancing:** If the fan wobbles, use the included balancing weight and clips to correct the balance. Refer to the troubleshooting section for detailed steps.
- **Light Kit:** The LED light kit is integrated and not user-replaceable. Contact customer support if the light malfunctions.

TROUBLESHOOTING

If you encounter issues with your Dreo ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker; Verify all wire connections are secure; Replace remote control battery.
Fan wobbles	Loose blade screws; Unbalanced blades; Improper mounting.	Tighten all blade screws; Use balancing kit to balance blades; Ensure mounting bracket is securely installed.
Light does not work	Loose wire connection to light kit; Faulty LED light kit.	Check light kit wire connections; Contact customer support for light kit replacement if faulty.
Remote control not working	Low battery; Remote not paired.	Replace battery; Refer to remote pairing instructions in the Quick Start Guide.
Fan makes noise	Loose screws; Motor noise; Blades hitting an obstruction.	Tighten all screws; Ensure no obstructions are near blades; For operational sounds, press the mute button on the remote control.

SPECIFICATIONS

Feature	Detail
Model Name	CLF513
Size	44 inches
Color	White
Power Source	Corded Electric
Wattage	50 watts
Voltage	120V

Feature	Detail
Number of Blades	4
Blade Material	Engineered Wood
Air Flow Capacity	3171 Cubic Feet Per Minute (CFM)
Number of Power Levels	6 Speeds
Light Type	Integrated LED (6 brightness levels, 5 CCT from 2700K to 6500K)
Control Method	Remote Controlled
Special Features	Lighting and fan memory function, One-touch night light, Timer, Reversible Mode
Indoor/Outdoor Usage	Indoor
Dimensions (D x W x H)	44"D x 44"W x 9.67"H
Item Weight	15.4 pounds
Certifications	DOE, ETL, FCC

WARRANTY AND SUPPORT

Dreo provides a 12-month warranty for this product from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper installation.

For technical support, warranty claims, or any questions regarding your Dreo CLF513 ceiling fan, please contact Dreo Customer Service through their official website or the contact information provided in your product packaging. Please have your model number (CLF513) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question