

[Manuals.plus](#) /

> [i Cafilas](#) /

> i Cafilas ME2218Z Portable Electric Espresso Coffee Maker User Manual

i Cafilas ME2218Z

i Cafilas ME2218Z Portable Electric Espresso Coffee Maker User Manual

Model: ME2218Z | Brand: i Cafilas

1. INTRODUCTION

Thank you for choosing the i Cafilas ME2218Z Portable Electric Espresso Coffee Maker. This device is designed for convenience, allowing you to enjoy fresh espresso anywhere, whether at home, in the office, or during travel and camping. It offers versatility by being compatible with both NS capsules and ground coffee, and includes a heating function for hot beverages.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Keep the device out of reach of children.
- Do not immerse the main body of the device in water or other liquids.
- Use only the provided charging cable.
- Ensure the water tank is filled below the MAX line to prevent overflow.
- Do not operate the device if it is damaged or malfunctioning.
- Exercise caution when handling hot water and hot coffee.
- Only use compatible NS capsules or fine ground coffee suitable for espresso.

3. PRODUCT OVERVIEW

The i Cafilas ME2218Z is a compact and versatile espresso maker. Familiarize yourself with its components for optimal use.



Figure 3.1: Exploded View of Components

This image displays the disassembled parts of the iCafilas ME2218Z, including the upper cover, water tank, main body with switch and indicator light, coffee powder adapter, coffee capsule adapter, portafilter, and coffee cup. The Type-C charging port is also visible on the back of the main body.

Key Features:

- **2-in-1 Compatibility:** Use with original Nespresso capsules or fine ground coffee.
- **Electric Automatic Operation:** Fully automatic with a rechargeable battery, no manual pumping required.
- **High-Pressure Extraction:** 19 Bar stable high-pressure extraction for rich, velvety crema.
- **Heating Function:** Heats water for hot espresso.
- **Automatic Cleaning:** Simple one-button cleaning process.
- **Portable Design:** Compact and lightweight for easy transport.
- **Super Battery Life:** Large capacity lithium battery for multiple uses on a single charge.

PORTABLE ESPRESSO MAKER



Figure 3.2: 2-in-1 Compatibility

The image illustrates the coffee maker's ability to use both Nespresso-compatible capsules and ground coffee, with separate adapters shown for each.

19BAR STABLE HIGH-PRESSURE EXTRACTION

Extracting rich cream and
blooming with pure flavor



high-pressure
extraction



One button
operation



Figure 3.3: 19 Bar High-Pressure Extraction

This image highlights the 19 Bar high-pressure extraction process, showing espresso flowing into the cup, emphasizing rich crema and flavor.


4. SETUP AND FIRST USE

4.1 Charging the Device


Before first use, fully charge the espresso maker. Connect the provided USB-C charging cable to the device and a suitable power source (e.g., power bank, laptop, car charger). The indicator light will show charging status.

HOW TO USE

- 01** Full charged at home

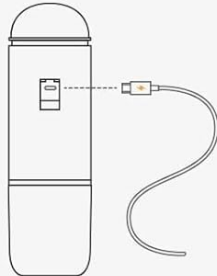


- 02** Add original Nespresso capsule or ground coffee

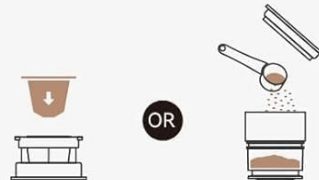

- 03** Position the adapter into the portafilter



- 04** Screw the portafilter back on the coffee maker tightly and put the cup back on

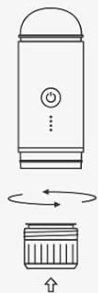

- 05** Add hot or cold water to brew coffee



- 06** Enjoy coffee



Figure 4.1: Charging the Device

This image shows the portable espresso maker connected to a charger, indicating the first step of preparation: ensuring the device is fully charged.

4.2 Initial Cleaning

For initial cleaning, fill the water tank with clean water (do not add coffee). Press the power button for 2 seconds to activate the automatic cleaning function. Dispose of the water after the cycle is complete.

5. OPERATING INSTRUCTIONS


5.1 Preparing Espresso with Ground Coffee

1. Ensure the device is fully charged.
2. Unscrew the portafilter from the main body.
3. Insert the coffee powder adapter into the portafilter.
4. Fill the coffee powder adapter with fine ground coffee (approximately 14g). Use the provided scoop to measure.
5. Gently tamp the coffee if desired, ensuring it's level.

6. Screw the portafilter with the coffee powder adapter back onto the main body tightly.
7. Fill the water tank with hot or cold water, ensuring it does not exceed the MAX line (80ml capacity).
8. Place the coffee cup underneath the portafilter.
9. For hot water extraction: Double-click the power button. The device will heat the water and extract the espresso.
10. For cold water extraction: Press and hold the power button for 2 seconds. The device will extract the espresso using the cold water.
11. Wait for the extraction to complete (approx. 90 seconds for heating/extraction).
12. Enjoy your fresh espresso.

HOW TO USE


01 Full charged at home

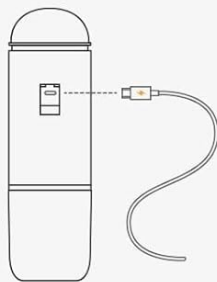

02 Add original Nespresso capsule or ground coffee



03 Position the adapter into the portafilter

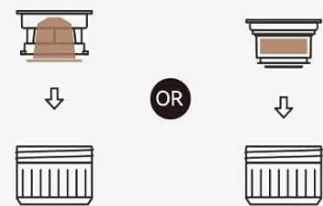

04 Screw the portafilter back on the coffee maker tightly and put the cup back on



05 Add hot or cold water to brew coffee



06 Enjoy coffee



Figure 5.1: How to Use with Ground Coffee

This diagram illustrates the six steps for preparing coffee: 1) Charge, 2) Add ground coffee, 3) Position adapter, 4) Screw portafilter, 5) Add water, 6) Enjoy coffee.



Figure 5.2: Preparing Espresso

The main product image shows the device in action, with coffee grounds and a capsule adapter ready for use, demonstrating the versatility of the espresso maker.

5.2 Preparing Espresso with NS Capsules

1. Ensure the device is fully charged.
2. Unscrew the portafilter from the main body.
3. Insert the coffee capsule adapter into the portafilter.
4. Place an original Nespresso-compatible capsule into the capsule adapter.
5. Screw the portafilter with the capsule adapter back onto the main body tightly.
6. Fill the water tank with hot or cold water, ensuring it does not exceed the MAX line (80ml capacity).
7. Place the coffee cup underneath the portafilter.
8. For hot water extraction: Double-click the power button. The device will heat the water and extract the espresso.

9. For cold water extraction: Press and hold the power button for 2 seconds. The device will extract the espresso using the cold water.
10. Wait for the extraction to complete (approx. 90 seconds for heating/extraction).
11. Enjoy your fresh espresso.



Figure 5.3: On-the-Go Use

This image shows the portable espresso maker being used inside a car, highlighting its convenience for travel and on-the-go coffee preparation.

Your browser does not support the video tag.

Video 5.1: i Cafilas ME2218Z Portable Electric Espresso Coffee Machine Demonstration

This video demonstrates the setup and operation of the i Cafilas ME2218Z, including adding coffee, water, and initiating the brewing process. It showcases the device's ease of use and portability.

Your browser does not support the video tag.

Video 5.2: Bescost Travel Espresso Machine for Car Use

This video highlights the Bescost (i Cafilas) portable espresso machine's suitability for car travel, demonstrating how to prepare espresso conveniently while on the road.

Your browser does not support the video tag.

Video 5.3: Portable Coffee Maker Espresso Overview

This video provides a general overview of the portable coffee maker, showcasing its features and how it can be used to make espresso.

6. CLEANING AND MAINTENANCE

6.1 Automatic Cleaning Function

To clean the device automatically:

1. Remove any used coffee grounds or capsules.
2. Fill the water tank with boiling water.
3. Press the power button for 2 seconds.
4. Wait approximately 90 seconds for the automatic cleaning cycle to complete.
5. Dispose of the waste water and dry the components.

6.2 General Cleaning

- After each use, rinse the portafilter, coffee adapters, and coffee cup with warm water.
- Wipe the exterior of the main body with a damp cloth. Do not immerse the main body in water.
- Ensure all parts are completely dry before reassembling or storing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully.
Coffee is not extracting.	Insufficient water, clogged filter, or improper assembly.	Ensure water tank is filled, clean the filter, and reassemble components tightly.
Water is leaking.	Components not screwed on tightly, or water level exceeds MAX line.	Ensure all parts are securely fastened and do not overfill the water tank.
Coffee is too weak/strong.	Incorrect coffee grind size or amount.	Use fine grind coffee for espresso. Adjust coffee amount to taste.

8. SPECIFICATIONS

Feature	Detail
Brand	i Cafilas
Model Name	ME2218Z
Product Dimensions	2.95"D x 2.95"W x 9.76"H
Item Weight	1.76 pounds
Coffee Maker Type	Espresso Machine
Operation Mode	Fully Automatic

Feature	Detail
Special Feature	Portable, Reusable
Included Components	Filter, Coffee Powder Adapter, Coffee Capsule Adapter, Coffee Cup, USB-C Charging Cable
Capacity	80 Milliliters
Rated Power	100 W
Input Voltage/Electricity	10V/2.25A
Rated Operating Voltage/Electricity	12V/9A
Battery Rated Capacity	7800mAh 28.08WH

PRODUCT INFORMATION



Brand
iCafilas

Product name
Portable Espresso Maker

Material

Food grade plastic / ABS
304 stainless steel

Product net weight

About 802g

Rated power

100 W

Battery rated capacity

7800mAh 28.08WH

Input voltage/electricity

10V/2.25A

Rated operating voltage/electricity

12V/9A

Product size

248*75mm

Water tank capacity

80ml

Figure 8.1: Product Information

This image provides a visual summary of the product's dimensions, brand, material, power, voltage, battery capacity, and water tank capacity.

SINGLE OR DOUBLE SHOT



40ML water
and get a cup of
30ML coffee
(1 cup)



70ML water
and get a cup of
60ML coffee
(2 cups)



Figure 8.2: Single or Double Shot Options

This diagram illustrates the water levels for preparing a single shot (40ml water for 30ml coffee) or a double shot (70ml water for 60ml coffee).

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact i Cafilas customer service through the retailer where you purchased the product or visit the official i Cafilas website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CZ42ZJSB>

More documents and user manuals: **<https://manuals.plus/>**