



Manuals.plus /

› **PROFI CARE** /

› ProfiCare Electronic Personal Scale PC-PW3122 User Manual

PROFI CARE PC-PW3122

ProfiCare Electronic Personal Scale PC-PW3122 User Manual

Model: PC-PW3122 (331221) | Brand: PROFi CARE

INTRODUCTION

Thank you for choosing the ProfiCare Electronic Personal Scale. This manual provides important information on the proper setup, operation, and maintenance of your new scale. Please read it thoroughly before use and keep it for future reference.

The ProfiCare brand is distinguished by its commitment to innovation and advanced technology, offering high-quality personal care and wellness products.

SAFETY INSTRUCTIONS

- Do not use the scale on wet or slippery surfaces.
- Keep the scale away from water and high humidity.
- Do not overload the scale beyond its maximum capacity of 180 kg.
- Avoid dropping or subjecting the scale to strong impacts.
- This scale is for personal use only and not for commercial or medical purposes.
- Keep batteries out of reach of children.

PRODUCT OVERVIEW

The ProfiCare PC-PW3122 is an electronic personal scale designed for accurate weight measurement. It features a sleek design with a tempered glass surface and an easy-to-read LCD display.



Image: Front view of the ProfiCare PC-PW3122 electronic personal scale, displaying a weight of 76.8 kg on its LCD screen. The scale has a black tempered glass surface.

SETUP

1. Battery Installation

The scale requires 2 x 1.5V AAA batteries (not included). To install:

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the 2 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: View of the underside of the ProfiCare scale, highlighting the battery compartment and the four non-slip feet for stability.

5-180kg
Extra großer Messbereich

Und Schnellzugriff auf
das Batteriefach



Image: A close-up showing the quick-access battery compartment on the underside of the scale, indicating ease of battery replacement.

2. Initial Placement

Place the scale on a hard, flat, and stable surface. Avoid carpets or uneven flooring, as this may affect accuracy.



Image: The underside of the scale showing its non-slip feet, designed to provide maximum stability and safety on all types of floors.

3. Unit Selection (kg/lb/st)

Your scale allows you to switch between kilograms (kg), pounds (lb), and stones (st). The unit switch button is usually located near the battery compartment on the underside of the scale. Press it to cycle through the available units until your desired unit is displayed.

Kompakt & modern

Zeitloses Design trifft auf zuverlässige Technik

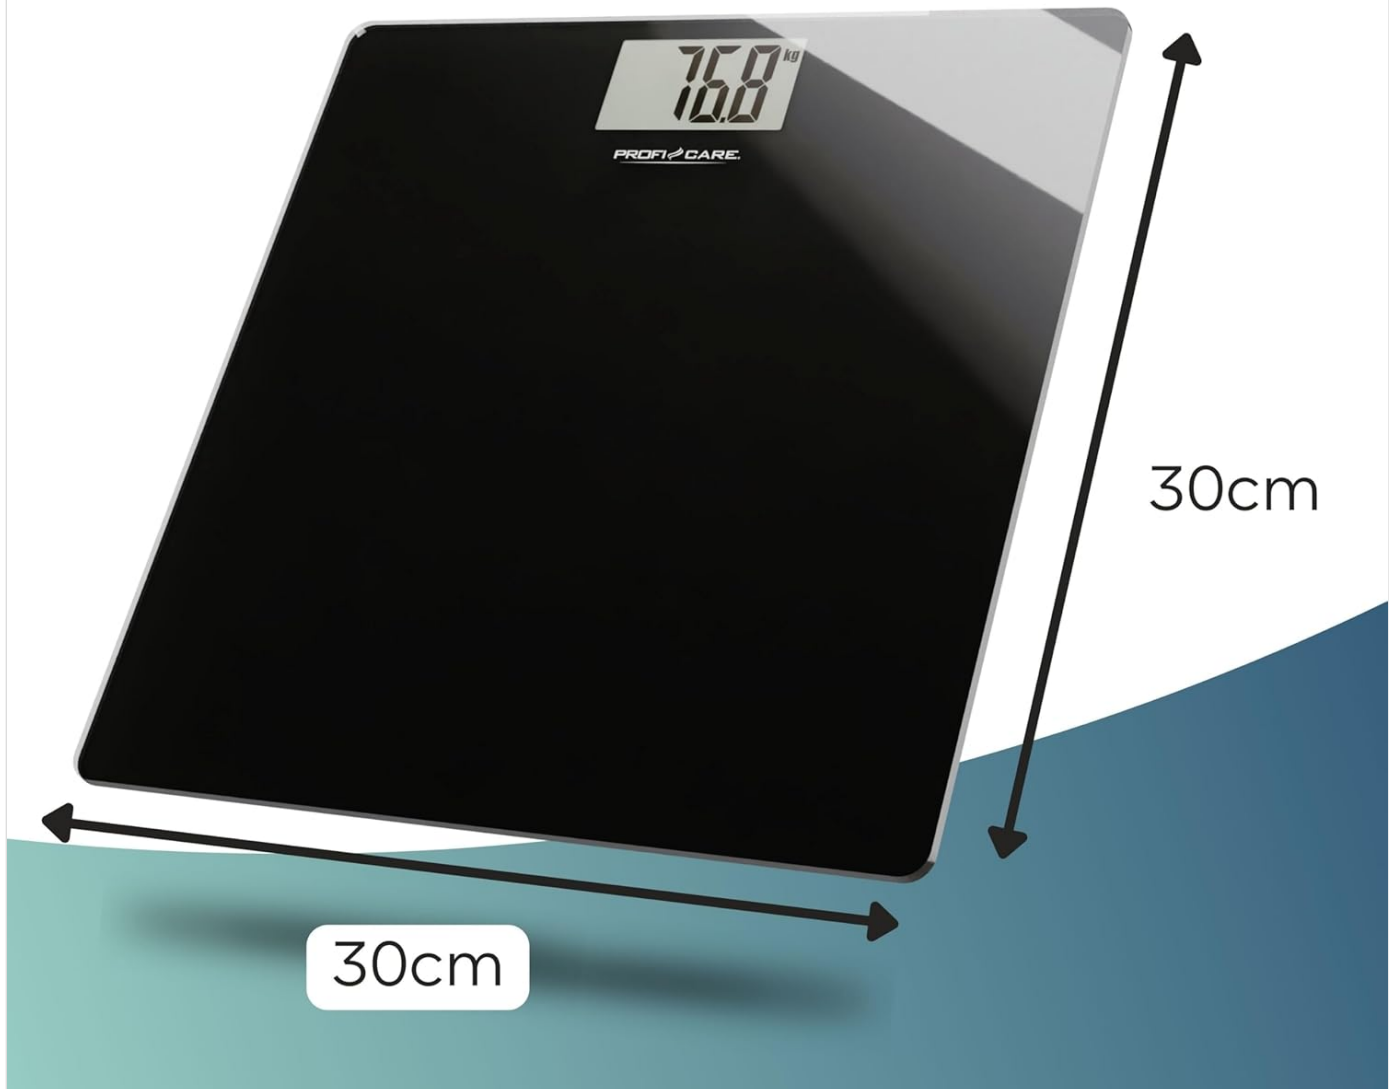


Image: The scale's surface with an overlay indicating the switchable measurement units: kilograms (kg), pounds (lb), and stones (st).

OPERATING INSTRUCTIONS

1. Taking a Measurement (Step-On Function)

The ProfiCare PC-PW3122 features an automatic "Step-On" function for immediate measurement:

1. Gently step onto the scale with bare feet. Ensure your feet are centered on the glass surface.
2. The scale will automatically turn on and display your weight.
3. Stand still until the weight reading stabilizes and flashes a few times, indicating the final measurement.
4. Step off the scale. The display will remain on for a few seconds before automatically turning off to conserve battery life.

Step-On Funktion

Die automatische Einschaltfunktion
sorgt für eine extra lange
Batterielaufzeit



Image: A foot stepping onto the ProfiCare scale, illustrating the "Step-On" function where the scale automatically activates upon contact. This automatic turn-on feature ensures extended battery life.

2. Reading the LCD Display

The large LCD display provides clear weight readings. The display is designed to be easily readable even in low light conditions.

Groß und Pflegeleicht

Die hochwertige Glasoberfläche lässt sich sehr einfach sauber halten



Image: A close-up of the ProfiCare scale's high-quality LCD display, showing a weight reading of 76.8 kg. The display is clearly visible, even in poor lighting conditions.

MAINTENANCE

1. Cleaning the Scale

The high-quality tempered glass surface of the scale is easy to clean:

- Wipe the surface with a soft, damp cloth.
- For stubborn marks, use a mild glass cleaner.
- Do not use abrasive cleaners or immerse the scale in water.
- Ensure the scale is completely dry before storage or next use.

Kompakt & modern

Zeitloses Design trifft auf zuverlässige Technik

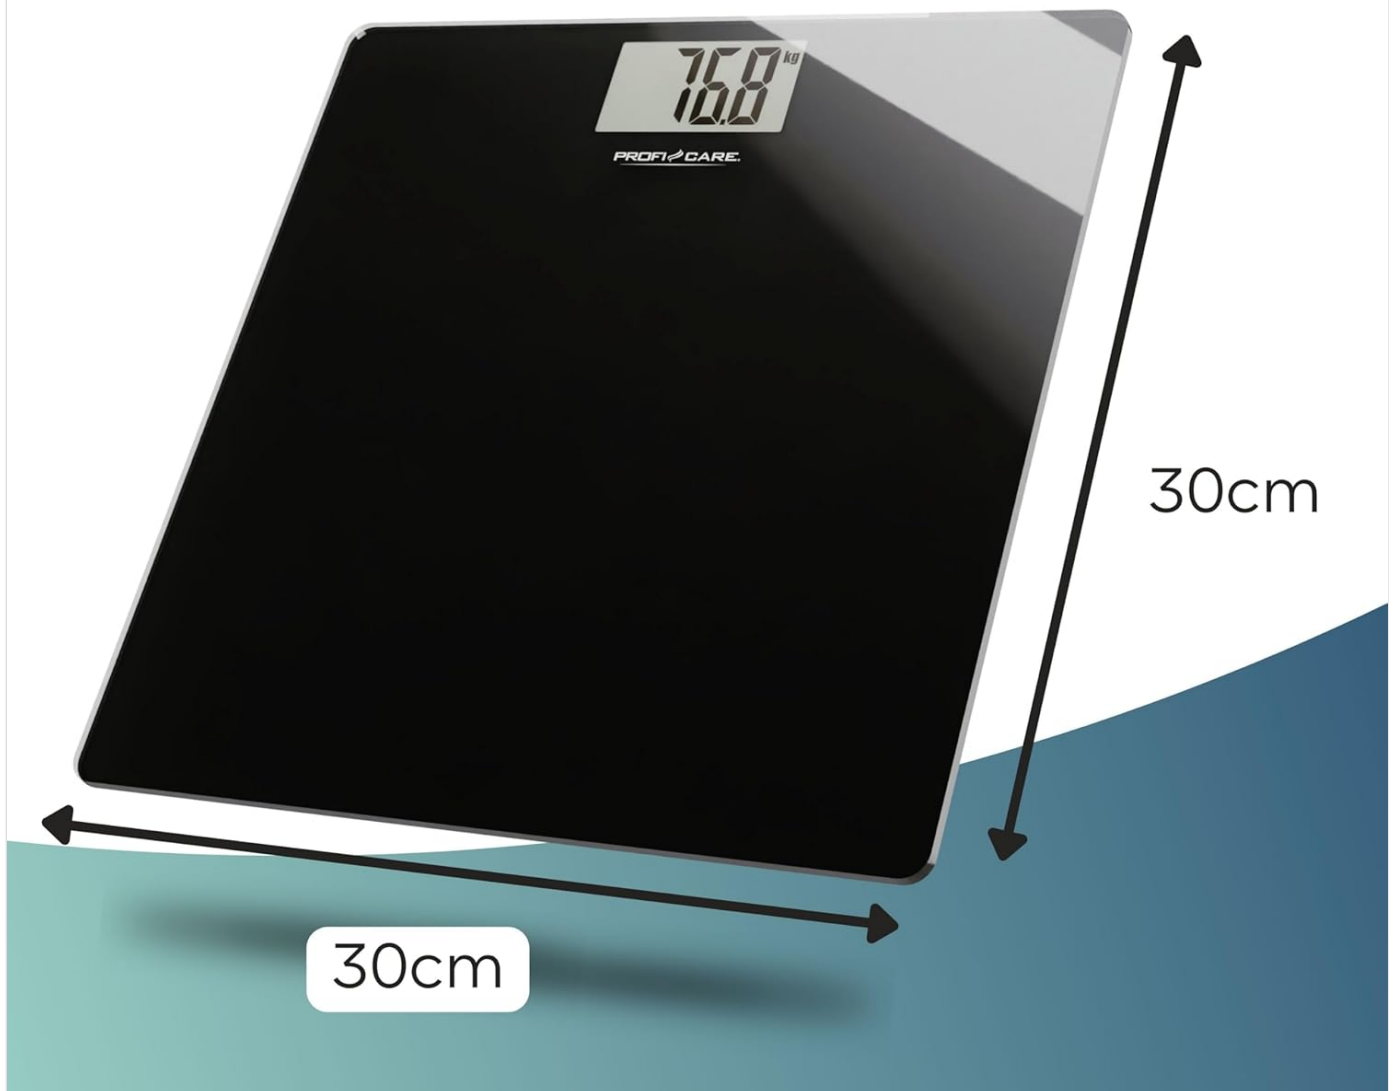


Image: A hand wiping the tempered glass surface of the ProfiCare scale with a cloth, demonstrating how easy it is to keep the large and easy-to-clean surface spotless.

2. Storage

Store the scale in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the scale when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
"Lo" displayed / Scale does not turn on	Low battery or no batteries installed.	Replace the 2 x 1.5V AAA batteries. Ensure correct polarity.
"O-Ld" displayed / Overload	Weight exceeds maximum capacity (180 kg).	Step off the scale. The scale is designed for a maximum of 180 kg.
Inaccurate readings	Scale not on a hard, flat surface; scale moved; initial calibration needed.	Place scale on a firm, flat floor. If moved, step on briefly to turn on, then step off and wait for it to turn off before weighing again.
Display shows "Err"	Measurement error.	Step off the scale, wait for it to turn off, then step on again. If the problem persists, try replacing batteries.

SPECIFICATIONS

Model: PC-PW3122 (331221)

Brand: PROFI CARE

Measuring Range: 5 - 180 kg (100 g increments)

Accuracy: 100 Grams

Display Type: LCD

Material: Tempered Glass

Product Dimensions: Approximately 30 x 30 x 2 cm

Item Weight: 1.29 kg

Power Source: 2 x 1.5V AAA Batteries (not included)

Special Features: Step-On Function, Automatic Shut-off, Low Battery Indicator, Overload Indicator, Non-slip feet, Switchable units (kg/lb/st)

Anti-Rutsch Füße

Für maximale Stabilität und Sicherheit
auf allen Böden



Batteriebetrieb: 2x 1,5V AAA
(Batterien nicht enthalten)

Image: The ProfiCare scale shown with its approximate dimensions, indicating a compact and modern design with a surface area of about 30cm by 30cm.

WARRANTY AND SUPPORT

Specific warranty information for this product may vary by region and retailer. Please refer to the warranty card included with your purchase or contact your point of sale for details.

For technical support or further inquiries, please visit the official ProfiCare website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.