Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LENSGO Smoke B

LENSGO Smoke B Portable Fog Machine User Manual

Model: Smoke B
Brand: LENSGO

1. Introduction

The LENSGO Smoke B Portable Fog Machine is a versatile and compact device designed to enhance the atmosphere for various applications, including photography, film, and events. It offers multiple fog modes and stable performance, making it an ideal tool for creative professionals and enthusiasts alike. This manual provides detailed instructions for the safe and effective use of your fog machine.



Figure 1: LENSGO Smoke B Portable Fog Machine and included accessories.

2. Product Features

- **Fog Modes:** Features Portrait mode, Dry ice mode, Film Level Mist mode, and Incense burning mode to enhance photography and event atmospheres for Halloween, Christmas parties, and wedding holidays.
- **Stable Performance:** Built-in overheating protection system ensures safe and reliable operation. Compact design for easy portability and robust construction with high-quality materials guarantee stable performance.
- **Wireless Remote Control:** Control directly via wireless remote or manually by pressing the button for 3 seconds to power on, then double-pressing to activate uniform, continuous high-quality fog output.
- **Energy Saving:** Quickly covers 20 cubic meters in just 60 seconds with LENSGO mist. A 2-hour charge provides 18 minutes of continuous smoke production.

3. Package Contents

Please verify that all items listed below are included in your package:



MODEL:	Smoke B hand-held Fog machine
SIZE:	77.68 x 45 x 156.2 mm
POWER:	40W
VOLTAGE:	7.4V
CHARGING VOLTAGE:	5V 2A
BATTERY CAPACITY:	2550 MAH
TIME OF USE:	After working for 3 minutes, stop spraying for 2 seconds
CONTINUOUS USE:	18 minutes
CHARGING TIME:	About 3 hours
TANK CAPACITY:	12 ml

Figure 2: Visual representation of the LENSGO Smoke B package contents.

- LENSGO Smoke B Fog Machine (Main Unit)
- Storage Bag
- Fog Machine Liquid (6 bottles)

- Infrared Remote Control
- Liquid Smoke Filters
- Charging Cable
- High Pressure Nozzle
- Hard Straight Tube
- Hard Bend Tube
- Silicone Hose
- Mist Fan

4. Safety Information

WARNING: Read all safety warnings and instructions before using this product. Failure to follow the warnings and instructions may result in electric shock, fire, or serious injury.

- Use only LENSGO approved fog fluid. Using other fluids may damage the device or pose a safety risk.
- Ensure adequate ventilation when operating the fog machine. Do not operate in enclosed spaces.
- Keep the device and fog fluid out of reach of children and pets.
- Do not ingest fog fluid. If ingested, seek immediate medical attention.
- Do not touch the nozzle during or immediately after operation, as it may be hot.
- Do not block the fog output.
- Disconnect power before cleaning or performing maintenance.
- Do not disassemble or modify the device.

5. Setup and First Use

Follow these steps for initial setup and operation:

1. Gently lift the silicone cover on the fog machine.
2. Locate the oil hole in the oil tank.
3. Carefully pour fog fluid into the injection hole.
4. After refueling, wait at least 5 minutes before using to allow the fluid to saturate.
5. When in use, install a heat shield to prevent scalding.
6. Press the power button for 3 seconds to turn the device on/off.
7. After booting, press the button twice to open the smoke output.
8. A few drops of oil in the output hole can increase the amount of smoke produced.

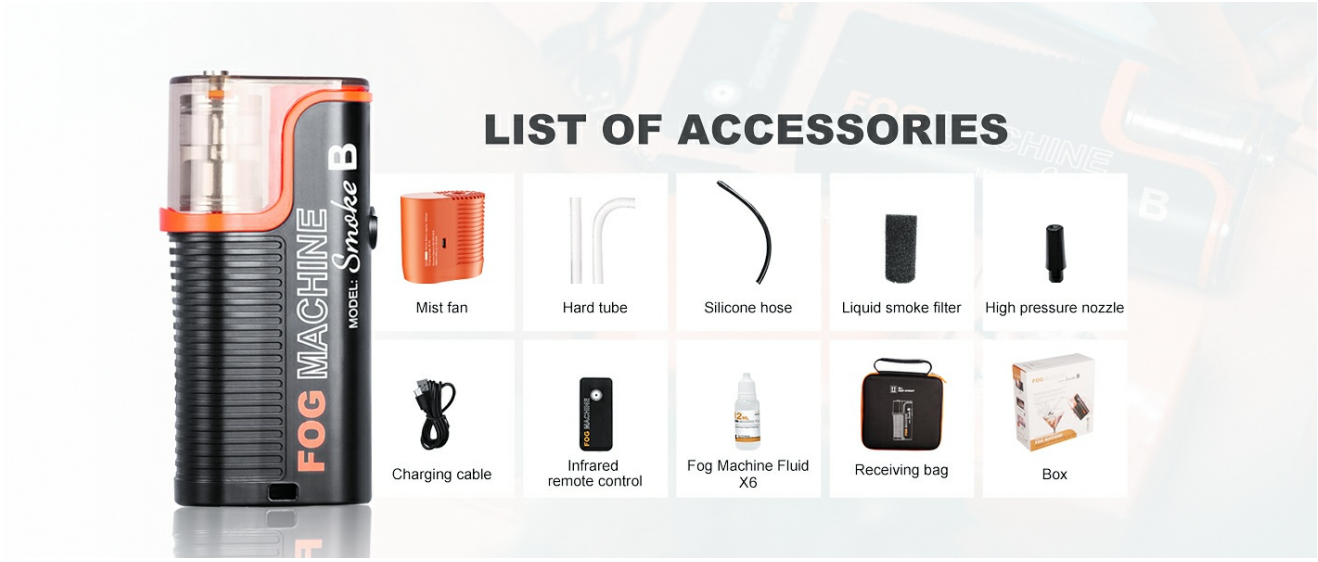


Figure 3: Step-by-step visual guide for setting up and using the fog machine.

The device features a simple double-click mechanism for activation:

- Double-click to open the smoke output.
- Click once to close the smoke output.



Figure 4: The main button for controlling fog output.

6. Operating Instructions

6.1 Remote Control Operation

The LENSGO Smoke B can be controlled wirelessly using the included infrared remote control. This allows for convenient activation and deactivation of the fog machine from a distance of up to 10 meters.



Figure 5: Remote control for convenient operation up to 10 meters.

6.2 Fog Modes and Applications

With the various accessories, the LENSGO Smoke B can produce different smoke effects suitable for a wide range of scenarios:

- **Portrait Mode:** Ideal for creating atmospheric backgrounds in portrait photography.
- **Dry Ice Mode:** Simulates a low-lying fog effect, perfect for dramatic scenes or product photography.
- **Film Level Mist Mode:** Produces a fine, even mist for cinematic effects.
- **Incense Burning Mode:** Creates a subtle, continuous smoke effect.

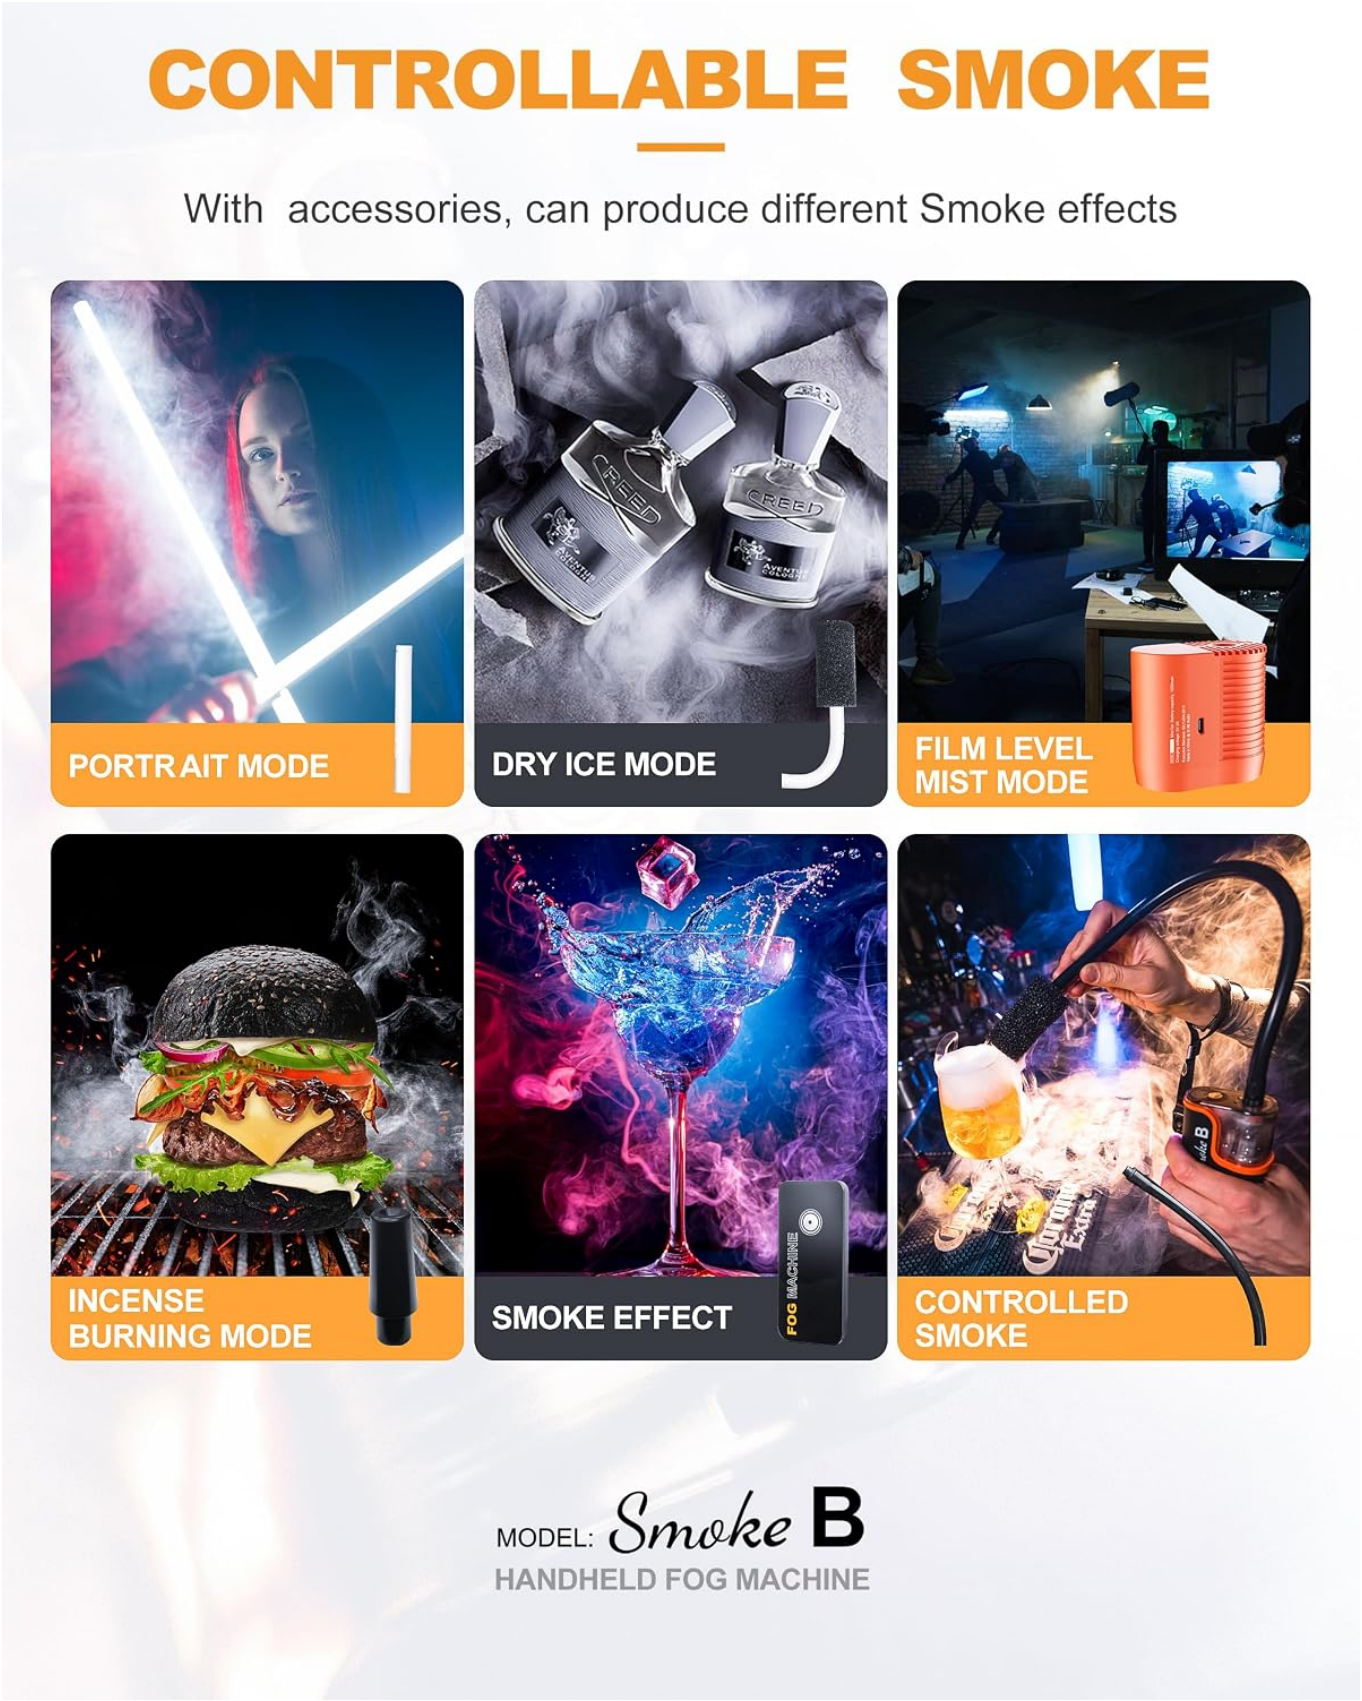


Figure 6: Examples of different smoke effects achievable with the LENSGO Smoke B.



Figure 7: The LENSGO Smoke B is widely compatible for creating smoke or fog effects in videos and photos.

7. Maintenance

To ensure the longevity and optimal performance of your LENSGO Smoke B Fog Machine, regular maintenance is

recommended:

- **Fluid Management:** Always use LENSGO approved fog fluid. Do not mix different types of fluids. Store fluid in a cool, dry place away from direct sunlight.
- **Cleaning:** After each use, especially if the machine will not be used for an extended period, it is advisable to run a small amount of distilled water through the system to prevent clogs. Ensure the oil tank is clean and free of residue.
- **Storage:** Store the fog machine in its provided storage bag in a dry, dust-free environment.
- **Filter Replacement:** Periodically check and replace the liquid smoke filters as needed to maintain optimal fog quality and prevent blockages.

8. Troubleshooting

If you encounter issues with your LENSGO Smoke B Fog Machine, please refer to the following common troubleshooting steps:

- **No Fog Output:**
  - Ensure the fluid tank is filled with LENSGO fog fluid.
  - Check if the device is fully charged or connected to power.
  - Verify that the power button has been pressed for 3 seconds to turn on, and then double-pressed to activate fog output.
  - Check for any blockages in the nozzle or tubes.
- **Weak Fog Output:**
  - Ensure the fluid tank is adequately filled.
  - Check if the liquid smoke filters are clean and not clogged.
  - Ensure the high-pressure nozzle is correctly attached and clear.
- **Device Not Turning On:**
  - Confirm the device is charged.
  - Ensure the power button is pressed and held for 3 seconds.
- **Remote Control Not Working:**
  - Ensure there are no obstructions between the remote and the fog machine.
  - Check the remote control's battery.

If the issue persists after following these steps, please contact LENSGO customer support for assistance.

9. Specifications

Feature	Specification
Model	Smoke B hand-held Fog machine
Size	77.68 x 45 x 156.2 mm
Power	40W
Voltage	7.4V
Charging Voltage	5V 2A
Battery Capacity	2550 mAh
Time of Use	After working for 3 minutes, stop spraying for 2 seconds
Continuous Use	18 minutes
Charging Time	About 3 hours
Tank Capacity	12 ml

10. Warranty and Support

LENSGO is committed to providing quality products and excellent customer service. If you encounter any problems during the use of your LENSGO Smoke B Fog Machine, please do not hesitate to contact us. We will reply to you within 24 hours and provide quality after-sales service.
For support, please visit the official LENSGO store on Amazon or contact their customer service directly.

Thank you for choosing LENSGO!

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D1R3JKGR

More documents and user manuals: **https://manuals.plus/**