



Manuals.plus /

› ALFORDSON /

› ALFORDSON D-OCH-MASG-B-FT-FABK-FBA Ergonomic Swivel Office Chair User Manual

## ALFORDSON D-OCH-MASG-B-FT-FABK-FBA

# ALFORDSON D-OCH-MASG-B-FT-FABK-FBA Ergonomic Swivel Office Chair User Manual

## 1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your ALFORDSON D-OCH-MASG-B-FT-FABK-FBA Ergonomic Swivel Office Chair. Please read this manual carefully before use to ensure proper function and safety. Keep this manual for future reference.

The ALFORDSON office chair is designed to provide comfort and support during long hours of work. Key features include an ergonomic design, adjustable recline, massage function, retractable footrest, 360-degree swivel, and adjustable seat height.

# Design ergonomique en forme de S

Protège 5 régions de votre colonne vertébrale

Support rembourré double, épouse votre dos



Figure 1: ALFORDSON D-OCH-MASG-B-FT-FABK-FBA Ergonomic Swivel Office Chair

## 2. SAFETY WARNINGS

- **Maximum Load Capacity:** This product has a maximum load capacity of 180 kg (approximately 396 lbs). Do not exceed this weight limit.
- **Stable Surface:** Always use the chair on a stable, level surface to prevent tipping.
- **Assembly Instructions:** Follow the assembly instructions carefully. Incorrect assembly can lead to instability and injury.
- **Adult Use Only:** The chair is intended for adults only and is not suitable for children. Keep children away from the chair during assembly and use.
- **Regular Checks:** Periodically check all bolts and screws to ensure they are tight. Retighten if necessary.
- **Avoid Standing:** Do not stand on the chair.

## 3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer service.

- 1 x ALFORDSON Massage Office Chair (unassembled components)
- 1 x Assembly Manual

## 4. SETUP AND ASSEMBLY

Refer to the separate, detailed assembly manual included in your package for step-by-step instructions. The following are general guidelines:

1. **Preparation:** Clear a spacious area for assembly. Place all components on a soft, clean surface (e.g., a carpet or blanket) to prevent scratches.
2. **Component Identification:** Identify all parts and hardware using the parts list in the assembly manual.
3. **Assembly Sequence:** Follow the numbered steps in the assembly manual precisely.
4. **Tightening:** Tighten all screws and bolts securely, but do not overtighten, as this may damage the components.
5. **Final Check:** After assembly, ensure the chair is stable, all connections are secure, and all adjustable functions operate smoothly.



Figure 2: Chair Dimensions for Assembly Reference

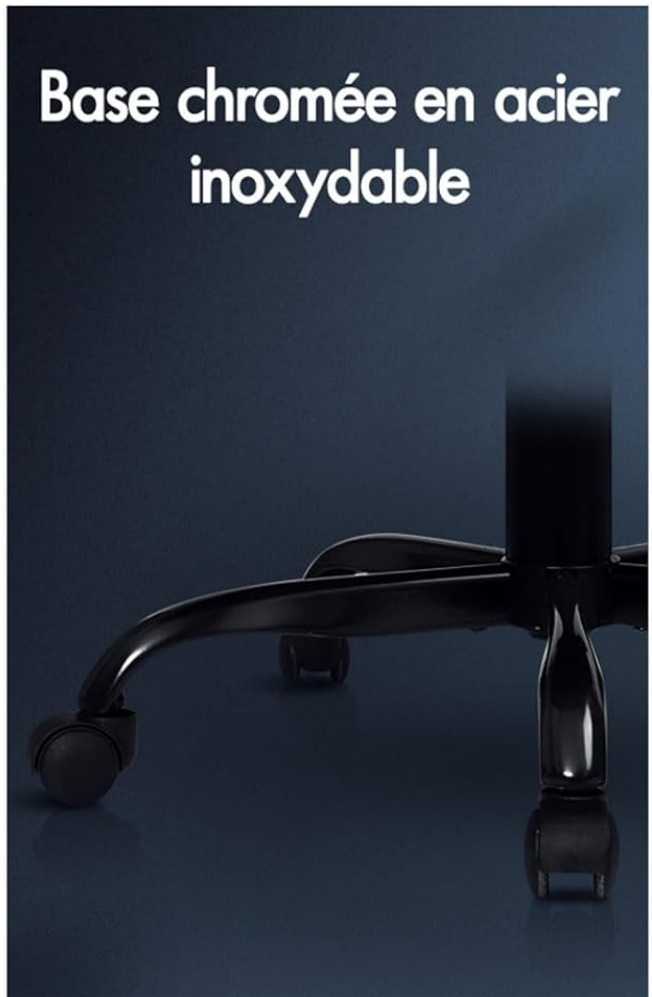


Figure 3: Gas Lift and Base Components

## 5. OPERATING INSTRUCTIONS

### 5.1 Seat Height Adjustment

To adjust the seat height, locate the lever on the right side beneath the seat. While seated, pull the lever up to lower the seat. To raise the seat, stand up slightly and pull the lever up. Release the lever at the desired height to lock the position.

### 5.2 Recline Function and Footrest

The chair features a 150-degree recline adjustment. Use the lever on the left side of the chair to adjust the backrest

angle. Pull the lever up, lean back to your desired angle, and release the lever to lock it. To return to an upright position, pull the lever up and lean forward.

A retractable footrest is integrated beneath the seat. Pull the footrest out when reclining for additional leg support. Push it back in when not in use.



Figure 4: Recline Function and Retractable Footrest

### 5.3 Swivel Function

The chair offers a full 360-degree swivel, allowing for easy movement and access to different areas of your workspace without needing to reposition the entire chair.

### 5.4 Massage Function

The chair includes a massage function with two massage zones located in the backrest, targeting the back and lumbar vertebrae. It is powered via a simple USB connection.

- **Power Connection:** Connect the USB cable from the chair to a compatible USB power source (e.g., computer, USB wall adapter, power bank).
- **Control Unit:** Locate the massage control unit, typically found on the side of the chair.
- **Operation:** Press the 'ON/OFF' button to activate or deactivate the massage function. Use the 'MODE' button to cycle through the available massage modes:
  - Continuous vibrations
  - Mixed intense and slow vibrations
  - Intense and continuous vibration

## Différents modes:

- ✓ Vibration continue
- ✓ Mélangé avec des vibrations intenses et des vibrations lentes
- ✓ Vibration intense continue



Figure 5: Massage Control Unit and USB Connection

## Massage à 2 zones

- ✓ Deux modes de massage avec trois niveaux d'intensité
- ✓ 5 modes de massage différents



Figure 6: Two-Zone Massage System

## 6. MAINTENANCE

- **Cleaning:** For fabric surfaces, gently wipe with a damp cloth and a mild, non-abrasive detergent. Avoid using harsh chemicals or abrasive cleaners, as they may damage the fabric.
- **Hardware:** Periodically check all screws and bolts for tightness. Retighten as needed to maintain stability and prevent squeaking.
- **Wheels:** Keep the chair wheels clean from dust, hair, and debris to ensure smooth movement. If wheels become stiff, clean them thoroughly.
- **Gas Lift:** Do not attempt to disassemble or repair the gas lift. If it malfunctions, contact customer service.

# Pas de compromis sur les matériaux

Tissu en lin respirant

Nous n'utilisons pas de  
mousse recyclée

Nous n'utilisons pas de  
planche en bois recyclée



## Roues universelles de qualité, une expérience tout en douceur



Figure 7: Chair Materials and Wheels

## 7. TROUBLESHOOTING

- **Chair is unstable or wobbles:**

Ensure all assembly screws and bolts are securely tightened. Check that the base and gas lift are correctly assembled and seated.

- **Gas lift not adjusting height:**

Verify that the height adjustment lever is fully engaged or disengaged. Check for any obstructions preventing the gas lift from moving freely. If the gas lift is faulty, it may need replacement.

- **Massage function not working:**

Ensure the USB cable is securely connected to a functional USB power source. Check the cable for any visible damage. Try a different USB port or power adapter.

- **Wheels not rolling smoothly or making noise:**

Inspect the wheels for any trapped debris, hair, or dirt and clean them thoroughly. Ensure the wheels are properly inserted into the chair base.

- **Chair creaks or makes noise when moving:**

Check and retighten all connections, especially where the seat and backrest attach to the base. A small amount of lubricant can be applied to moving metal parts if the noise persists.

## 8. SPECIFICATIONS

Feature	Specification
Brand	ALFORDSON
Model Number	D-OCH-MASG-B-FT-FABK-FBA
Color	Black
Product Dimensions (L x W x H)	49 x 51 x 115 cm (19.3 x 20.1 x 45.3 inches)
Item Weight	17.5 Kilograms (38.6 lbs)
Maximum Weight Recommendation	180 Kilograms (396 lbs)
Material	Fabric (Velvet + Foam seat, Metal frame)
Back Style	Continuous back
Gas Lift	SGS and TUV certified
Wheels	TUV certified
Recline Angle	Up to 150 degrees
Massage Function	2-zone massage, USB powered, 3 modes

## 9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation provided with your purchase or visit the official ALFORDSON website. If you encounter any issues or require technical assistance, please contact ALFORDSON customer service through the retailer where you purchased the product or via the contact information provided on the ALFORDSON website.