

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ancona](#) /

› [Ancona 36" 600 CFM Ducted Wall Mount Pyramid Range Hood User Manual](#)

Ancona AN-17035SS

Ancona 36" 600 CFM Ducted Wall Mount Pyramid Range Hood User Manual

Model: AN-17035SS

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Ancona 36" 600 CFM Ducted Wall Mount Pyramid Range Hood. Please read this manual thoroughly before installation and use to ensure proper function and safety.

The Ancona AN-17035SS range hood is designed to effectively remove smoke, grease, moisture, and cooking odors from your kitchen, providing a cleaner and more comfortable cooking environment. It features a powerful 600 CFM motor, 9-speed touch controls, and energy-efficient LED lighting.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury to persons, observe the following:

- Install this range hood in accordance with all specified instructions.
- Always disconnect power before servicing or cleaning the unit.
- Ensure proper ventilation is provided for combustion gases from fuel-burning equipment to prevent back-drafting.
- Do not use this unit with any solid-state speed control device.
- Clean grease filters frequently. Grease accumulated on filters can ignite.
- Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite.
- Use proper pan size. Always use cookware appropriate for the size of the surface element.
- For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

CAUTION:

- For indoor use only.

- To reduce the risk of fire and to properly exhaust air, be sure to duct air outside. Do not vent exhaust air into spaces within walls or ceilings or into attics, crawl spaces, or garages.
- When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- Ducted fans must always be vented to the outdoors.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, contact Ancona customer service.

Component	Quantity
Main Hood Assembly	1
Chimney (Upper and Lower)	1 set
Mounting Brackets	Included
Damper Flap	1
Oil Cup	1
Baffle Filters	4
Screws and Anchors	Included



Image: Front view of the Ancona 36" Wall Mount Pyramid Range Hood, showcasing its stainless steel finish and pyramid design.

4. SETUP AND INSTALLATION

4.1 Planning the Installation

- Ducting Requirements:** This range hood is designed for top venting (Round 6") and external ventilation only. It is not suitable for internal air recirculation. Ensure proper ducting is in place.
- Mounting Height:** For optimal performance and safety, the bottom of the range hood should be mounted between 24 and 30 inches above the cooking surface.
- Electrical Requirements:** The unit requires 120 Volts, 60 Hz, and 2.3 Amps. A dedicated circuit is recommended.

4.2 Installation Steps

- Prepare the Wall:** Locate wall studs and mark the mounting points for the hood and chimney brackets. Ensure the area is clear of electrical wires or plumbing.
- Install Mounting Brackets:** Securely attach the hood mounting bracket to the wall using appropriate screws and anchors. Ensure it is level.
- Mount the Hood:** Carefully lift the main hood assembly and hang it onto the wall mounting bracket. Ensure it is securely seated.
- Connect Ducting:** Attach the 6-inch round ductwork to the top exhaust outlet of the hood. Seal all connections with

duct tape to prevent air leaks.

5. **Electrical Connection:** Connect the range hood's electrical wiring to your household electrical supply, following local electrical codes. It is recommended to have this step performed by a qualified electrician.
6. **Install Chimney:** Attach the upper and lower chimney sections to the hood and secure them to the chimney bracket on the wall. Adjust the chimney height as needed.
7. **Install Baffle Filters:** Insert the stainless steel baffle filters into their designated slots on the underside of the hood. Ensure they are properly latched.
8. **Install Oil Cup:** Place the oil cup into its designated slot to collect grease.



Image: Diagram showing the dimensions of the Ancona Range Hood, including width, depth, and adjustable chimney height, crucial for installation planning.

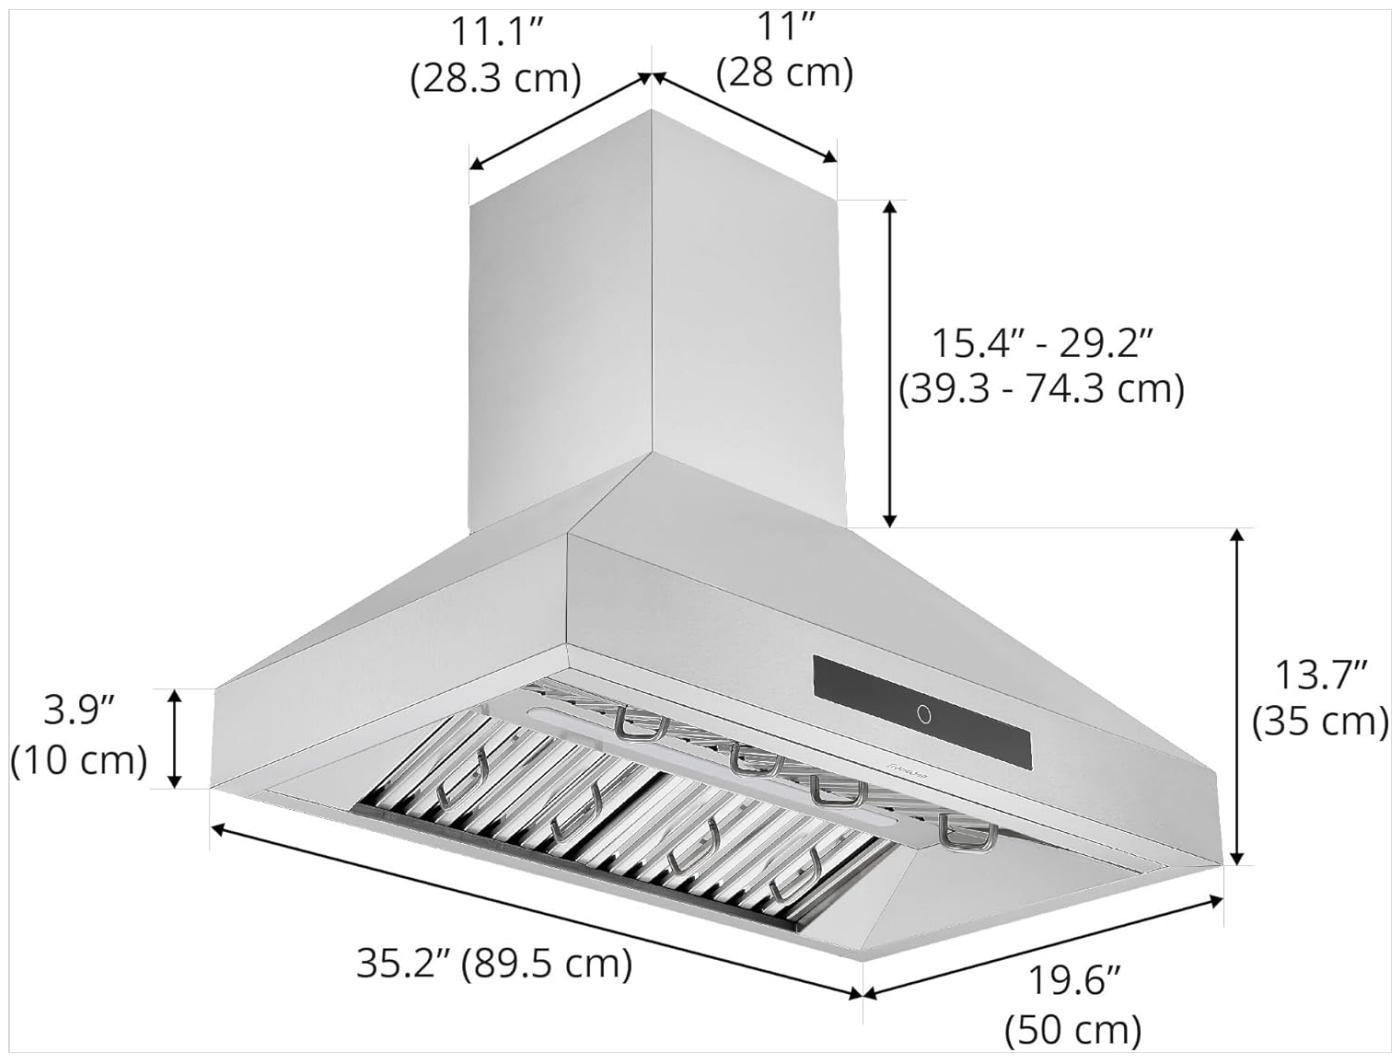


Image: Ancona Range Hood installed above a cooktop in a modern kitchen, demonstrating its appearance in a typical setting.

5. OPERATING INSTRUCTIONS

The Ancona range hood features a 9-speed touch control panel for easy operation.



Image: Close-up view of the touch control panel, highlighting the power button and sleek design.

5.1 Power On/Off

- Press the **Power button** (circle icon) on the touch control panel to turn the hood on or off.

5.2 Fan Speed Control

- Once powered on, use the **+/− buttons** (if present, or implied by touch panel) to adjust the fan speed from 1 (lowest) to 9 (highest).
- Select a lower speed for light cooking and a higher speed for heavy smoke or odors.

5.3 Light Control

- Press the **Light button** (bulb icon, if present, or implied by touch panel) to turn the LED lights on or off.
- The hood is equipped with Pure Lights 1 x 6-Watt LED light, designed for bright and eco-friendly illumination.

5.4 Time Delay Auto Shut-Off

- The hood features a time delay auto shut-off function. Consult the full manual for specific programming instructions for this feature. This allows the hood to continue running for a set period after cooking to clear residual odors.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your range hood.

6.1 Cleaning Baffle Filters

- The stainless steel slanted baffle filters are designed for easy cleaning and are dishwasher safe.
- Frequency:** Clean filters frequently, ideally after every 30 hours of operation or at least once a month, depending on cooking habits.
- Removal:** To remove, locate the release tabs or handles on each filter and pull them down or slide them out.
- Cleaning:** Wash filters in a dishwasher or by hand using hot water and a non-abrasive detergent. Ensure they are completely dry before reinstallation.
- Reinstallation:** Slide the clean filters back into their slots until they click into place.



Image: Detailed view of the Clean Filter stainless steel slanted baffle filters and the Pure Lights LED light, showing their design and placement.

6.2 Cleaning Grease Trays

- The stainless steel grease trays effectively recover oil and grease and are dishwasher-safe.
- Frequency:** Empty and clean the grease trays regularly to prevent overflow and maintain hygiene.
- Removal:** Carefully slide out the grease trays from their hidden-from-view design slots.
- Cleaning:** Wash in a dishwasher or by hand with warm, soapy water.
- Reinstallation:** Ensure trays are dry and slide them back into place.

6.3 Exterior Cleaning

- Clean the exterior of the hood with a soft cloth and a mild, non-abrasive stainless steel cleaner.
- Do not use abrasive pads or cleaners that may scratch the stainless steel finish.
- Wipe in the direction of the grain for best results.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Hood does not operate	No power supply; Circuit breaker tripped; Wiring issue.	Check power cord connection; Reset circuit breaker; Consult a qualified electrician.
Poor suction performance	Clogged filters; Improper ducting; Damper stuck; Hood mounted too high.	Clean baffle filters; Check ductwork for obstructions or leaks; Ensure damper opens freely; Verify mounting height (24-30 inches).
Excessive noise	Loose parts; Obstruction in fan; Improper installation; Ducting issues.	Check for loose screws or components; Remove any obstructions from fan blades; Ensure proper installation and secure mounting; Inspect ductwork for kinks or restrictions.
Lights not working	LED light failure; Wiring issue.	Contact customer service for LED light replacement; Consult a qualified electrician.

8. SPECIFICATIONS

Feature	Detail
Model Number	AN-17035SS
Dimensions (Product)	50.01 x 89.41 x 109.22 cm (D x W x H)
Weight	15.51 kg
Material	Premium Grade 430 Stainless Steel
Air Flow Capacity	600 CFM (Cubic Feet Per Minute)
Number of Speeds	9
Controls Type	Touch Control Panel
Lighting	1 x 6-Watt LED (Pure Lights)
Filter Type	Stainless Steel Slanted Baffle Filters (Dishwasher Safe)
Grease Collection	Stainless Steel Grease Trays (Dishwasher Safe)
Venting Type	Top Venting (Round 6"), External Ventilation Only
Voltage	120 Volts
Frequency	60 Hz

Feature	Detail
Amperage	2.3 Amps
Noise Level	46 dB
Certification	cETLus
UPC	676195972783

9. WARRANTY AND SUPPORT

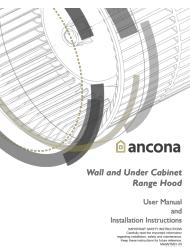
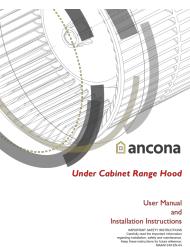
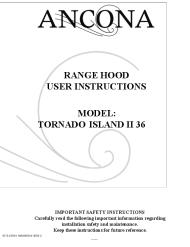
Ancona products are manufactured to the highest quality standards. For warranty information, technical support, or to order replacement parts, please contact Ancona customer service directly.

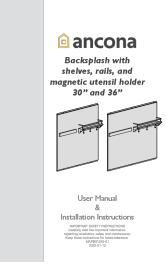
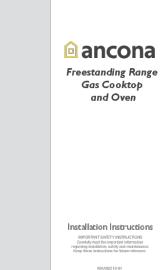
Please have your model number (AN-17035SS) and proof of purchase readily available when contacting support. For more information, visit the official Ancona website or refer to the warranty card included with your product.

© 2024 Ancona. All rights reserved.

This manual is subject to change without notice.

Related Documents - AN-17035SS

	<p><u>Ancona Wall and Under Cabinet Range Hood User Manual and Installation Instructions</u></p> <p>Comprehensive user manual and installation guide for Ancona wall and under cabinet range hoods. Covers safety instructions, parts, dimensions, installation steps, operation, troubleshooting, and maintenance.</p>
	<p><u>Ancona Under Cabinet Range Hood MAAN1249-EN-04 User Manual and Installation Guide</u></p> <p>This comprehensive user manual and installation guide provides detailed instructions for the Ancona Under Cabinet Range Hood (Model MAAN1249-EN-04). It covers essential safety information, step-by-step installation procedures, operation guidelines, maintenance tips, troubleshooting advice, and product specifications for optimal use and care.</p>
	<p><u>Ancona TORNADO ISLAND II 36 Range Hood User Instructions and Installation Guide</u></p> <p>Comprehensive user instructions and installation guide for the Ancona TORNADO ISLAND II 36 range hood. Learn about safety, setup, operation, maintenance, and troubleshooting for optimal kitchen air quality.</p>

	<p><u>Ancona Backsplash with Shelves, Rails, and Magnetic Utensil Holder Installation Manual</u></p> <p>Comprehensive user manual and installation guide for the Ancona 30-inch and 36-inch backsplash featuring shelves, rails, and a magnetic utensil holder. Includes parts list, measurements, installation steps, and care instructions.</p>
	<p><u>Ancona Freestanding Gas Range Installation and User Manual</u></p> <p>This manual provides essential installation instructions, safety guidelines, and usage tips for the Ancona Freestanding Gas Cooktop and Oven (Model MAAN2213-01). Learn about setup, gas conversion, operation, and maintenance.</p>
	<p><u>Ancona Comfort 6 Dual Towel Warmer User Manual and Installation Instructions</u></p> <p>This document provides comprehensive user and installation instructions for the Ancona Comfort 6 Dual Towel Warmer. It includes safety precautions, required tools, step-by-step installation guides for both plug-in and hardwire methods, and operation and maintenance information.</p>