Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WOPET FT50D

WOPET Automatic Cat Feeder FT50D User Manual

Model: FT50D

Product Overview



The WOPET Automatic Cat Feeder FT50D is designed to provide scheduled meals for up to two cats or small animals, featuring dual stainless steel bowls and programmable meal times and portion sizes.


The WOPET Automatic Cat Feeder FT50D is an advanced pet feeding solution, ideal for households with multiple cats or small dogs. It ensures your pets receive their meals on a consistent schedule, promoting healthy eating habits. The feeder boasts a generous 4-liter capacity, dual power options for reliability, and a user-friendly interface for easy programming.

Setup Instructions

Follow these steps to set up your WOPET Automatic Cat Feeder:

1. **Unpacking and Assembly:**

   Carefully remove all components from the packaging. Ensure you have the main feeder unit, tank lid, tank, tank base, meal splitter, and two stainless steel bowls.

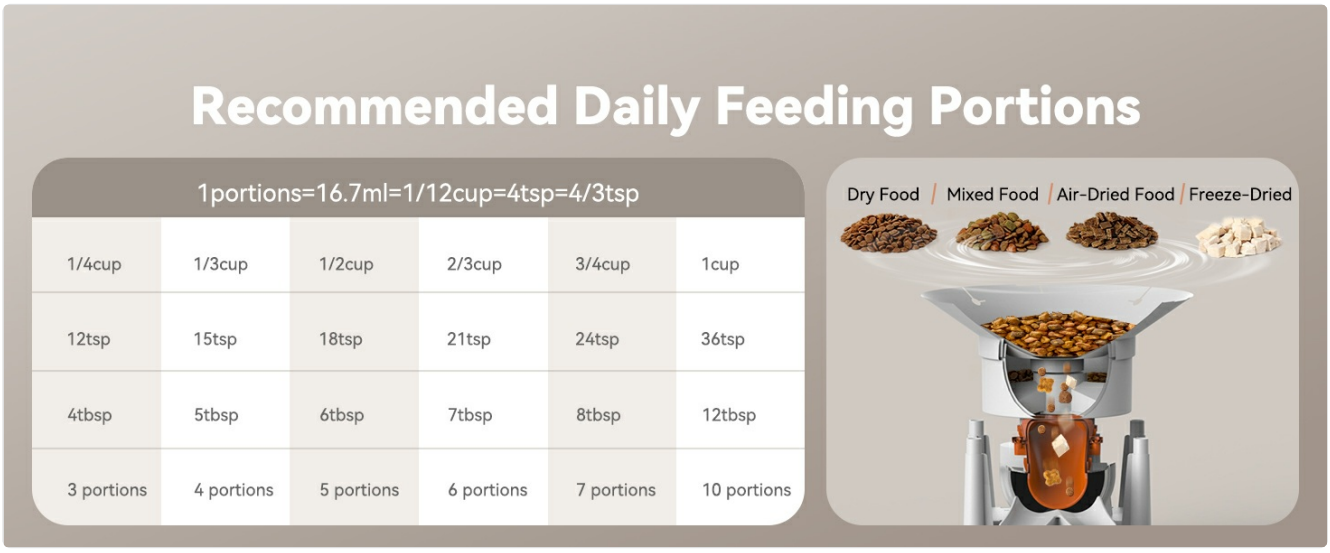

Visual guide for assembling the feeder components.

- Rotate the tank lid counter-clockwise to align with the "unlock" sign, then lift it up.
- Lift the food tank at the same time and remove it from the base.
- Open the desiccant bag compartment on the underside of the tank lid and insert the desiccant bag to maintain food freshness. Close the compartment securely.
- Assemble the two trays in place and connect the bowls connector.
- Install the meal splitter and place the stainless steel bowls into the trays.

2. **Power Supply:**

   Connect the Type-C power cable to the main base of the feeder and plug it into a wall outlet. For backup power, install 3 alkaline D batteries (not included) in the battery compartment at the bottom of the unit. This ensures continuous operation during power outages.



The feeder supports both DC power and D-cell battery backup.

3. **Filling the Food Tank:**

   Pour dry pet food into the tank. The feeder is designed for dry kibble sizes between 2-12mm. Do not use wet or moist food. The transparent window allows you to monitor the food level.



The transparent window allows for easy monitoring of food levels.

After filling, align the arrow on the tank to the "locked" icon on the lid and turn the lid clockwise to secure it. Ensure the lid is tightly sealed to maintain food freshness.

Operating Instructions

The WOPET Automatic Cat Feeder features an intuitive LCD screen for programming. Refer to the video below for a visual guide on interface operation.

Your browser does not support the video tag.


Official WOPET video demonstrating the interface operation and setup of the automatic cat feeder.

Setting the Current Time

1. Ensure the feeder screen is unlocked. If locked, press and hold the setting button (gear icon) for 2 seconds to unlock. The clock icon will flash when powered.
2. Press the setting button to set the hour. The hour digits will flash. Use the increase (up arrow) or decrease (down arrow) buttons to adjust the hour. Hold the buttons for faster adjustment.
3. Press the setting button again to save the hour and move to set the minute. Use the increase or decrease buttons to adjust the minute.
4. Press the setting button one last time to save the current time.

Programming Meal Times and Portions (Up to 6 Meals)

The feeder allows for up to 6 programmable meals per day, with portion sizes ranging from 1 to 20 (each portion is approximately 12g).

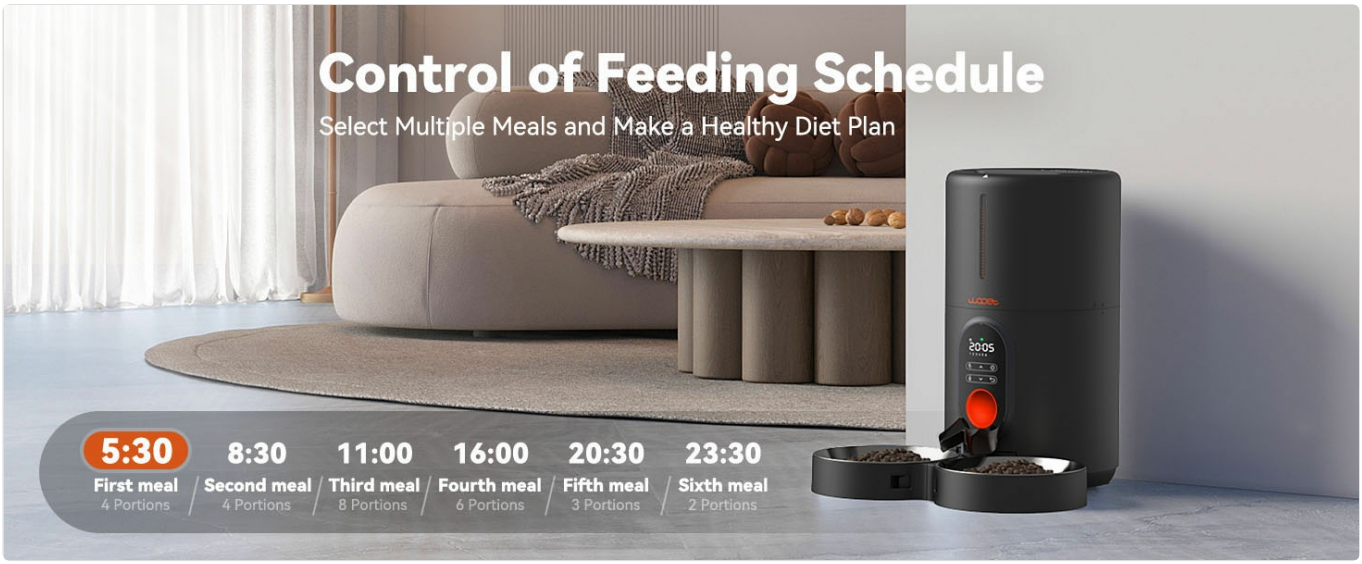

Example of a feeding schedule with multiple meals and portions.

1. From the main interface, press the decrease button (down arrow) to enter meal setting mode. The first meal icon (1)

will flash.

2. Press the setting button to set the hour for the first meal. Adjust using increase/decrease buttons.
3. Press the setting button to save the hour and move to set the minute. Adjust using increase/decrease buttons.
4. Press the setting button to save the minute and move to set the portion size. Adjust using increase/decrease buttons (P-01 to P-20).
5. Press the setting button to save the portion.
6. To set subsequent meals (2-6), press the decrease button to move to the next meal number and repeat the hour, minute, and portion setting steps.
7. After setting all desired meals, press the return button (curved arrow) to exit the programming interface.

Modifying Saved Meals

1. Ensure the screen is unlocked. Press the setting button once to make the clock icon flash.
2. Use the increase or decrease buttons to navigate to the specific meal number you wish to modify.
3. Press the setting button to enter the modification mode for that meal. You can then adjust the time and portion size as needed.
4. Press the return button to save changes and exit.

Recording a Personalized Meal Call

You can record a 10-second audio message to call your pets to their meals.

1. Ensure the screen is unlocked.
2. Press and hold the recording button (microphone icon) for 3 seconds. You will hear a beep, indicating recording has started.
3. Record your message (up to 10 seconds). A double beep will signal that your recording is successfully saved.
4. To play the recording, press the recording button briefly. You can set the recording to play 0 to 2 times per meal during meal programming.

Manual Feeding

To dispense one portion of food manually:


- Ensure the screen is unlocked.
- Press the manual feed button (hand icon). One portion of food will be dispensed.

Maintenance and Cleaning

Regular cleaning ensures the longevity and hygiene of your pet feeder.

- **Disassembly for Cleaning:**

  The tank lid, tank, tank base, and food bowls are all removable for easy cleaning. It is recommended to hand wash these components.

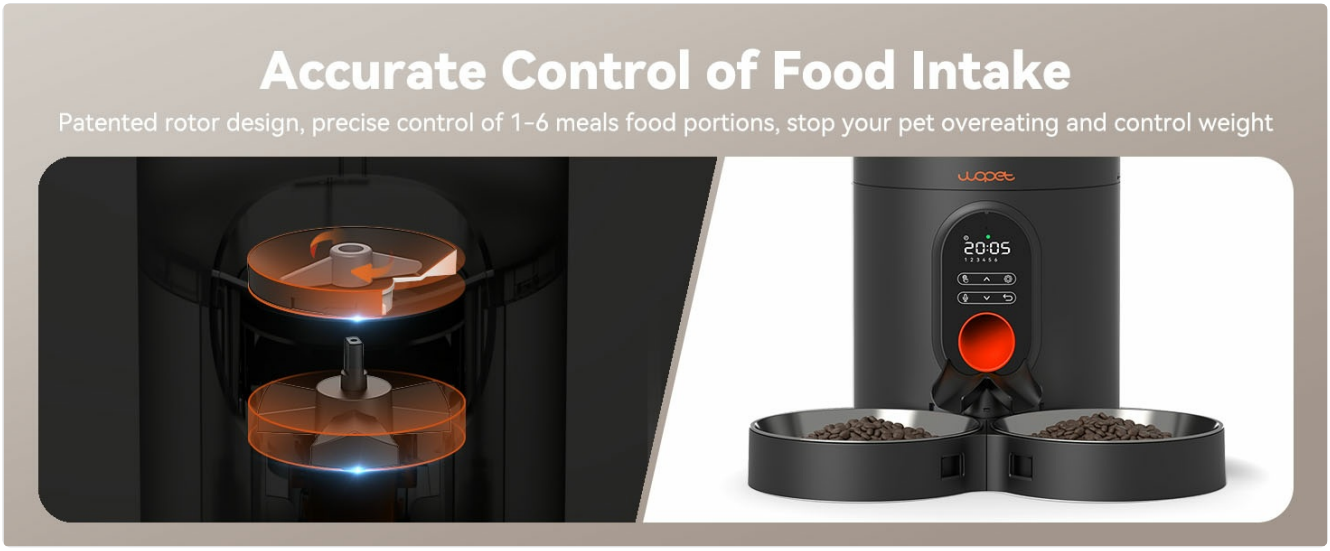

All removable parts of the feeder for easy cleaning.

- **Cleaning the Turnplate:**

  To clean the internal turnplate mechanism:

  a. Remove the link stopper.
  b. Turn the turnplate counter-clockwise to the unlocked position and lift it up.
  c. Clean the turnplate and the internal area.
  d. To re-install, put the turnplate into the feeder base, turn it clockwise to the locked position, and buckle the link stopper into the base slot.

- **Desiccant Bag Replacement:**

  Replace the desiccant bag every 2-4 weeks to ensure optimal food freshness.

Troubleshooting

If you encounter issues with your WOPET Automatic Cat Feeder, try the following solutions:

- **Feeder not dispensing food:**
  - Check if the power adapter is securely plugged in and if the D batteries (if used) are correctly installed and not depleted.
  - Ensure the food tank is not empty.
  - Verify that the kibble size is within the recommended 2-12mm range. Larger kibble may cause clogging.
  - Check if the turnplate is installed correctly and not jammed.
- **Screen is locked/unresponsive:**
  - Press and hold the setting button (gear icon) for 2 seconds to unlock the screen.
- **Incorrect time/meal schedule:**
  - Refer to the "Setting the Current Time" and "Programming Meal Times and Portions" sections to re-program.
- **Reset to Factory Default:**

  To reset the feeder to its original factory settings, press and hold both the setting button (gear icon) and the return button (curved arrow) simultaneously for 3 seconds until a beep is heard. This will clear all programmed settings.

Specifications

Feature	Detail
Model Name	FT50D
Capacity	4 Liters / 17 Cups
Portion Size	1-20 portions (approx. 12g per portion)
Meals per Day	Up to 6 meals
Kibble Size	2-12mm (dry food only)
Power Supply	DC Power Adapter, 3 x D Alkaline Batteries (backup, not included)
Dimensions (LxWxH)	8 x 7.6 x 13.2 inches
Item Weight	3.63 pounds
Material	Stainless Steel (bowls)
Care Instructions	Hand Wash Only (removable components)

Warranty and Support

The WOPET Automatic Cat Feeder FT50D comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For technical support, troubleshooting assistance, or warranty claims, please contact WOPET customer service. You can find contact information on the official WOPET website or through your purchase platform.

Please retain your proof of purchase for warranty validation.

© 2024 WOPET. All rights reserved.
WOPET is a registered trademark.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D5CPQZ1C

More documents and user manuals: **https://manuals.plus/**