

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [BWE](#) /

> [BWE Exposed Shower Faucet Set \(Model 8016-Anti\) - Installation and User Manual](#)

BWE 8016-Anti

BWE Exposed Bathroom Shower Faucet Set

MODEL: 8016-ANTI (ANTIQUE BRASS)

User and Installation Manual

1. IMPORTANT SAFETY INFORMATION

- **Professional Installation Recommended:** If you are unsure about any installation steps, consult a qualified plumber.
- **Water Supply:** Ensure the main water supply is turned off before beginning installation.
- **Tools:** Use appropriate tools for installation. Avoid over-tightening components to prevent damage.
- **Cleaning:** Do not use abrasive cleaners, harsh chemicals, or scouring pads on the faucet finish. Use a soft cloth with mild soap and water.
- **Temperature:** Always test water temperature before use to prevent scalding.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

All Parts in the Package



Image: All components included in the package, laid out for inspection.

- Shower Faucet Body
- Brass Diverter
- Rain Shower Head (8-inch)
- Handheld Shower Spray
- Shower Hose
- Hand Shower Holder
- Shower Pipes (Vertical and Horizontal)
- Tub Spout with Two Handles
- All Mounting Hardware (including gaskets, screws, wall anchors)
- User Manual

3. PRODUCT FEATURES

- **Triple Functions:** Easily switch between rainfall shower, handheld shower, and tub spout using the diverter knob.
- **Solid Brass Construction:** Durable antique brass finish resists corrosion and rust.
- **Adjustable Height:** Shower height can be adjusted from 40.5 inches to 53.1 inches (103 cm - 135 cm). The

handheld bracket is also adjustable.

- **High-Pressure Rain Shower:** Provides a strong and stable water flow, with adjustable pressure for water conservation.
- **Double Handle Control:** Separate cross handles for hot and cold water.

4. PRODUCT DIMENSIONS

Refer to the diagram below for detailed product dimensions.

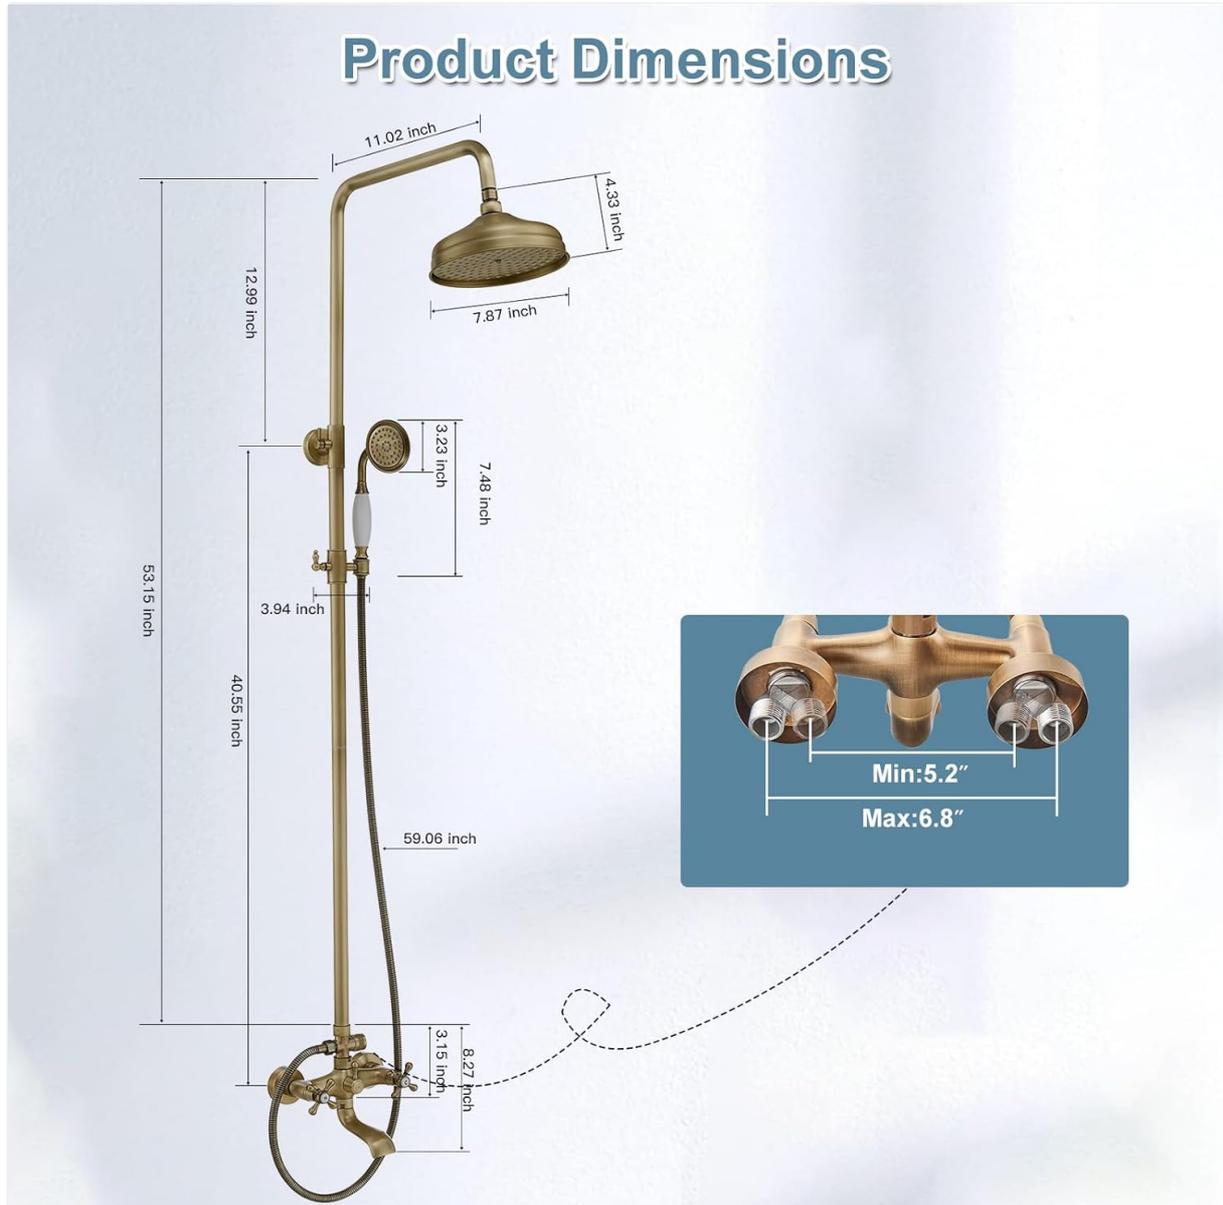


Image: Detailed product dimensions, including overall height (53.15 inches), shower head diameter (8 inches), and faucet spacing (Min 5.2" - Max 6.8").

- **Overall Height (Adjustable):** 40.5 inches - 53.1 inches (103 cm - 135 cm)
- **Rain Shower Head Diameter:** 8 inches
- **Faucet Body Dimensions:** 9.98 x 2 x 2.7 inches
- **Item Weight:** 10.13 pounds (4.6 Kilograms)
- **Mounting Type:** Wall Mount

5. INSTALLATION GUIDE

Follow these steps carefully for proper installation of your BWE Exposed Bathroom Shower Faucet Set.

Video: Official installation guide for the BWE Exposed Shower Faucet Set, demonstrating each step from unboxing to final assembly.

Step 5.1: Prepare Wall Connections

1. Ensure water supply is turned off.
2. Install the S-unions into the wall water outlets. Apply plumber's tape to the threads for a watertight seal.
3. Thread the decorative escutcheons onto the S-unions.



Image: S-unions being installed into the wall, followed by decorative escutcheons.

Step 5.2: Mount Faucet Body

1. Insert rubber gaskets into the faucet body connections.
2. Carefully align the faucet body with the S-unions and tighten the nuts. Use a cloth to protect the finish when using a wrench.

Step 5.3: Install Diverter and Shower Pipe

1. Attach the brass diverter to the top outlet of the faucet body, ensuring a gasket is in place.
2. Assemble the vertical shower pipes.

3. Connect the assembled vertical pipe to the diverter.

Step 5.4: Secure Wall Bracket

1. Position the wall bracket on the vertical pipe and mark the drilling points on the wall.
2. Drill holes and insert wall anchors.
3. Secure the wall bracket to the wall with screws.
4. Attach the decorative cover to the wall bracket.

Step 5.5: Attach Rain Shower Head and Handheld Shower

1. Thread the 8-inch rain shower head onto the horizontal shower arm.
2. Connect the shower hose to the diverter outlet and the handheld shower spray.
3. Place the handheld shower spray into its adjustable holder on the vertical pipe.



Image: The 8-inch rainfall shower head, showing water distribution.



Image: The handheld shower sprayer, demonstrating its 360-degree rotation and adjustable height on the shower bar.

6. OPERATING INSTRUCTIONS

Your BWE Exposed Bathroom Shower Faucet Set offers three distinct water functions.



Image: Visual representation of the three water output functions: rain shower, handheld shower, and tub spout.

1. **Water Flow Control:** Use the two cross handles (marked 'H' for Hot and 'C' for Cold) to control water temperature and flow intensity. Turn counter-clockwise to increase flow.
2. **Function Selection:** The diverter knob, located on the faucet body, allows you to switch between the three functions:
 - **Rainfall Shower:** Turn the diverter to direct water to the overhead rain shower head.
 - **Handheld Shower:** Turn the diverter to activate the handheld spray.
 - **Tub Spout:** Turn the diverter to allow water to flow from the tub spout.
3. **Height Adjustment:** To adjust the height of the rain shower head, loosen the knob on the vertical pipe, slide the upper pipe to the desired height, and re-tighten the knob. The handheld shower bracket can also be adjusted along the vertical pipe.

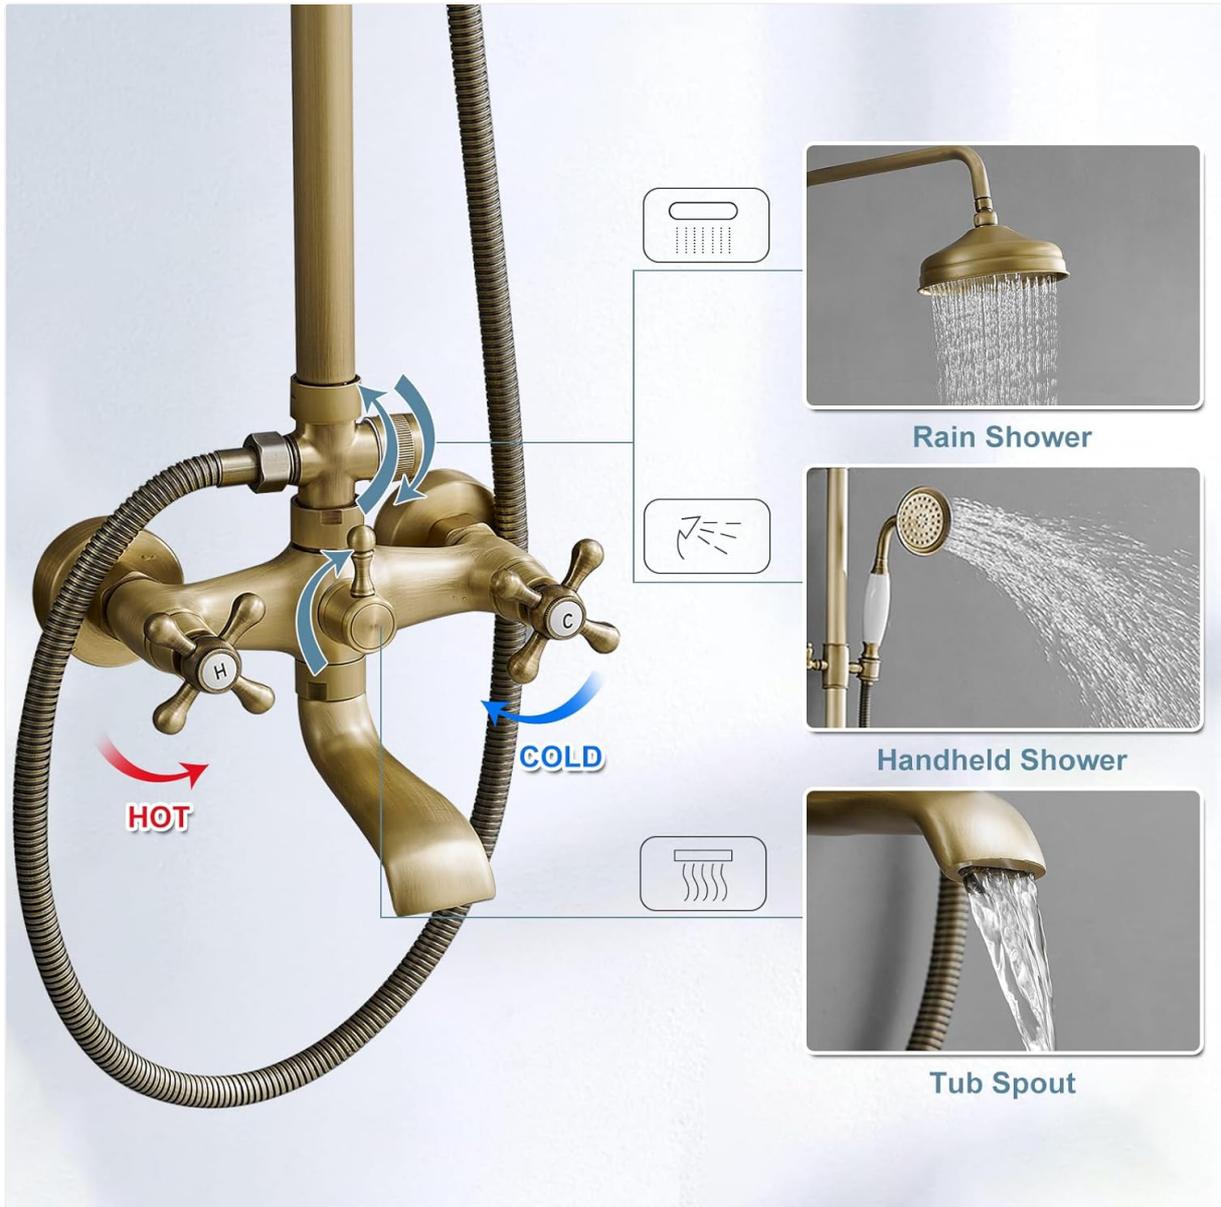


Image: Illustration of the height adjustment mechanism for the main shower pipe.

7. MAINTENANCE

Proper care will ensure the longevity and appearance of your shower faucet set.

- **Cleaning the Finish:** Clean regularly with a soft, damp cloth and mild soap. Rinse thoroughly and dry immediately to prevent water spots. Avoid abrasive cleaners, ammonia-based products, or harsh chemicals, as these can damage the antique brass finish.

- **Shower Head Nozzles:** Periodically clean the silicone nozzles of the rain shower head and handheld spray to remove mineral buildup. Gently rub the nozzles to dislodge any deposits.
- **Filter Maintenance:** The shower head includes a filter to prevent clogging. Periodically check and clean this filter as needed.
- **Leak Prevention:** Ensure all connections are securely tightened. If leaks occur, check gaskets and re-tighten connections.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Low Water Pressure	Clogged shower head nozzles or filter.	Clean shower head nozzles and check the internal filter for debris. Ensure main water supply is fully open.
Leaks at Connections	Loose connections or damaged gaskets.	Ensure all connections are tightened. Check and replace any worn or damaged rubber gaskets. Apply plumber's tape to threaded connections.
Water Not Diverting Properly	Diverter knob not fully engaged or internal issue.	Ensure the diverter knob is fully turned to the desired position. If the issue persists, contact customer support.
Difficulty Adjusting Height	Adjustment knob is too tight or mineral buildup.	Loosen the adjustment knob sufficiently. Clean the vertical pipe if mineral buildup is restricting movement.

9. SPECIFICATIONS

Feature	Detail
Brand	BWE
Model Number	8016-Anti
Color	Antique Brass
Material	Brass
Finish Type	Antique Brass
Number of Handles	2
Mounting Type	Wall Mount
Head Size	8 Inch
Adjustable Height	Yes (40.5 - 53.1 inches)
Product Dimensions	9.98 x 2 x 2.7 inches (faucet body)
Item Weight	10.13 pounds (4.6 Kilograms)

10. WARRANTY AND SUPPORT

BWE products are designed for quality and durability. If you encounter any problems with your product or during installation, please contact BWE customer support.

You can reach us through Amazon or via e-mail. We aim to respond within 24 hours to assist you with your concerns.