

TELESIN P3-FS-01

TELESIN Magnetic Tablet Floor Stand Holder

Model: P3-FS-01

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your TELESIN Magnetic Tablet Floor Stand Holder. Please read this manual thoroughly before use to ensure proper functionality and safety.

The TELESIN Magnetic Tablet Floor Stand Holder is designed for versatile use with phones and tablets, offering a stable and adjustable solution for recording, live-streaming, viewing, and other activities. Its magnetic attachment system allows for quick and easy device mounting, while the robust aluminum alloy construction ensures durability and stability.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Packaging Box
- Magnetic Ring
- Arm Stand (Cantilever Bracket)
- Telescopic Rod
- Base
- Hex Wrench
- Magnetic Plate (for non-magnetic devices)
- User Manual
- Cleaning Kit
- Hand Strap
- Base Mounting Screw

Bed Good Companion

Adjustable Design Provides a Perfect View in Bed



Figure 2.1: All components included in the TELESIN Magnetic Tablet Floor Stand Holder package.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your floor stand holder:

1. **Attach the Base:** Flip the base to locate the screw hole. Insert the base installation screw into the hole. Align the telescopic pole's base with this screw and tighten it slightly. Use the large hex key to fully tighten the base screw, ensuring a stable connection.
2. **Connect the Cantilever Bracket:** Align the threads of the cantilever bracket with the top of the telescopic pole. Screw them together until securely tightened.
3. **Install the Magnetic Ring:** Unscrew the top screw ring of the cantilever bracket. Insert the ball head of the magnetic ring into this screw ring. Re-attach the magnetic ring to the cantilever bracket and tighten the screw

ring. The magnetic ring should now rotate freely.

4. **Adjust Pivot Tightness:** If needed, use the provided hex key to adjust the pivot tightness on the cantilever bracket for your preferred movement resistance.
5. **For Non-Magnetic Devices:** If your phone or tablet does not have a built-in magnetic function, use the complimentary magnetic plate. Affix this magnetic plate to the back of your device or its case to enable magnetic attachment to the stand.

Video 3.1: Step-by-step assembly instructions for the TELESIN Magnetic Tablet Floor Stand Holder.



Figure 3.1: The weighted metal base (26cm square) provides enhanced stability, preventing wobbling or tipping.

1.6M Height Extendable And Wide Compatibility



Figure 3.2: Close-up of the magnetic ring attachment, showing secure device mounting.

4. OPERATING INSTRUCTIONS

The TELESIN Magnetic Tablet Floor Stand Holder offers flexible positioning for various uses:

- **Magnetic Attachment:** Simply bring your magnetic-compatible phone or tablet close to the magnetic ring. The strong N52 magnets will securely hold your device in place. For non-magnetic devices, ensure the magnetic plate is properly affixed.
- **360° Universal Rotation:** The damped metal pivot allows for 360° bidirectional rotation. This enables seamless switching between vertical (portrait) and horizontal (landscape) orientations, as well as various angles including elevation shots and panoramic views.
- **Height Adjustment:** The segmented aluminum alloy rod is adjustable from 0.6 meters (23 inches) to 1.6

meters (62 inches). Loosen the diamond-patterned knob, adjust the height to your desired level, and then tighten the knob to secure it.

- **Folding for Storage:** The two-way damping pivot and round tube rod design allow the stand to be easily folded for convenient storage when not in use, saving space.

Video 4.1: Demonstration of magnetic attachment, rotation, height adjustment, and folding for storage.

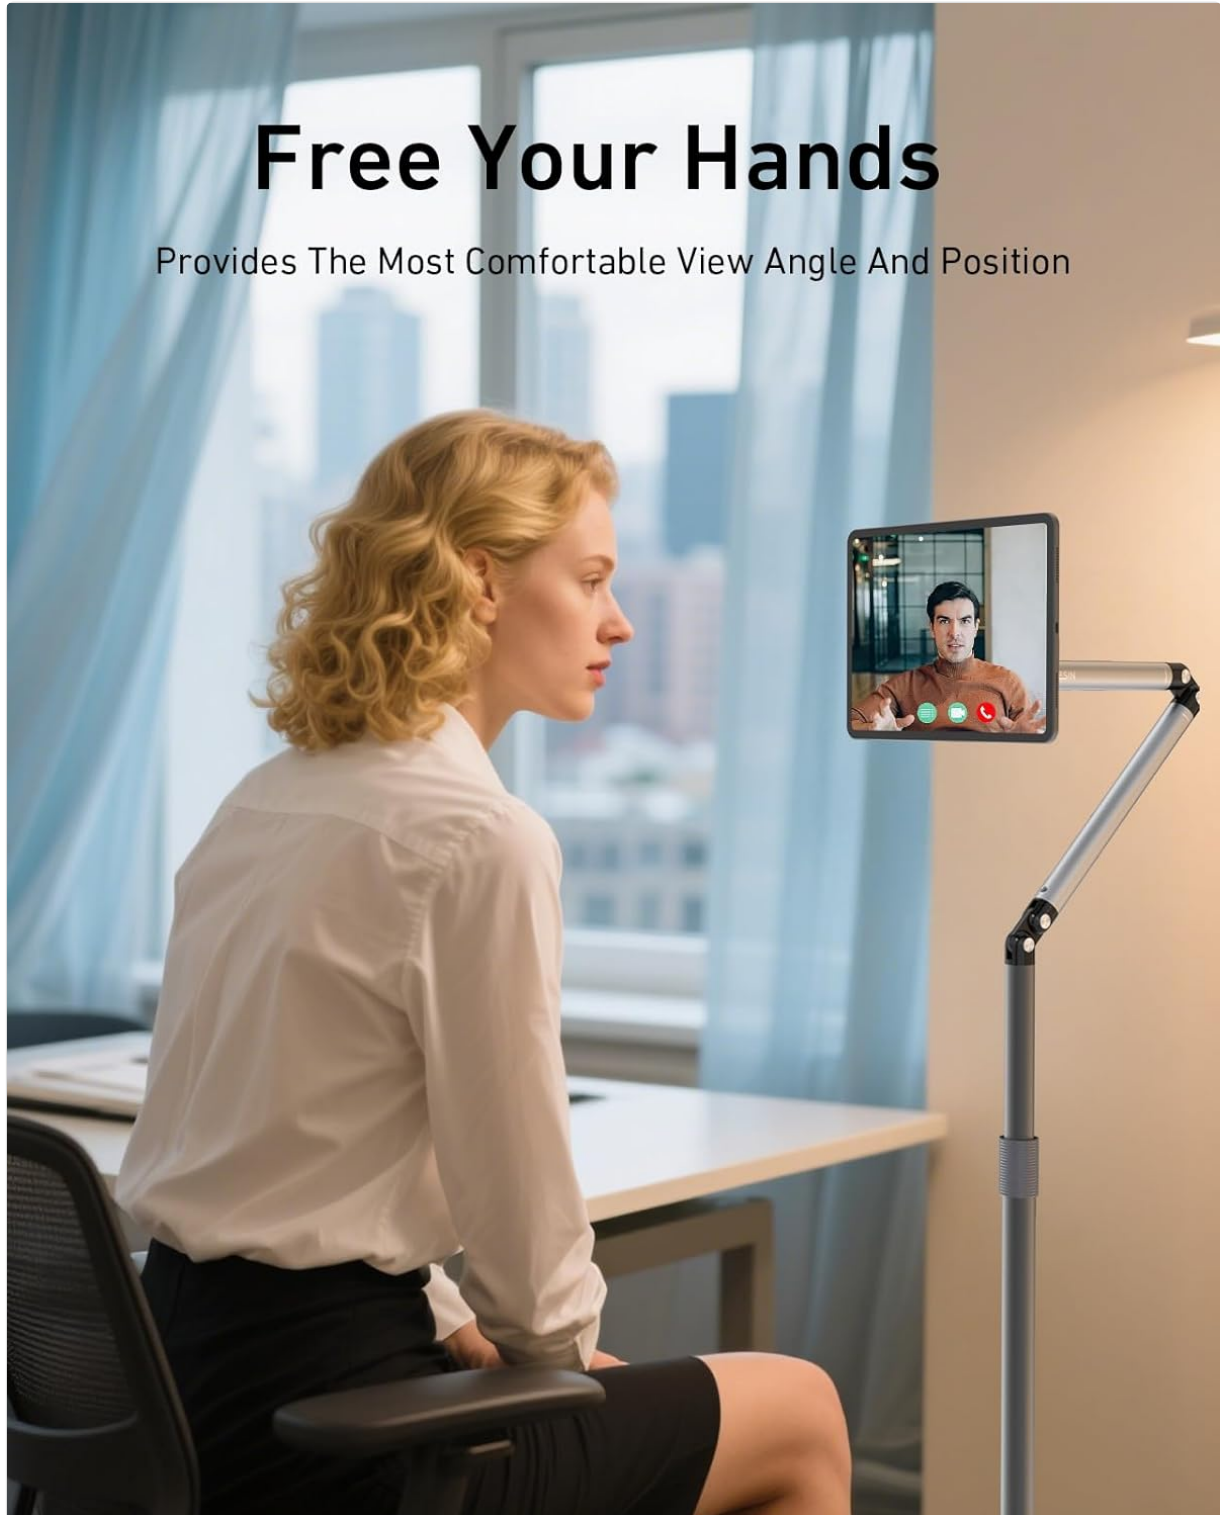


Figure 4.1: The stand's height can be adjusted from 23 inches to 62 inches for various viewing and recording needs.

Package Contents

- | | | |
|---------------------|---------------------------|-------------------|
| 1 Packaging Box *1 | 2 Magnetic Ring *1 | 3 Arm Stand *1 |
| 4 Telescopic Rod *1 | 5 Base *1 | 6 Hex Wrench *1 |
| 7 Magnetic Plate *1 | 8 User Manual *1 | 9 Cleaning Kit *1 |
| 10 Hand Strap *1 | 11 Base Mounting Screw *1 | |



Figure 4.2: The adjustable design provides a perfect view for watching content while relaxing in bed.

5. KEY FEATURES

- **Magnetic Ring Attachment:** Features an ultra-avant-garde magnetic ring design with built-in N52 strong magnets for quick, one-handed attachment and detachment of devices. Eliminates the need for traditional phone clips.
- **Universal Rotation:** Equipped with a 360° bidirectional damped metal pivot, allowing for flexible adjustment to various angles including vertical, horizontal, elevation, and 360° panoramic shots.
- **Extended Height and Wide View:** Designed with a segmented aluminum alloy rod, offering flexible height adjustment from 0.6M to 1.6M. The knob features a diamond pattern for enhanced grip and aesthetic appeal.
- **Weighted Metal Base:** Features a large, centered metal square base and a spiral collar design for even weight distribution, ensuring exceptional stability and preventing wobbling. An EVA non-slip pad on the bottom further enhances stability.
- **Infinitely Expandable Designs:** Includes two 1/4 threaded ports on the pole for attaching external accessories such as fill lights, expanding creative possibilities for various scenarios like beauty makeup shooting, cooking recording, live broadcasting, and teaching.
- **Easy Folding and Storage:** The two-way damping pivot and round tube rod allow for easy folding, making the stand compact for storage and transport.



Figure 5.1: The stand supports various modes like selfie, overhead, and side views for diverse content creation.



Figure 5.2: The stand's expandable design allows for attachment of accessories like ring lights for professional setups.

6. SPECIFICATIONS

Feature	Detail
Brand	TELESIN
Model Number	P3-FS-01
Material	Aluminum Alloy
Color	Black
Mounting Type	Floor Stand
Fastening Type	Magnetic
Adjustable Length	Yes (0.6M - 1.6M / 23 inches - 62 inches)
Compatible Devices	Phones (e.g., iPhone 16), Tablets (4.7"-15.6")
Special Features	Adjustable, Weighted Base, 360° Rotation, Expandable Ports
Parcel Dimensions	54.9 x 29 x 10.8 cm
Item Weight	2.92 kg

7. MAINTENANCE

To ensure the longevity and optimal performance of your TELESIN Magnetic Tablet Floor Stand Holder, follow these maintenance guidelines:

- **Cleaning:** Use the provided cleaning kit or a soft, dry cloth to wipe down the stand regularly. Avoid abrasive cleaners or solvents that could damage the finish.
- **Joints and Pivots:** Periodically check the tightness of all screws and pivot points. If any looseness is detected, use the hex wrench to tighten them as needed. Do not overtighten.
- **Magnetic Ring:** Keep the magnetic ring and the magnetic plate (if used) clean and free of debris to ensure a strong and secure connection.

- **Storage:** When not in use, fold the stand and store it in a dry, cool place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter any issues with your TELESIN Magnetic Tablet Floor Stand Holder, refer to the following common problems and solutions:

- **Stand is unstable or wobbles:**
 - Ensure the base mounting screw is fully tightened with the hex key.
 - Verify that the telescopic pole is securely seated in the base.
 - Check that the cantilever bracket is firmly screwed onto the telescopic pole.
 - Ensure the stand is placed on a flat, stable surface.
- **Device does not attach securely to the magnetic ring:**
 - Confirm your device has a magnetic function or that the magnetic plate is correctly affixed to your device or case.
 - Clean the magnetic ring and the back of your device/magnetic plate to remove any dust or debris that might interfere with the magnetic connection.
 - Ensure the magnetic ring is properly tightened onto the cantilever bracket.
- **Adjustable joints are too loose or too stiff:**
 - Use the provided hex key to adjust the pivot tightness on the cantilever bracket to your desired resistance.
- **Telescopic pole does not extend or retract smoothly:**
 - Loosen the diamond-patterned knob completely before attempting to adjust the height.
 - Ensure no foreign objects are obstructing the telescopic mechanism.

If the problem persists after attempting these solutions, please contact customer support.

9. WARRANTY AND SUPPORT

TELESIN products come with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, warranty claims, or any other inquiries, please visit the official TELESIN website or contact their customer service department.

Online Support: [Visit the TELESIN Store on Amazon](#)