

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [JUBEST](#) /

› [JUBEST 40"x86" Concealed Sliding Barn Door User Manual \(Model: YCM01-40IN\)](#)

JUBEST YCM01-40IN

JUBEST 40"x86" Concealed Sliding Barn Door User Manual

Model: YCM01-40IN | Brand: JUBEST

IMPORTANT SAFETY INFORMATION


- Read all instructions carefully before installation and use.
- This door is heavy. Two people are recommended for lifting and installation.
- Ensure proper wall mounting for the track to support the door's weight.
- Do not recommend to use this door on carpeted floor.
- Keep children and pets away from the door during operation to prevent injury.
- Regularly inspect all hardware for tightness and wear.
- Use appropriate tools and safety gear during installation.






PACKAGE CONTENTS

Verify all components are present before beginning installation.

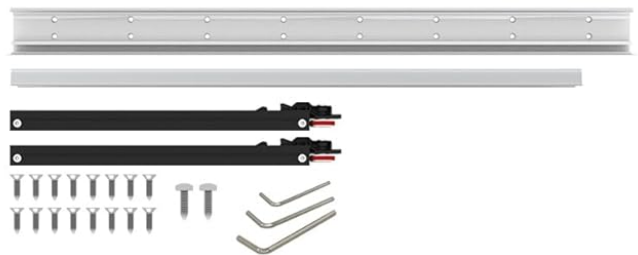PACKING LIST

Concealed Sliding Barn door & Hardware Kit




				
x1	x2	x1	x1	x2

This image displays the complete package contents, including the pre-grooved barn door and all necessary hardware for installation.

- 1 Pre-grooved barn door (40"x86")
- 1 Top track
- 1 Top roller
- 2 Soft close mechanisms
- 2 End caps
- 2 Bottom rollers
- 1 Bottom track
- 1 Floor guide
- Necessary screws and wrench

- Detailed instructions

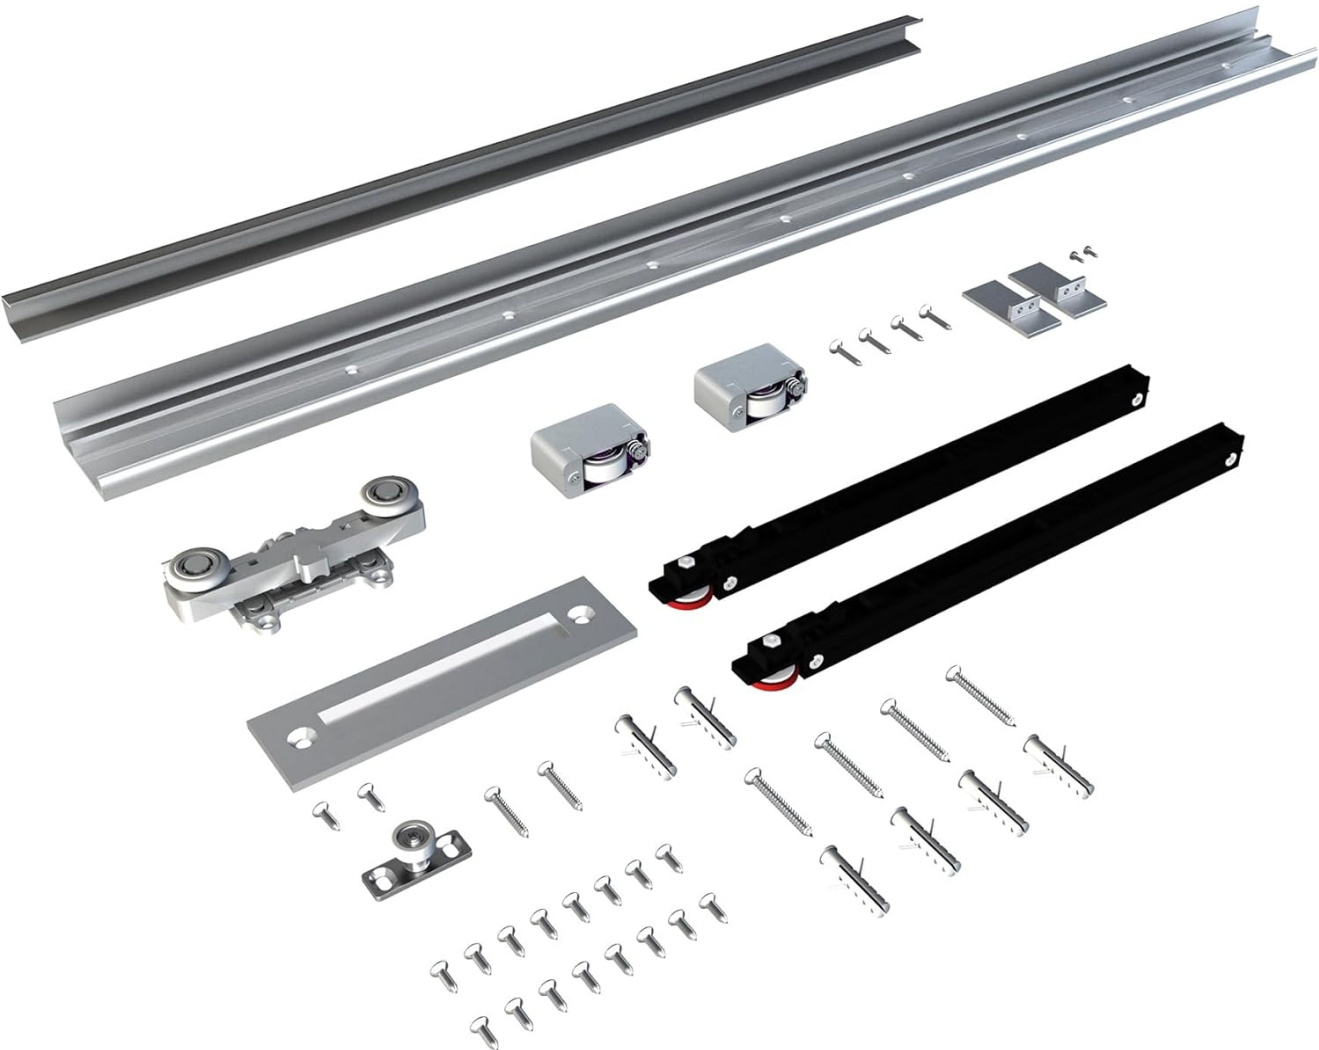

A detailed view of the hardware kit, showing the aluminum tracks, rollers, soft-close mechanisms, and various fasteners.

SPECIFICATIONS

Feature	Detail
Brand	JUBEST
Model Number	YCM01-40IN
Door Dimensions	40" (Width) x 86" (Height) x 1.57" (Thickness)
Fits Door Opening	32"-36" (Width) x 84" (Height)
Material	Aluminum, Wood (PVC covered)
Color	White
Item Weight	61 Pounds
Assembly Required	Yes
Special Features	Concealed track, Soft Close, Waterproof, Scratch-resistant



This image illustrates the overall dimensions of the door panel.



Bottom Roller

Fix the bottom track sides and slide smoothly

*The U channel has been cut at the bottom of the door panel

*Don't recommend to use this door on carpeted floor.

This chart provides detailed sizing recommendations for various door opening dimensions.

SETUP AND INSTALLATION

The JUBEST concealed sliding barn door is designed for straightforward installation. Follow these steps carefully.


Pre-installation Checks

- Ensure your door opening dimensions are compatible with the 40"x86" door (fits 32"-36" wide x 84" high openings).
- Verify the wall structure can support the weight of the door and hardware.
- Gather all tools listed in the detailed instructions provided in the package.



Key Installation Steps

1. Prepare the door panel by cutting the top track to the specified length (door width - 20mm).
2. Install the soft-close mechanisms onto both ends of the top track.
3. Fasten the top track securely onto the door slot using the provided screws.

4. Assemble the bottom wheel mechanism, fastening the bottom wheel body first, then inserting the wheel part.
5. Cut the bottom track to length (door width - 130mm) and insert it into the bottom slot of the door.
6. Remove the anti-jump block from the hanger and mount the hanger onto the wall at the specified height (refer to detailed diagrams in your package for precise measurements).
7. Mount the floor guide onto the floor, ensuring correct alignment with the door's path.
8. Carefully hang the door panel onto the wall-mounted hanger, ensuring the floor guide is correctly positioned in the bottom slot.
9. Adjust the height of the wheel by rotating the screw for a complete fit with the rail.
10. Tighten the anti-jump block screws.
11. Adjust the door panel to be parallel with the wall by loosening the two screws on the hanger (Step 10 in Setup), holding the door parallel, and then re-tightening the screws.

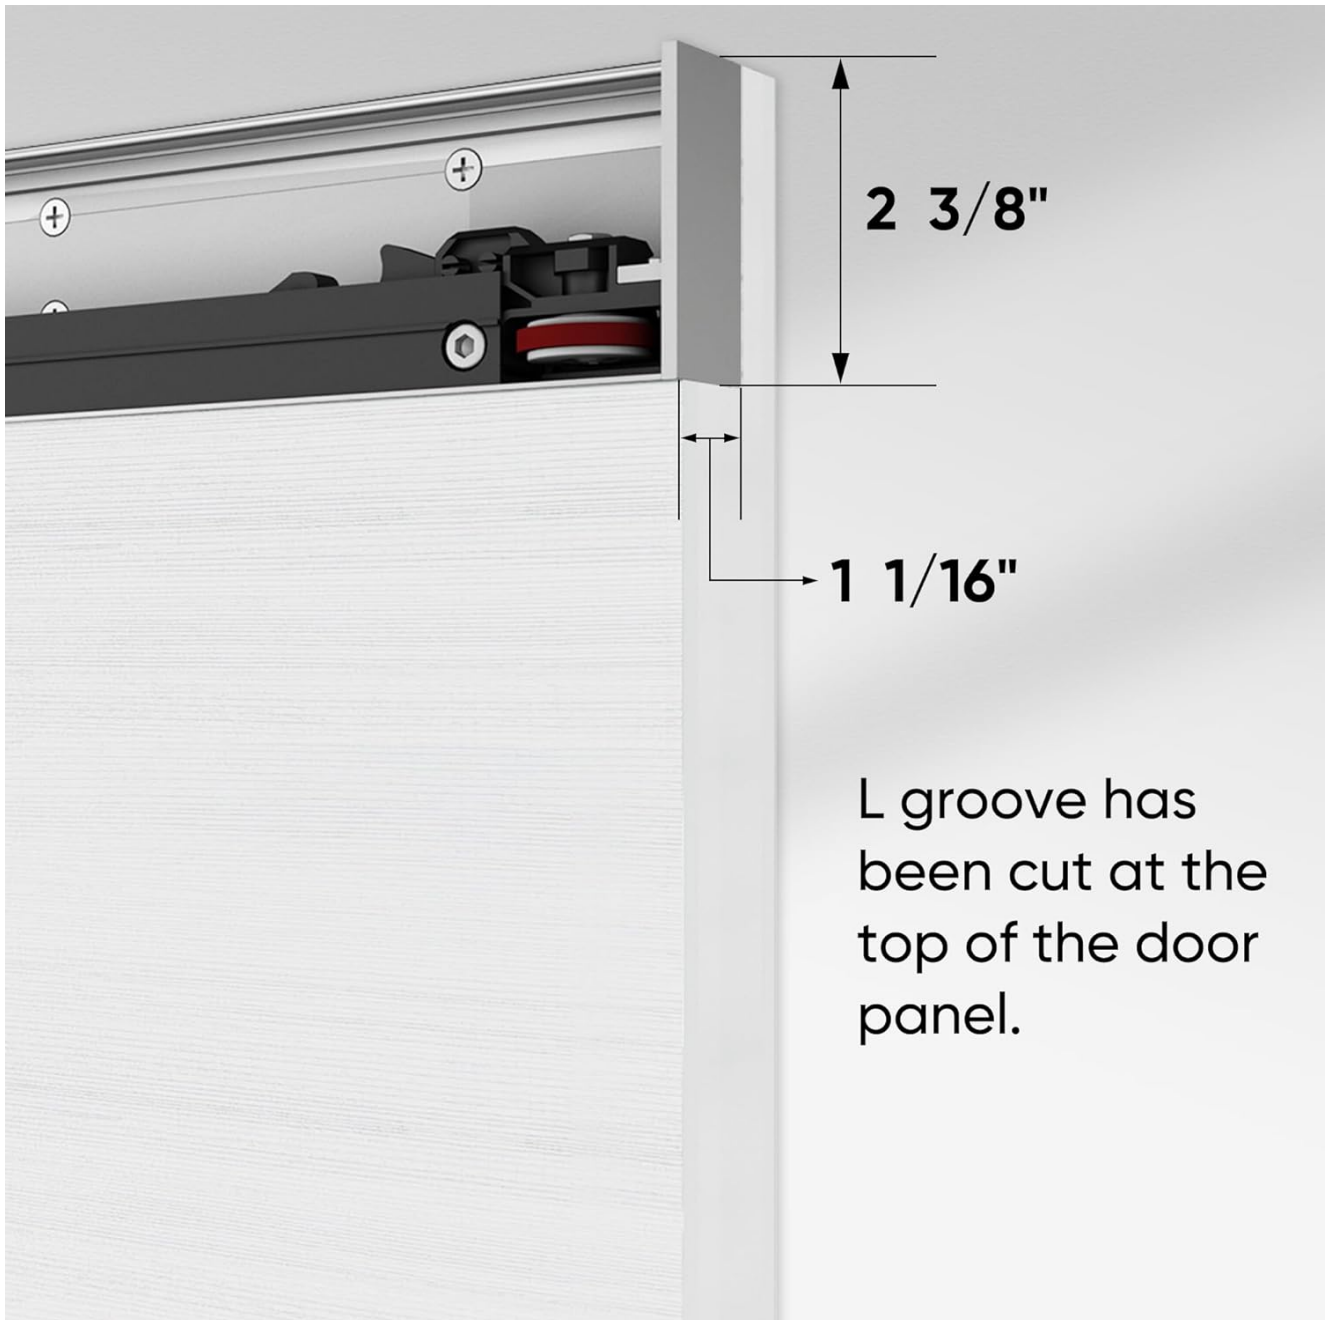

This image highlights the pre-cut L-groove at the top of the door panel, designed for seamless integration with the track.

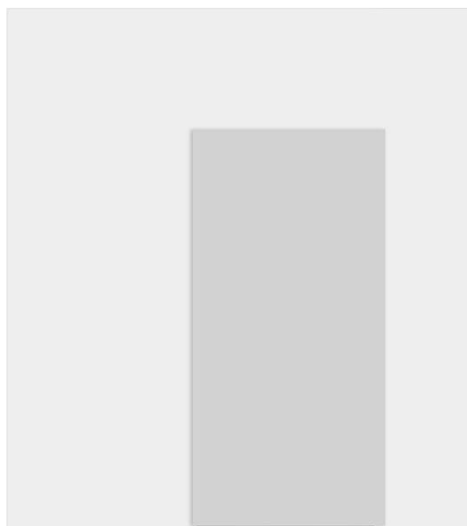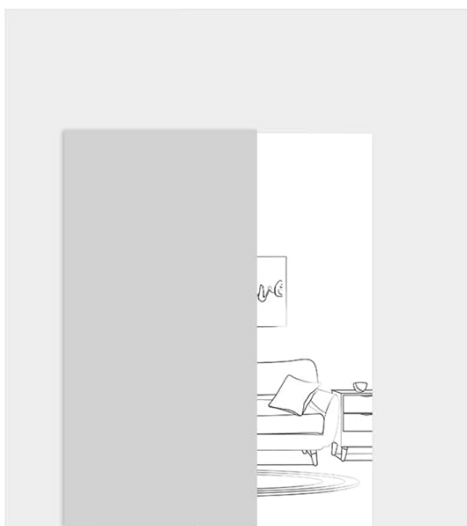

Nominal Width (IN)	Actual Door Slab Width (IN)	Actual Top Track Length (IN)	Advised Door Opening Width(IN)
30	30	29 3/4	26
32	32	31 3/4	28
36	36	35 3/4	32
38	38	37 3/4	34
42	42	41 3/4	38
44	44	43 3/4	40
48	48	47 3/4	44

Nominal Height (IN)	Actual Door Slab Height (IN)	Wall Mounted Roller Height (IN)	Advised Door Opening Height(IN)
80	80	78 3/4	76
84	84	82 3/4	80
96	96	94 3/4	92

This image shows the bottom roller, which fixes the bottom track sides and ensures smooth sliding. Note: The U-channel is pre-cut at the bottom of the door panel.

Installation Video Guide

Your browser does not support the video tag.

This official installation video from BARN DOOR WAREHOUSE provides a visual step-by-step guide for setting up your concealed sliding door system.

OPERATING INSTRUCTIONS

The JUBEST concealed sliding barn door features a smooth sliding mechanism and soft-close functionality for quiet and effortless operation.

- To open or close the door, gently push or pull the door panel using the installed handle.
- The soft-close mechanisms will engage near the end of the door's travel, slowing it down for a quiet stop.
- Ensure the path of the door is clear of obstructions before operating.
- The door can be installed with or without the handle. If not installed, the hidden design of the door is maintained.



This image demonstrates the smooth operation and key features of the door, including its soft-close function.



This image illustrates the option to install the handle for easy grip or to omit it for a fully hidden design.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your JUBEST sliding barn door.

- **Cleaning:** The PVC-covered surface is waterproof and scratch-resistant, making it easy to clean. Use a soft, damp cloth with mild soap to wipe down the door surface. Avoid abrasive cleaners.
- **Track and Rollers:** Periodically inspect the top and bottom tracks for any debris or dust. Clean the tracks and

rollers to ensure smooth sliding.

- **Hardware Check:** Every few months, check all screws and fasteners on the tracks, rollers, and soft-close mechanisms to ensure they are tight. Tighten any loose components.
- **Lubrication:** If the door's movement becomes less smooth, a small amount of silicone-based lubricant can be applied to the rollers and tracks.



The waterproof and scratch-resistant PVC surface simplifies cleaning and maintenance.

TROUBLESHOOTING

Common Issues and Solutions

- **Door not sliding smoothly:**
Solution: Check tracks for debris and clean thoroughly. Ensure rollers are free from obstructions. Apply a silicone-based lubricant to the tracks and rollers.
- **Door not closing softly:**
Solution: Inspect the soft-close mechanisms. Ensure they are properly aligned and free from damage. Refer to installation steps for adjustment.

- **Door panel not parallel with the wall:**

Solution: Loosen the two screws on the hanger mechanism (Step 10 in Setup), adjust the door to be parallel, and then re-tighten the screws.

- **Door feels loose or wobbly:**

Solution: Check all mounting screws for the top track and wall hangers. Ensure they are securely fastened. Verify the floor guide is properly installed and functioning.

If you encounter issues not listed here or require further assistance, please contact JUBEST customer service.

WARRANTY AND SUPPORT

JUBEST is committed to customer satisfaction. This product comes with a standard manufacturer's warranty.

- For specific warranty details, please refer to the warranty card included in your package or contact JUBEST customer service directly.
- If you have any questions, concerns, or require technical support, please reach out to our professional customer service team.
- We are always devoted to customer satisfaction.

You can find contact information for JUBEST customer service on the product packaging or the official JUBEST website.