Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Comfee /
- > Comfee RCB169DK3 Refrigerator with Freezer User Manual

Comfee RCB169DK3

Comfee RCB169DK3 Refrigerator with Freezer User Manual

Model: RCB169DK3 | Brand: Comfee

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Comfee RCB169DK3 Refrigerator with Freezer. Please read this manual thoroughly before using the appliance and keep it for future reference.





Front view of the Comfee RCB169DK3 Refrigerator with Freezer in black.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is intended for household use only.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments.
- Unplug the appliance before cleaning or performing maintenance.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

SETUP

Unpacking and Placement

Carefully remove all packaging materials. Place the refrigerator on a flat, stable surface, ensuring adequate ventilation around the unit. The dimensions of the appliance are approximately 54.5 cm (depth) x 51 cm (width) x 150 cm (height).



Diagram showing the dimensions of the refrigerator: 1500mm height, 470mm width, 511mm depth, with 115L cooling and 59L freezing capacities.

The appliance features adjustable feet to ensure stability and proper leveling. Adjust the front feet slightly higher (0.5 - 2 cm) than the rear to allow the doors to close automatically.



Image illustrating the adjustable feet at the bottom of the refrigerator for leveling.

Initial Operation

Before loading food, allow the refrigerator to run for approximately 2-3 hours on the highest temperature setting. An "OK" indicator, typically located on the right side above the vegetable drawer, will appear once the optimal operating temperature is reached. After this initial period, set the temperature to your desired level (e.g., between setting 2 and 3) before filling the appliance.


Door Reversal

The door hinges are reversible, allowing you to change the opening direction of the refrigerator and freezer doors to suit your kitchen layout. This process requires careful attention and may involve pre-drilled holes that need to be cleared. Consult a qualified technician if you are unsure about performing this procedure.

OPERATING INSTRUCTIONS

Temperature Control

The refrigerator features an adjustable temperature control, allowing you to set the cooling level from "cold" to "coldest" to ensure your food remains fresh and frozen items stay frozen. The control is typically a rotary dial or digital setting inside the refrigerator compartment.

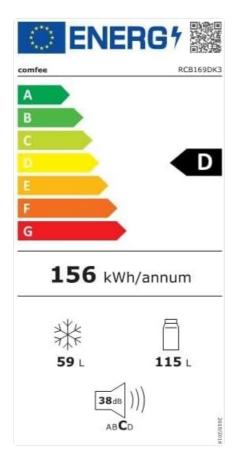

Close-up of the digital temperature control panel inside the refrigerator, showing settings from COLD to COLDEST.

Internal Features and Storage

The Comfee RCB169DK3 offers versatile storage options:

- Removable Glass Shelves: Easily adjust or remove shelves to accommodate items of various sizes. These shelves are designed with anti-fall features.
- Fruit and Vegetable Drawer: A dedicated drawer for optimal storage of fresh produce. This drawer can also be positioned higher to create space for bottles underneath.
- **Pizza Box** / **Flip Shelf:** A unique feature in the freezer compartment designed to store pizzas or other flat items. This shelf can be flipped to create more vertical space for larger frozen goods.
- Bottle Zone: A stable compartment in the door for securely holding bottles, preventing them from falling.



Illustration of flexible storage options including fruit and vegetable drawer, a drawer for larger items, and an extra shelf for drinks.

Geräuscharm und energiesparend



Image demonstrating the "Pizza Box" flip shelf in the freezer, showing how it can be used for flat items or flipped for more vertical space.

LED Lighting

The refrigerator compartment is equipped with bright LED lighting, illuminating the interior for easy visibility of contents, even in low light conditions. When the temperature control is set to "Zero" or "Off", the light will also turn off, saving energy during defrosting or extended periods of non-use.

MAINTENANCE

Cleaning

Regular cleaning helps maintain the efficiency and hygiene of your appliance. Always unplug the refrigerator before cleaning.

- Clean the interior with a soft cloth and a mild, non-abrasive detergent.
- Wipe down exterior surfaces with a damp cloth.

- Clean the door seals regularly to ensure a tight seal.
- Dust the condenser coils at the back of the appliance periodically to improve energy efficiency.

Defrosting

This refrigerator features Low Frost technology, which significantly reduces ice build-up in the freezer compartment, making manual defrosting less frequent and easier. When defrosting is necessary, unplug the appliance and allow the ice to melt naturally. Do not use sharp objects to remove ice.

Pizza Box - Flipregal

Diese Ablage kann umgedreht werden, so dass große oder unhandliche Tiefkühlkost bequem gelagert werden kann.







Image illustrating the Low-Frost technology, showing minimal ice accumulation compared to a heavily frosted freezer.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply; power cord not plugged in; circuit breaker tripped.	Check power connection; ensure outlet is functional; reset circuit breaker.
Refrigerator is not cooling sufficiently.	Temperature setting too high; door not closed properly; excessive food load; poor ventilation.	Adjust temperature setting lower; ensure door is sealed; reduce food load; ensure adequate space around appliance.
Unusual noise.	Appliance not level; objects vibrating against the unit; normal operating sounds (e.g., refrigerant flow, compressor).	Level the appliance using adjustable feet; ensure no objects are touching the unit. Note that the Comfee RCB169DK3 operates at a low noise level of 38 dB, so most sounds are normal.
Excessive ice build-up in freezer.	Door left open too long; door seal damaged; high humidity.	Ensure door is closed quickly; check and clean door seal; defrost as needed.
Sides of the appliance feel warm.	Normal operation for heat dissipation.	This is normal. Modern refrigerators use the entire casing for heat dissipation to improve energy efficiency.

SPECIFICATIONS

Feature	Detail
Brand	Comfee
Model Number	RCB169DK3
Product Dimensions (D x W x H)	54.5 x 51 x 150 cm
Weight	42.5 Kilograms
Total Capacity	174 Liters
Refrigerator Capacity	115 Liters
Freezer Capacity	59 Liters
Annual Energy Consumption	156 kWh/year
Energy Efficiency Rating	D
Noise Level	38 dB
Installation Type	Freestanding
Defrost System	Manual (Low Frost)
Door Hinge	Reversible
Number of Shelves	3 (Glass)

Feature	Detail
Number of Drawers	3
Color	Black
Voltage	240 Volt

Energy label for the Comfee RCB169DK3, indicating Energy Class D and an annual energy consumption of 156 kWh.

Product data sheet providing detailed technical specifications for the Comfee RCB169DK3.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your appliance or visit the official Comfee website. The product typically comes with a manufacturer's warranty. Please retain your proof of purchase for any warranty claims.

The appliance includes an energy label in the box, which provides important information regarding its energy consumption and efficiency.

© 2024 Comfee. All rights reserved.

Related Documents - RCB169DK3



Comfee 91L Fridge Freezer Installation and User Guide

INSTALLATION INSTRUCTIONS USER GUIDE COMPETED I PROGRAMME 358091 This guide provides essential installation, operation, and maintenance instructions for the Comfee 91L Fridge Freezer (Model 358091). Learn about safety, setup, troubleshooting, and energy-saving tips for your appliance.



Comfee Chest Freezers: User Manual and Specifications (RCC100WH1, RCC143WH1, RCC199WH1)

Comprehensive user manual and technical specifications for Comfee chest freezers, including models RCC100WH1, RCC100BL1, RCC143WH1, RCC143BL1, RCC199WH1, and RCC199BL1. Covers safety, operation, maintenance, and troubleshooting.



Comfee Upright Freezer RCU160WH2(E)/RCU219WH2 User Manual

This user manual provides essential safety warnings, installation instructions, operating guidelines, cleaning, maintenance, and troubleshooting tips for the Comfee Upright Freezer models RCU160WH2(E) and RCU219WH2.

Instruction Manual Chest Freezer Model: 351300

Comfee Chest Freezer Instruction Manual - Model 351300

Detailed instruction manual for the Comfee Chest Freezer, Model 351300. Covers safety warnings, proper usage, maintenance, and frequently asked questions for optimal performance and longevity.



Comfee 112L Bar Fridge Installation and User Guide

Comprehensive installation, operation, maintenance, and troubleshooting guide for the Comfee 112L Bar Fridge (Model 358112). Learn how to set up, use, clean, and maintain your appliance safely and efficiently.





Comfee RCU160WH2(E)/RCU219WH2 Upright Freezer User Manual

This user manual provides essential information for the Comfee RCU160WH2(E) and RCU219WH2 upright freezer models, covering installation, operation, cleaning, maintenance, and safety.