

## Dolonm Power Lift

# Dolonm Power Lift Recliner Chair User Manual

Model: Power Lift

## IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before assembling and using this product. Keep this manual for future reference.

- Do not allow children to play on or around the recliner.
- Ensure all connections are secure before use.
- Do not place hands or feet near the mechanism when operating the chair.
- The maximum weight capacity for this chair is 350 lbs (158 kg). Do not exceed this limit.
- Only use the provided power adapter. Disconnect power before cleaning or maintenance.
- If you have any health concerns, consult your doctor before using the massage and heat functions.

## PACKAGE CONTENTS

Your Dolonm Power Lift Recliner Chair is shipped in two boxes. Please verify all components are present before beginning assembly.

- Recliner Backrest
- Recliner Base (with armrests and seat)
- Power Adapter
- Remote Control
- User Manual (this document)

# PRODUCT DIMENSION

⊕ Please check carefully



Image: Overview of recliner components and indication of arrival in two boxes.

## SETUP INSTRUCTIONS

Assembly of your Dolonm Power Lift Recliner Chair is designed to be straightforward and requires no additional tools.

- Unpack Components:** Carefully remove all parts from the two shipping boxes. Place them on a soft, clean surface to prevent damage.
- Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the recliner base. Push down firmly until the backrest clicks securely into place.
- Connect Power:** Locate the power cable extending from the recliner base. Connect it to the power adapter, then plug the adapter into a standard wall outlet.
- Connect Remote Control:** Plug the remote control cable into the designated port on the side of the chair.
- Test Functions:** Before first use, test all functions (lift, recline, massage, heat) using the remote control to ensure proper operation.



Image: Side view illustrating the chair's lift mechanism in action.

## OPERATING INSTRUCTIONS

Your recliner is equipped with a user-friendly remote control to manage all its features.

### Power Lift and Recline Function

Use the dedicated buttons on the remote to control the chair's movement:

- Press the **UP** button to gently lift the chair, assisting you in standing up.
- Press the **DOWN** button to recline the chair to your desired position, up to 180 degrees.

### Massage and Lumbar Heat Functions

The chair features 8 vibrating nodes and a lumbar heating element for enhanced comfort.

- **Massage Nodes:** The 8 vibrating nodes are located in the back, lumbar, thighs, and legs. Each point can be operated individually.
- **Massage Modes:** Select from 3 different massage modes using the remote.
- **Timer Function:** Set the massage duration for 15, 30, or 60 minutes using the timer button.
- **Lumbar Heat:** Activate the lumbar heat function to promote blood circulation and provide warmth to your lower back.

### USB Charge Ports & Side Pockets

Conveniently located USB ports allow you to charge low-power devices like smartphones and tablets. Side pockets provide storage for small items or magazines.

**Note:** The USB ports are designed for low-power devices only (e.g., iPhone, iPad). Do not attempt to charge high-power devices.



Image: The recliner highlighting massage points and showing the remote controls.



57.08"

30.7"

Image: Detailed view of the remote controls for the recliner's functions.

## MAINTENANCE

Proper care will extend the life and appearance of your recliner.

- **Cleaning Faux Leather:** Wipe the faux leather surface with a soft, damp cloth. For stubborn stains, use

a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.

- **Mechanism Care:** The dual motor mechanism is designed for low maintenance. Do not attempt to lubricate or disassemble the motor or moving parts.
- **Power Cord:** Regularly inspect the power cord and adapter for any signs of damage. If damaged, discontinue use and contact customer support.
- **General Care:** Avoid placing the chair in direct sunlight or near heat sources, as this can cause the faux leather to fade or crack.

## TROUBLESHOOTING

If you encounter issues with your recliner, please refer to the following common solutions:

Problem	Possible Cause	Solution
Chair does not move/power on.	Power cord disconnected; outlet not working; remote not connected.	Ensure power cord is securely plugged into chair and outlet. Test outlet with another device. Check remote control connection.
Massage/Heat functions not working.	Function not activated; loose connection.	Ensure the chair is powered on. Press the correct buttons on the remote to activate. Check remote connection.
Chair makes unusual noises.	Loose components; obstruction in mechanism.	Check for any loose parts or foreign objects under or around the chair. Do not attempt to force movement.

If the problem persists after attempting these solutions, please contact Dolonm customer support for assistance.

## SPECIFICATIONS

Detailed specifications for your Dolonm Power Lift Recliner Chair:

- **Brand:** Dolonm
- **Model Name:** Power Lift
- **Color:** Grey
- **Product Dimensions (D x W x H):** 40.15" x 38.18" x 41.33"
- **Seat Material Type:** Faux Leather
- **Maximum Weight Capacity:** Up to 350 LBS
- **Special Features:** Arm Rest, Cushion Availability, 8-point Vibration Massage, Lumbar Heat, Dual Motor, USB Charge Ports
- **Form Factor:** Recliner



Image: Front view with detailed measurements of the recliner chair.

**Model:7878**

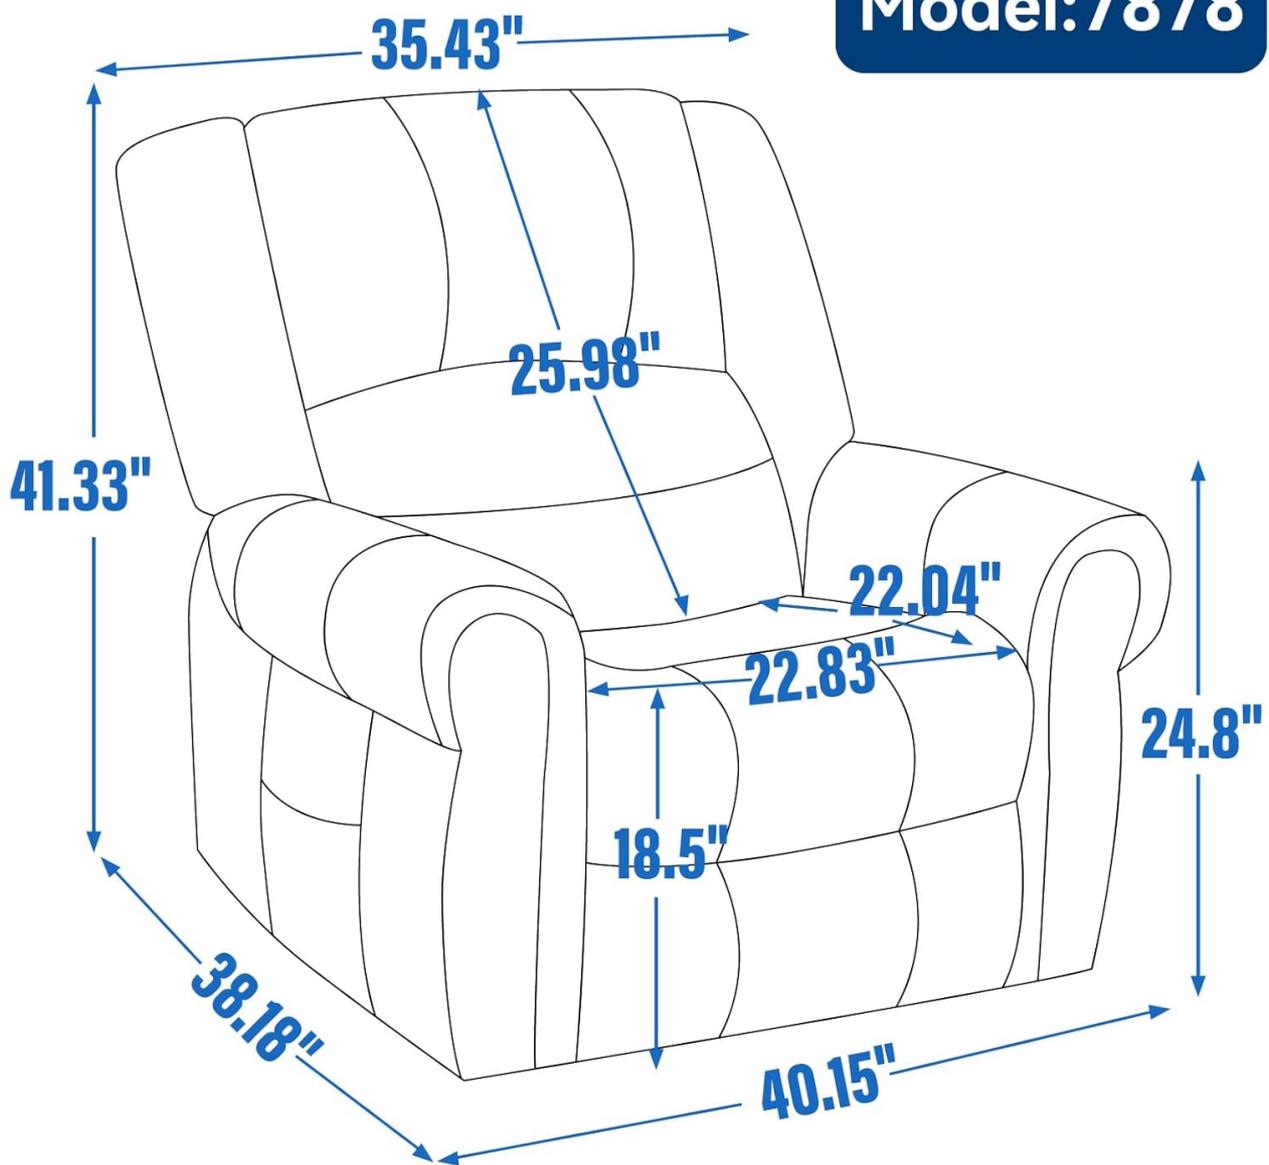


Image: Side view with height and depth measurements of the recliner chair.

# Model:7878

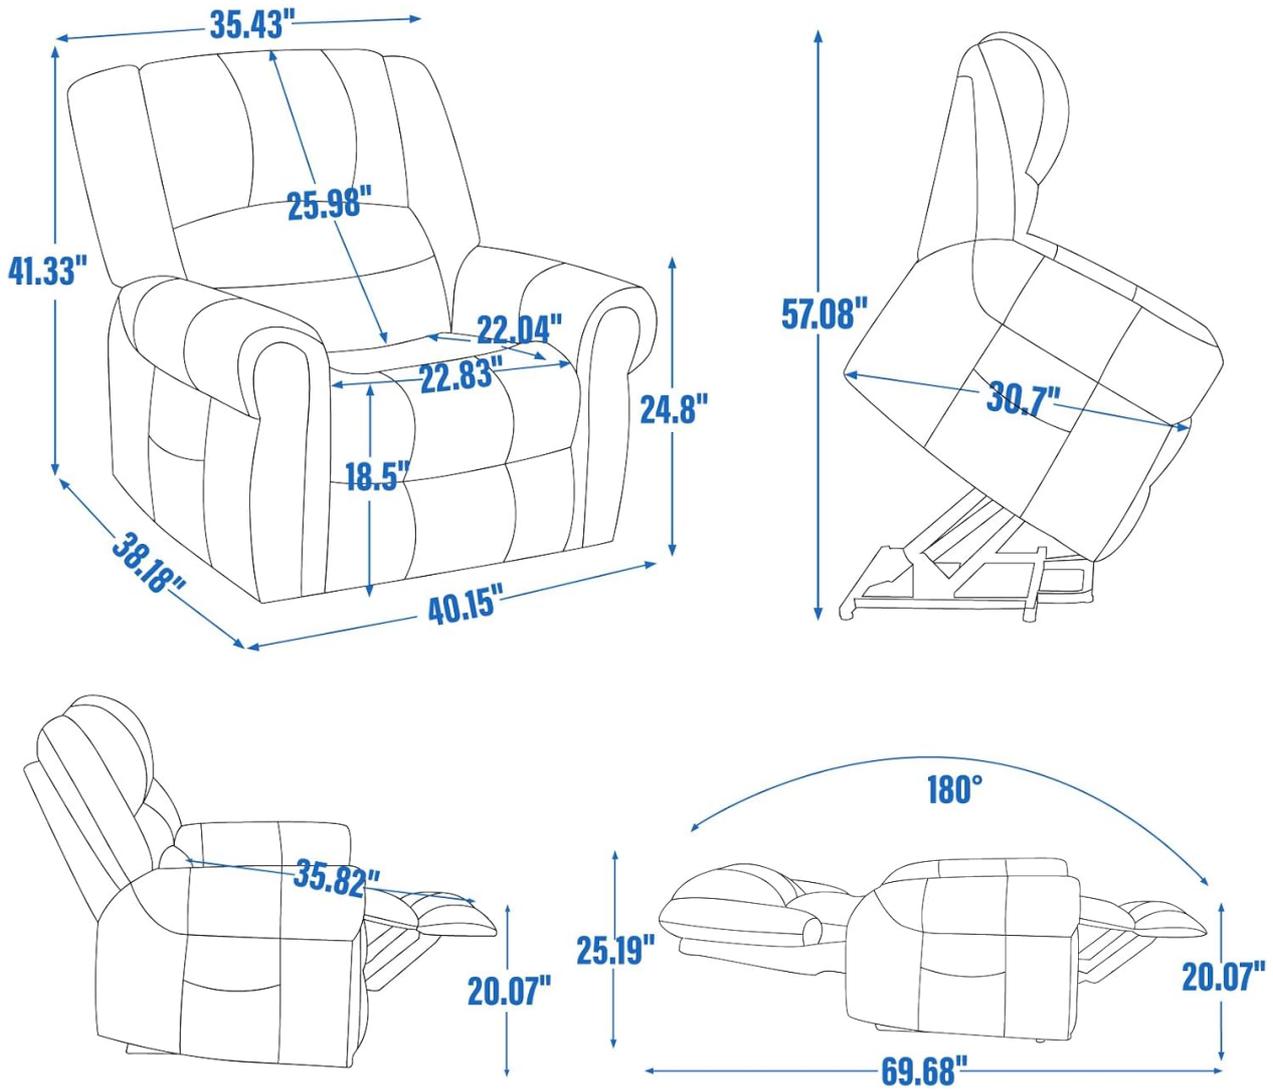


Image: Reclined position showing extended length and height measurements.

## WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your Dolonm Power Lift Recliner Chair, please contact Dolonm customer service.

Refer to your purchase documentation or the retailer's website for specific warranty details and return policies. Typically, products purchased from Amazon.com have a 30-day return policy.

For direct support, visit the [Dolonm Store on Amazon](#).

