#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- MOUNTUP /
- MOUNTUP EconoMe Full Motion TV Wall Mount User Manual

#### **MOUNTUP EU0092A**

# MOUNTUP EconoMe Full Motion TV Wall Mount User Manual

Model: EU0092A

#### 1. Introduction

Thank you for choosing the MOUNTUP EconoMe Full Motion TV Wall Mount. This manual provides essential information for the safe and proper installation, operation, and maintenance of your new TV wall mount. Designed for most 32-65 inch flat screen, LED, and 4K TVs, this mount offers swivel, tilt, and extension capabilities to optimize your viewing experience. It supports VESA patterns from 100x100mm to 400x400mm and can hold TVs up to 99 lbs.

Please read this manual thoroughly before installation and keep it for future reference. If you have any questions or require assistance, please contact our customer service.

### 2. Safety Information

**WARNING:** Improper installation may result in serious personal injury or damage to your TV and property. If you do not understand these instructions or have doubts about the safety of the installation, please consult a qualified professional.

- Weight Capacity: Do not exceed the maximum weight capacity of 99 lbs (45 kg).
- TV Size: This mount is designed for TVs between 32 and 65 inches.
- **VESA Compatibility:** Ensure your TV's VESA pattern (mounting hole spacing) is within the supported range of 100x100mm to 400x400mm.
- Wall Type: This mount is intended for installation on wood studs (max 16" spacing), concrete walls, or brick walls. DO NOT install into drywall alone. Always use a stud finder to confirm wood stud locations.
- Anchors: Concrete and brick wall installations require appropriate anchors. Concrete anchors (Φ10×61mm) can be provided upon request.
- Tools: Use appropriate tools and wear safety gear during installation.
- Supervision: Keep children and pets away during installation.

#### 3. Package Contents

Before beginning installation, verify that all parts are present and undamaged. If any parts are missing or defective, contact customer service immediately.



Image: Overview of the MOUNTUP EconoMe Full Motion TV Wall Mount and included accessories.

- · Wall Plate Assembly
- TV Brackets (2)
- Hardware Kit (various screws, washers, spacers, anchors)
- Bubble Level Tool
- Paper Mounting Template
- · Cable Ties

# 4. Setup and Installation

The installation process involves three main steps. For detailed visual instructions, please refer to the official installation manual PDF available on the product page or contact customer support.

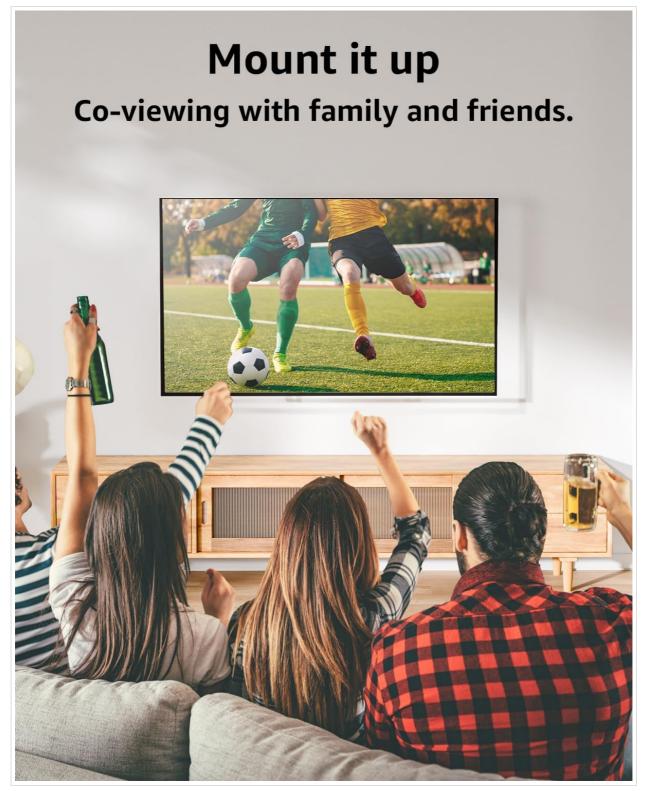


Image: Simplified three-step installation process for the TV wall mount.

#### 1. Step 1: Attach Brackets to TV

Carefully place your TV face down on a soft, clean surface. Identify the VESA mounting holes on the back of your TV. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's VESA pattern. Attach the two vertical TV brackets to the back of your TV, ensuring they are securely fastened and evenly aligned.

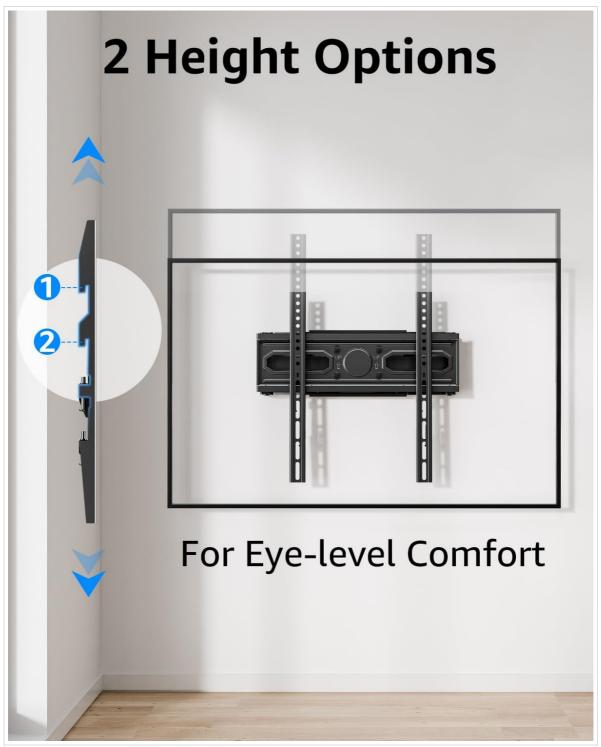


Image: Guide to available VESA patterns and suitable sizes for TV compatibility.

#### 2. Step 2: Attach Wall Plate to Wall

Determine the desired height for your TV. Use a stud finder to locate wood studs if installing on a stud wall. Mark the drilling locations using the provided paper mounting template and the integrated level tool. For concrete or brick walls, use a hammer drill to create pilot holes and insert the appropriate anchors. Secure the wall plate assembly to the wall using the provided lag bolts. Ensure the wall plate is level and firmly attached.

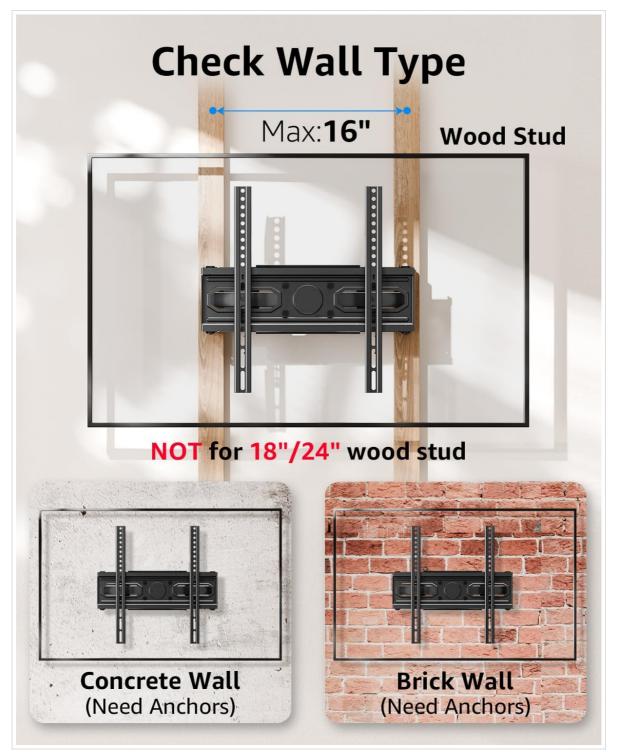


Image: Important information on checking wall type and stud spacing before installation.

#### 3. Step 3: Hang and Secure TV to Wall Plate

With assistance, carefully lift the TV (with brackets attached) and hook the TV brackets onto the wall plate. Ensure the TV is securely seated on the wall plate. Tighten any safety screws or locking mechanisms on the TV brackets to prevent accidental dislodgement. Double-check all connections for security before releasing the TV.

# 5. Operating and Adjustments

Your MOUNTUP EconoMe TV wall mount offers a range of adjustments to achieve optimal viewing angles and flexibility.

## 5.1. Tilt Adjustment

The mount allows for vertical tilt adjustment to reduce glare and improve viewing comfort. You can tilt the TV



Image: Illustration of the tilting capability for anti-glare viewing.

#### 5.2. Swivel Adjustment

The articulating arms allow you to swivel your TV left or right by up to  $\pm 45^{\circ}$ , providing flexible viewing options from different areas of the room. The maximum swivel angle may vary depending on your TV's size.

#### 5.3. Leveling Adjustment

After installation, you can fine-tune the horizontal level of your TV by ±3° to ensure it is perfectly straight.



Image: Demonstrates premium adaptability with leveling and swivel adjustments.

### 5.4. Extension and Retraction

The dual articulating arms allow the TV to extend up to 14.5 inches (36.8 cm) from the wall and retract back to a slim 2.7 inches (6.8 cm) profile, saving space when not in use.



Image: Illustrates the ultimate flexibility of extension and retraction.

# 5.5. Height Options

The design allows for two height options for mounting the TV brackets on the wall plate, providing flexibility to achieve eye-level comfort.

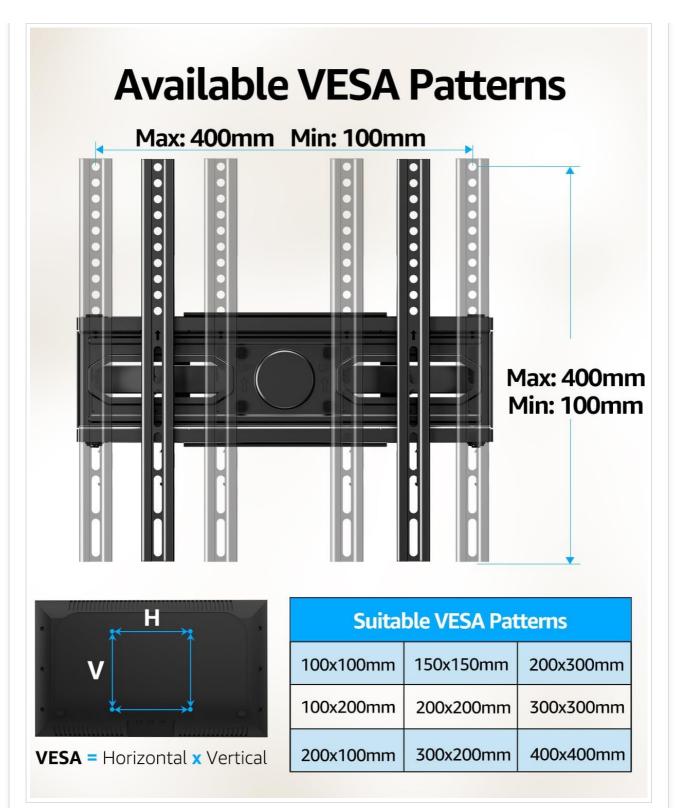


Image: Demonstrates two height options for optimal eye-level viewing.

#### 6. Maintenance

To ensure the longevity and safe operation of your TV wall mount, follow these simple maintenance guidelines:

- Cleaning: Dust the mount regularly with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and mild detergent, then wipe dry. Avoid abrasive cleaners or solvents.
- **Periodic Checks:** Every few months, inspect all screws and connections to ensure they remain tight and secure. Re-tighten any loose fasteners.
- **Movement:** If the articulating arms become stiff, a small amount of silicone-based lubricant can be applied to the pivot points, avoiding contact with the TV or wall.

# 7. Troubleshooting

If you encounter any issues with your MOUNTUP EconoMe TV Wall Mount, please refer to the common problems and solutions below. If the issue persists, contact our customer service.

Problem	Possible Cause	Solution
TV is not level after installation.	Wall plate not perfectly level; minor adjustments needed.	Use the leveling adjustment feature (±3°) to fine-tune the TV's horizontal position.
Difficulty moving or adjusting the TV.	Screws at pivot points are too tight; lack of lubrication.	Slightly loosen the screws at the articulating joints. Apply a small amount of silicone-based lubricant if necessary.
Mount feels loose on the wall.	Lag bolts not fully tightened; incorrect wall anchors used.	Ensure all lag bolts securing the wall plate are fully tightened.  Verify that the correct anchors were used for your wall type. If unsure, consult a professional.
TV does not fit the mount.	Incorrect VESA pattern or TV size/weight.	Double-check your TV's VESA pattern and weight against the mount's specifications. This mount supports VESA from 100x100mm to 400x400mm and up to 99 lbs.

# 8. Specifications

Feature	Specification	
Model Number	EU0092A	
TV Size Compatibility	32 - 65 inches	
Weight Capacity	Up to 99 lbs (45 kg)	
VESA Compatibility	100x100mm, 150x150mm, 200x200mm, 200x300mm, 300x300mm, 400x400mm, etc. (Min 100x100mm, Max 400x400mm)	
Tilt Angle	+5° / -10°	
Swivel Angle	±45° (Max angle depends on TV size)	
Level Adjustment	±3°	
Extension from Wall	2.7 inches (6.8 cm) to 14.5 inches (36.8 cm)	
Material	Alloy Steel	
Color	Black	
Item Weight	8.14 pounds	

Feature	Specification
Package Dimensions	17.56 x 6.65 x 2.83 inches

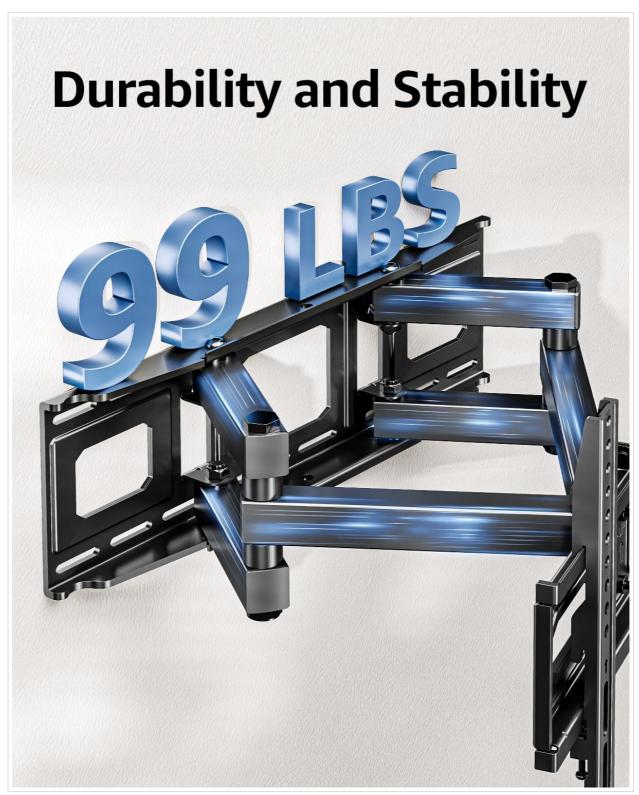


Image: Demonstrates the durability and stability of the mount, supporting up to 99 lbs.

# 9. Warranty and Support

MOUNTUP is committed to providing quality products and excellent customer service. For any inquiries, concerns, or assistance with installation or parts, please do not hesitate to contact our support team. We are available to help you with any issues you may encounter.

For the most up-to-date warranty information and detailed support resources, please refer to the official MOUNTUP website or the product's Amazon page. You can also find a downloadable PDF version of the installation manual here.

© 2025 MOUNTUP. All rights reserved.

# **Related Documents - EU0092A**

	MOUNTUP MU0014 TV Wall Mount Installation Guide Detailed installation instructions for the MOUNTUP MU0014 TV Wall Mount, covering safety, hardware, VESA compatibility, wall mounting (wood stud and concrete), and adjustments for full-motion tilting and leveling.	
	MOUNTUP MU0057 Full Motion TV Wall Mount Installation Guide Comprehensive installation guide for the MOUNTUP MU0057 full motion TV wall mount. Covers attachment to wood studs and concrete, VESA compatibility, safety, and adjustments for TVs up to 77 lbs.	
	MOUNTUP YZ2352 US1.0 TV Wall Mount Installation Guide  Detailed installation instructions for the MOUNTUP YZ2352 US1.0 TV Wall Mount. This guide covers mounting to wood studs and concrete walls, VESA compatibility, and safety precautions for a secure and optimal viewing experience. Supports TVs up to 88 lbs with VESA patterns up to 400x400mm.	
	MOUNTUP Full Motion TV Wall Mount Installation Guide - Model YYZZ02 WG1.0  Comprehensive installation instructions for the MOUNTUP Full Motion TV Wall Mount (Model YYZZ02 WG1.0). This guide provides detailed steps for safe mounting on wood studs or concrete walls, including parts lists, diagrams, and adjustment procedures.	
AND SECRET	MOUNTUP QTH-2B-US1 TV Wall Mount Installation Guide Comprehensive installation instructions for the MOUNTUP QTH-2B-US1 TV wall mount, covering VESA plate attachment, wall mounting (wood stud and concrete), TV hanging, and adjustment procedures. Includes safety precautions and hardware details in multiple languages.	
Sections  The section of the section	MOUNTUP MU0036 Universal TV Stand Installation Guide  Detailed installation instructions for the MOUNTUP MU0036 Universal TV Stand. It is designed for flat-screen TVs ranging from 37 to 55 inches, supporting a maximum weight of 88 lbs (40 kg) and VESA patterns up to 400x400mm. Learn how to safely assemble and mount your TV with this height-adjustable stand featuring a tempered glass base and swivel functionality.	