

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DESLOC](#) /

› [DESLOC B200 Fingerprint Smart Lock with Lever Handles - Instruction Manual](#)

DESLOC B200

DESLOC B200 Fingerprint Smart Lock with Lever Handles

Model: B200 | Brand: DESLOC

INTRODUCTION

The DESLOC B200 Fingerprint Smart Lock with Lever Handles offers a secure and convenient keyless entry solution for your home. This manual provides detailed instructions for installation, operation, maintenance, and troubleshooting to ensure optimal performance and security.

Key features include multiple unlocking methods, long battery life, advanced security protocols, and easy installation.

PRODUCT COMPONENTS

The DESLOC B200 Smart Lock package includes the following items:

- Exterior Lock
- Interior Lock
- Mounting Plate
- Strike Plate
- Key Fob
- Deadbolt
- 2 Physical Keys
- Deadbolt/Strike Plate Screws
- Mounting Plate Screws
- Interior Lock Screws
- Spare Screws
- User Manual




All components included in the DESLOC B200 Smart Lock package.

SETUP AND INSTALLATION


Installing your DESLOC B200 Smart Lock is designed to be straightforward, often requiring only a screwdriver. Follow the steps below for a successful setup:

1. **Prepare the Door:** Ensure your door meets the compatibility requirements. The lock fits most US standard doors (1-3/8" to 2" thickness) and supports single-cylinder installations. Make sure the hole depth in the backset is greater than 1 inch.
2. **Remove Existing Hardware:** Carefully remove your old deadbolt and lever handle.
3. **Install New Deadbolt:** Insert the new deadbolt into the door edge and secure it with screws.
4. **Mount Exterior Lock:** Position the exterior lock assembly, ensuring the spindle and cable pass through the door holes correctly.
5. **Install Mounting Plate:** Secure the mounting plate to the interior side of the door, passing the cable through the plate.
6. **Connect Interior Lock:** Connect the cable from the exterior unit to the interior lock assembly.
7. **Attach Interior Lock:** Secure the interior lock to the mounting plate.
8. **Install Batteries:** Insert 4 AA batteries (not included) into the interior lock's battery compartment.
9. **Test Operation:** Verify that the lock operates smoothly using the physical key and the keypad.

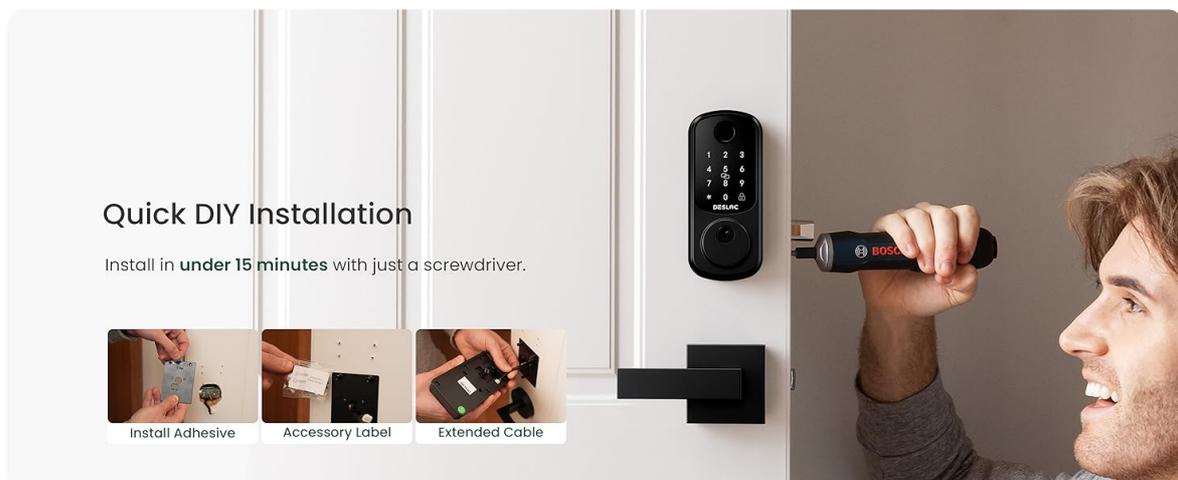

Door compatibility guidelines for installation.

Check Compatibility Before Purchase

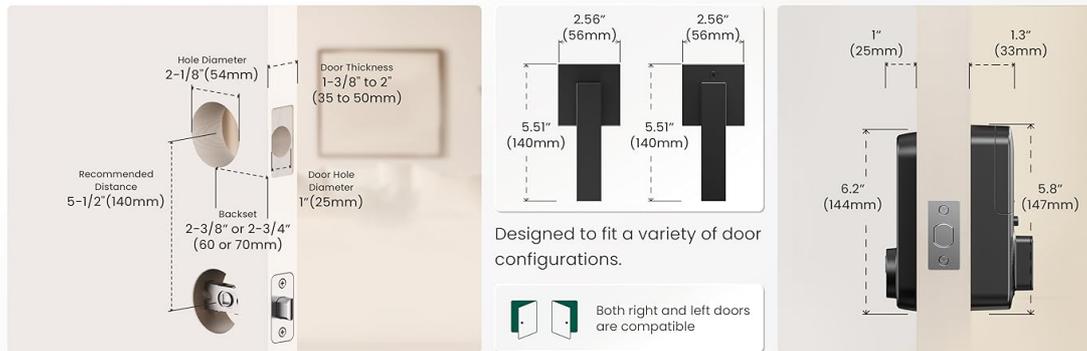

The lock is designed to work with both left and right-handed doors.

Door Opening Direction Setting

It is crucial to set the correct door opening direction for proper lock function. This can be done via the TTLock App settings. Stand outside your door (facing the keypad) and locate the door hinge to determine if it's a left or right-hand opening door.

Your browser does not support the video tag.

Video: How to Set Left and Right Doors for DESLOC B200. This video demonstrates how to correctly configure the door opening direction using the TTLock app, ensuring proper functionality of your smart lock.

OPERATING INSTRUCTIONS


The DESLOC B200 offers multiple convenient ways to unlock and manage access to your home:

Unlocking Methods:


- **Fingerprint Recognition:** Unlock in less than 0.3 seconds with advanced AI learning technology. Up to 50 fingerprints can be stored.
- **PIN Codes:** Use the electronic keypad to enter your personalized PIN. The anti-peeping feature allows you to enter random digits before or after your code to protect your privacy.
- **TTLock App Control:** Pair with Bluetooth for control within 2 meters. For remote control, a G2 Gateway (sold separately) is required. The app allows you to generate temporary access codes, manage users, and view access records.
- **Physical Keys:** Two physical keys are included for traditional unlocking or as a backup.
- **eKey & Fobs:** Manage and send eKeys to other users or use the provided key fobs for quick access.
- **Voice Control:** With a G2 Gateway (sold separately), you can connect to Alexa or Google Voice Assistant for hands-free unlocking.

Unlock it Your Way

Fingerprint, PIN, App, eKey, fob, voice control or physical key—choose what's most convenient.

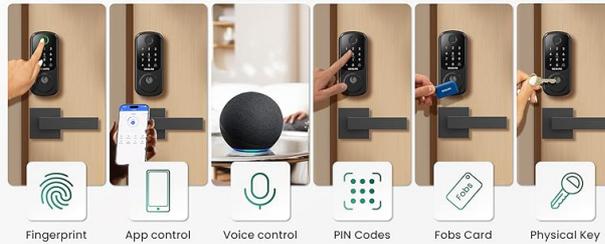

Multiple access options for enhanced convenience and security.

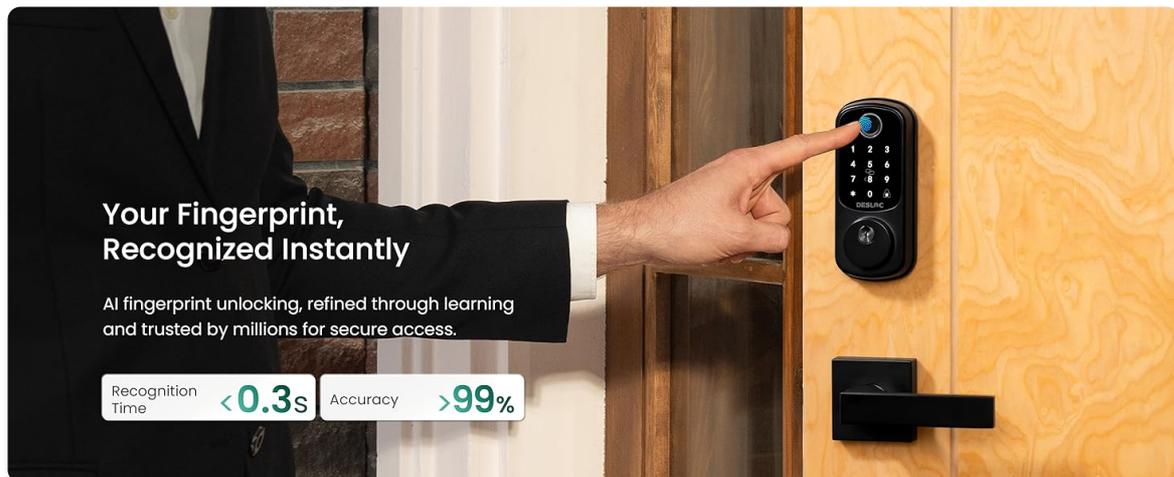

Fast fingerprint unlock for instant access.

Additional Features:

- **Auto-Lock:** The lock can be set to automatically lock after a customizable time period (5s-900s). Ensure passage mode is turned off for this feature to function.
- **Privacy Mode:** Activate privacy mode to lock out all users except authorized administrators or key holders, providing an extra layer of security.
- **Anti-Peeping User Code Protection:** Enter random digits before or after your actual PIN to prevent others from guessing your code.

Your browser does not support the video tag.

Video: DESLOC B200 Keyless Entry Door Lock. This video provides a brief overview of the keyless entry features and functionality of the DESLOC B200 Smart Lock.

MAINTENANCE

Battery Life:

The DESLOC B200 Smart Lock operates on 4 AA batteries (not included) and provides approximately 12 months of battery life, depending on usage frequency. A built-in low-battery indicator will notify you when it's time for replacement.

Emergency Power:

In case the batteries run out, the lock features a USB Type-C emergency power port. Simply connect a portable power bank to the Type-C port to temporarily power the lock and gain entry.

Power That Lasts All Year

Ensures up to 12-month battery life and includes a low-battery indicator for timely replacement.

12 Months Battery Life



with **4AA** batteries
(4 AA batteries not included)

The lock offers long battery life and an emergency Type-C power option.

TROUBLESHOOTING

Door Not Locking/Unlocking Properly:

- Ensure the door is fully closed.
- If the deadbolt cannot engage properly, adjust the backset accordingly.
- Make sure the hole depth in the backset is greater than 1 inch.
- Verify that auto-lock is enabled and passage mode is turned off if you desire automatic locking.

Resetting to Factory Settings:

If you encounter persistent issues or wish to clear all settings, you can reset the lock to its factory defaults. Refer to the video below for detailed instructions on how to perform a factory reset.

Your browser does not support the video tag.

Video: How to Reset B200 with Lever Set. This video guides you through the process of resetting your DESLOC B200 Smart Lock to its factory settings.

Your browser does not support the video tag.

Video: Troubleshooting - Wrong Door Opening Direction. This video provides solutions if your lock is not functioning correctly due to an incorrect door opening direction setting.

SPECIFICATIONS

Brand	DESLOC
-------	--------

Model Name	B200
Lock Type	Biometric, Deadbolt, Keypad, Pin Tumbler
Material	Aluminum
Color	Black
Style	Deadbolt + Lever Set
Item Dimensions L x W x H	14.37 x 7.7 x 3.23 inches
Item Weight	4.27 pounds (1.94 Kilograms)
Special Features	12 Months Battery Life, Easy to Install, Emergency Power Port, Lock with handle, App Control
Control Method	Touch
Smart Home Compatibility	Smart Home Compatible (G2 Gateway required for Alexa/Google Assistant)
Batteries Required?	Yes (4 AA batteries)
Operating Temperature	-22°F to 158°F (-30°C to 70°C)
Waterproof Rating	IP54

WARRANTY AND SUPPORT


DESLOC offers a 12-month product warranty for the B200 Smart Lock. For any inquiries or assistance, please contact our customer service team:

- **Hotline:** Available Monday-Friday, 9am-5pm EST
- **Email Support:** Available 24/7

Your satisfaction and security are our top priority. We are committed to providing reliable support for your DESLOC product.

24/7 Assistance Whenever You Need It

Get help anytime from our dedicated service team.

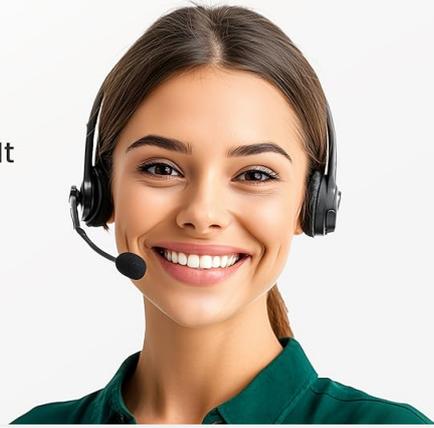

24/7 assistance is available for all your support needs.