

DERMALOGIC 60L

DERMALOGIC 60L Towel Warmer Instruction Manual

Model: 60L

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before operating the DERMALOGIC 60L Towel Warmer. Retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** This appliance operates on 110V. Ensure the power outlet matches the appliance's voltage. Do not use with extension cords or adapters unless absolutely necessary and rated for the appliance's power (220W). Always plug into a grounded outlet.
- **Water and Moisture:** Do not immerse the appliance in water or other liquids. Do not operate near water, in wet environments, or with wet hands. Keep the power cord away from heated surfaces.
- **Placement:** Place the towel warmer on a stable, level, heat-resistant surface. Ensure adequate ventilation around the unit. Do not block ventilation openings. Keep away from flammable materials.
- **Hot Surfaces:** The interior and exterior surfaces of the towel warmer will become hot during operation. Use caution when opening the door and handling towels. Always use heat-resistant gloves if necessary.
- **Children and Pets:** Keep the appliance out of reach of children and pets. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Maintenance:** Always unplug the appliance from the power outlet before cleaning or performing any maintenance.
- **Damage:** Do not operate the appliance if the cord or plug is damaged, if it malfunctions, or if it has been dropped or damaged in any manner. Contact customer support for repair.

2. PRODUCT OVERVIEW

The DERMALOGIC 60L Towel Warmer is designed to efficiently heat and sanitize towels for various professional and home applications. It features a stainless steel cabinet, a glass door, and two internal shelves.

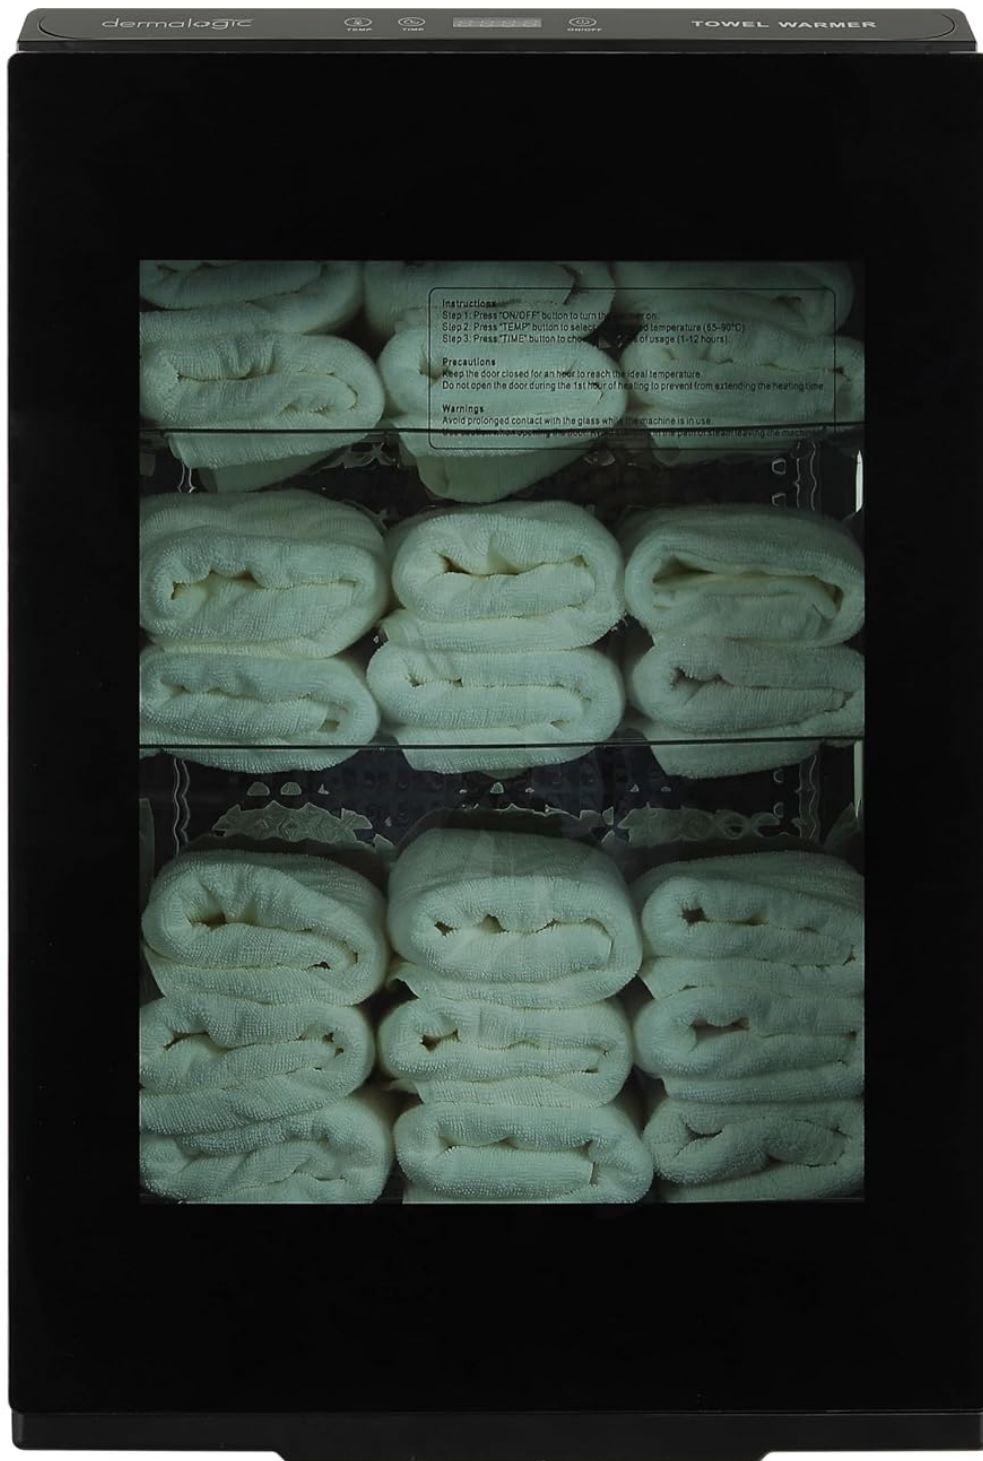


Image: The DERMALOGIC 60L Towel Warmer with its glass door open, revealing multiple neatly folded white towels stacked on two internal shelves. The interior is reflective stainless steel.

3. SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove the towel warmer from its packaging. Inspect the unit for any signs of damage during transit. Retain packaging materials for potential future transport or return.

2. **Placement:** Choose a suitable location for the towel warmer. It should be a stable, level, and heat-resistant surface. Ensure there is sufficient space around the unit for proper ventilation (at least 4 inches from walls or other objects). Avoid placing it near water sources or in direct sunlight.
3. **Initial Cleaning:** Before first use, wipe down the interior and exterior surfaces with a damp cloth and mild detergent. Rinse thoroughly with a clean, damp cloth and dry completely. This helps remove any manufacturing residues.
4. **Shelf Installation:** Insert the two push-pull shelves into the designated slots inside the cabinet. Ensure they are securely seated.
5. **Power Connection:** Plug the power cord into a grounded 110V electrical outlet.



Image: An interior view of the DERMALOGIC 60L Towel Warmer, showing the two empty, reflective stainless steel shelves and the inner walls of the cabinet.

4. OPERATING INSTRUCTIONS

This section details how to use your DERMALOGIC 60L Towel Warmer effectively.

1. **Loading Towels:** Open the glass door. Neatly fold and place clean, damp towels onto the two shelves. Do not overload the unit; ensure air can circulate around the towels for even heating. The silica gel door seal helps maintain internal temperature.
2. **Power On:** Press the power button on the control panel to turn on the unit.
3. **Setting Temperature:** Use the temperature control buttons to select your desired internal temperature. The unit offers settings from 65°C to 90°C (149°F to 194°F). You can switch between Celsius and Fahrenheit display using the dedicated digital button.
4. **Setting Timer:** Use the timer buttons to set the desired operating duration. Options range from 1 to 12 hours. The unit will automatically shut down once the set time has elapsed.
5. **Heating Process:** The high-efficiency heating element will begin warming the towels. Allow sufficient time for towels to reach the desired temperature.
6. **Removing Towels:** When the heating cycle is complete, carefully open the glass door. Use heat-resistant gloves or tongs to remove the hot towels to prevent burns.
7. **Power Off:** Press the power button to turn off the unit when not in use.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your towel warmer.

- **Cleaning Exterior:** Wipe the exterior stainless steel cabinet and glass door with a soft, damp cloth. For stubborn stains, use a mild, non-abrasive cleaner. Dry thoroughly.
- **Cleaning Interior:** After the unit has cooled down and is unplugged, wipe the interior stainless steel surfaces and shelves with a damp cloth. For sanitation, a diluted disinfectant solution can be used, followed by a clean water rinse and thorough drying.
- **Shelf Cleaning:** The push-pull shelves can be removed for easier cleaning. Wash them with warm, soapy water, rinse, and dry completely before reinserting.
- **Descaling:** If mineral deposits accumulate on the interior surfaces, a descaling solution designed for stainless steel appliances can be used. Follow the descaling product's instructions carefully, ensuring thorough rinsing afterward.
- **Storage:** If storing the unit for an extended period, ensure it is clean, dry, and unplugged. Store in a cool, dry place away from direct sunlight and moisture.

6. TROUBLESHOOTING

Refer to this section for solutions to common issues. If the problem persists, contact customer support.

- **Unit Does Not Turn On:**
 - Ensure the power cord is securely plugged into a functional 110V outlet.
 - Check the circuit breaker or fuse box.
 - Verify the power button on the control panel has been pressed.
- **Towels Are Not Heating:**
 - Confirm the unit is powered on and the desired temperature is set.

- Check if the timer has expired. Reset the timer if necessary.
- Ensure the door is fully closed and the silica gel seal is intact.
- Avoid overloading the unit, which can hinder heat circulation.

• **Unusual Odor During Operation:**

- A slight odor may occur during the first few uses; this is normal. Ensure adequate ventilation.
- If the odor persists or is strong, unplug the unit and perform a thorough interior cleaning as described in the Maintenance section.
- Ensure only clean towels are placed inside.

• **Temperature Display Issues:**

- If the temperature display is incorrect or flickering, try powering the unit off and on again.
- Ensure the C/F switch button is pressed correctly for your desired unit of measurement.

7. SPECIFICATIONS

Brand	DERMALOGIC
Model	60L
Voltage	110V (USA Plug)
Input Power	220W
Outer Size (H x L x W)	26.5" x 14.5" x 17"
Product Dimensions (L x W x H)	17.3 x 14.2 x 26.2 inches
Weight	26.5 Pounds
Tank Capacity	60 Liters
Internal Temperature Range	149°F - 194°F (65°C - 90°C)
Timer Options	1 to 12 hours (automatic shut-off)
Shelves	2 (Push-pull)
Door Type	Glass Door with Silica Gel Seal
Material	Stainless Steel Cabinet

8. WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please contact the manufacturer or the seller directly. Refer to your purchase documentation for specific warranty terms and contact details.

If you purchased this product from Amazon, you may contact the seller, Madison & Park, through your Amazon order history for assistance.

Please have your model number (60L) and purchase date available when contacting support.

© 2023 DERMALOGIC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question