

Manuals.plus /

› Hotdot /

› Hotdot 6400mAh Electric Rechargeable Hand Warmers Instruction Manual

Hotdot 6400mAh Electric Hand Warmers

Hotdot 6400mAh Electric Rechargeable Hand Warmers

User Instruction Manual

INTRODUCTION

Thank you for choosing the Hotdot 6400mAh Electric Rechargeable Hand Warmers. This manual provides essential information for the safe and efficient use of your new device. Please read it thoroughly before operation and retain it for future reference.

These portable hand warmers are designed to provide warmth and comfort in cold conditions, featuring a rapid heating system, multiple temperature settings, and a long-lasting rechargeable battery. Each hand warmer has a 3200mAh battery, providing a combined 6400mAh capacity for the 2-pack.

PACKAGE CONTENTS

- 2 x Hotdot Electric Rechargeable Hand Warmers
- 1 x Charging Cable
- 1 x User Manual

SETUP

1. **Initial Charge:** Before first use, fully charge both hand warmers. Connect the charging cable to the charging port on the hand warmer and a suitable USB power source (e.g., computer, wall adapter). The charging indicator lights will show the charging status.
2. **Full Charge Indication:** The indicator lights will change or turn off once the device is fully charged. A full charge typically takes approximately 3.5 hours.

Extended Battery Life

Level 1 provides a 16-hour battery life



16h


Note: Battery life may vary based on actual heating settings.

Image: This image illustrates the extended battery life of the hand warmer, indicating up to 16 hours of warmth on the lowest setting. Note that actual battery life may vary based on the selected heating settings.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Locate the power button on the side of the hand warmer. Press and hold the power button for a few seconds to turn the device on. The LED indicator lights will illuminate. To turn off, press and hold the power button again until the lights extinguish.
2. **Adjust Temperature:** Once powered on, short press the power button to cycle through the available temperature settings. Each press will advance to the next heat level, indicated by the LED lights.

Effortless One-Button Use

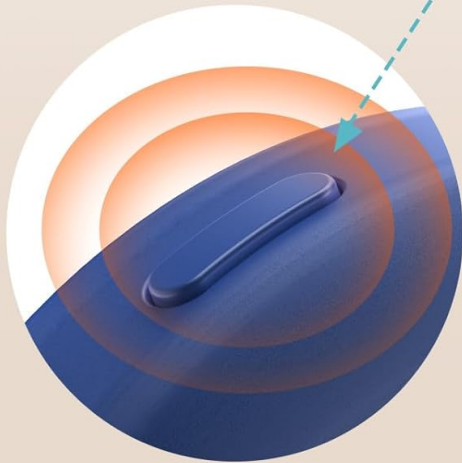

No More Complex Steps



Image: This image highlights the simple one-button operation for turning the device on/off and adjusting heat levels.



One-Second Heating

Industry-Leading Heating Tech

Image: This image demonstrates the rapid, one-second heating capability of the hand warmer, providing instant warmth.

TEMPERATURE SETTINGS

The Hotdot hand warmers offer three distinct temperature levels to suit your comfort needs:

- **Low:** 104°F - 113°F (approx. 20 hours of heat)
- **Medium:** 113°F - 122°F (approx. 13 hours of heat)
- **High:** 122°F - 131°F (approx. 9.5 hours of heat)

The built-in intelligent temperature control chip ensures precise temperature regulation and prevents overheating, providing a stable and safe warming experience.

Customize Your Comfort

Meet All Your Needs



Low: 104°F-113°F
Time: 20 Hours



Medium: 113°F-122°F
Time: 13 Hours



High: 122°F-131°F
Time: 9.5 Hours

Image: This image details the three customizable temperature settings and their approximate battery life durations.

CHARGING YOUR HAND WARMERS

When the battery is low, the indicator lights will signal the need for recharging. Use the provided charging cable to connect the hand warmer to a USB power source. The device is fully charged when the indicator lights confirm it, typically after 3.5 hours.

Note: Do not use the hand warmer while it is charging.

MAINTENANCE

- **Cleaning:** Wipe the surface of the hand warmer with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the hand warmers in a cool, dry place when not in use. Ensure they are fully charged before long-term storage to preserve battery health.
- **Battery Care:** To maximize battery lifespan, avoid completely draining the battery frequently. Recharge when the battery is low.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or device is off.	Charge the device fully. Press and hold the power button to turn on.
Device not heating up.	Device is off or on lowest setting.	Ensure the device is on. Cycle through temperature settings to a higher level.
Short battery life.	Using on high heat setting or not fully charged.	Fully charge the device. Use lower heat settings for longer duration.
Device not charging.	Faulty cable or power source.	Try a different charging cable or USB power adapter. Ensure connections are secure.

If you encounter any issues not listed here, please contact customer support.

SPECIFICATIONS

- **Brand:** Hotdot
- **Model:** 6400mAh Electric Rechargeable Hand Warmers (2-Pack)
- **Battery Capacity:** 3200 mAh per warmer (6400 mAh total for 2-pack)
- **Material:** Aluminum
- **Temperature Range:** 104°F - 131°F (40°C - 55°C)
- **Charging Time:** Approximately 3.5 hours
- **Reusability:** Rechargeable
- **Power Source:** Battery Powered
- **Dimensions (per item):** Approximately 3.3 x 1.8 x 0.5 inches (based on typical compact hand warmer size)
- **Weight (per item):** Approximately 0.2 lbs (based on typical compact hand warmer weight)

PRODUCT VIDEO

Your browser does not support the video tag.

Video: This video provides a visual demonstration of the Hotdot Electric Rechargeable Hand Warmers, showcasing their ease of use, rapid heating, and portability in various cold weather scenarios. It highlights the simple button operation and the different heat settings.

WARRANTY AND SUPPORT

Hotdot stands behind the quality of its products. Your Hotdot Electric Rechargeable Hand Warmers come with a **Lifetime Warranty**, ensuring peace of mind and long-term satisfaction.

For any inquiries, technical assistance, or warranty claims, please contact Hotdot customer support. We offer:

- 24/7 Quick Reply
- Free Replacement
- Lifetime Quality Support

You can visit the official Hotdot Store for more information and support: [Hotdot Store on Amazon](#)

