

Bomann KG7359

Bomann KG7359 Refrigerator and Freezer Instruction Manual

1. IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before using your appliance and keep it for future reference. Always include this manual if you pass the appliance on to a new owner.

General Safety

- This appliance is intended for household use only.
- Ensure the appliance is properly earthed.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Children should be supervised to ensure they do not play with the appliance.
- Unplug the appliance before cleaning or maintenance.

Electrical Safety

- Ensure the voltage indicated on the rating plate matches your household's mains voltage.
- Do not pull the power cord to disconnect the appliance. Always grasp the plug firmly.
- Do not operate the appliance with a damaged power cord or plug.

2. PRODUCT OVERVIEW

The Bomann KG7359 is a combined refrigerator and freezer unit designed for efficient food storage. It features a total net capacity of 173 liters, divided into a 121-liter refrigerator compartment and a 52-liter freezer compartment.







Image: Bomann KG7359 Refrigerator and Freezer with doors open, showcasing the interior compartments. The top section is the refrigerator, and the bottom section is the freezer.

Key features include:

- **Net Capacity:** 173 liters (121L refrigerator, 52L freezer).
- **Temperature Control:** Continuous temperature adjustment for the refrigerator (0°C to +10°C) and freezer ($\leq -18^{\circ}\text{C}$).
- **LED Interior Lighting:** Provides optimal visibility within the refrigerator.
- **Door Alarm Function:** Alerts you if the refrigerator door is left open for an extended period.
- **Smart Organization:** Features three glass shelves and a transparent vegetable drawer in the refrigerator, along with multiple freezer drawers.
- **Energy Efficiency:** Rated Class C with an annual energy consumption of approximately 124 kWh.

3. SETUP AND INSTALLATION

Unpacking and Placement

1. Remove all packaging materials and dispose of them responsibly.
2. Place the appliance on a firm, level surface. Use the adjustable feet to level the unit if necessary.
3. Ensure adequate ventilation around the appliance. Leave at least 10 cm of space at the back and sides for proper air circulation.
4. Avoid placing the appliance in direct sunlight or near heat sources like ovens or radiators.



Image: Detailed diagram of the Bomann KG7359 refrigerator and freezer dimensions: 142.5 cm height, 49.5 cm width, and 56 cm depth. This helps in planning the installation space.

Door Reversal


The door hinges on this appliance are reversible, allowing you to change the opening direction from right to left or vice versa to suit your kitchen layout. Refer to the detailed instructions provided in the full technical manual for the specific steps involved in reversing the door.

**Gesamt
173 L**

Kühlen: 121 L
Gefrieren: 52 L



**Wechselbarer
Türanschlag**

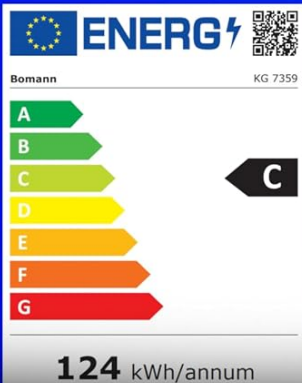



142,5 cm

Image: Diagram illustrating the overall dimensions (142.5 cm height) and total capacity (173L) of the Bomann KG7359, along with the energy label (Class C) and reversible door feature. The image also shows a QR code linking to the EPREL database for more energy information: <https://eprel.ec.europa.eu/qr/2036365>

Initial Power-On

1. After positioning the appliance, wait for at least 2-4 hours before plugging it into the power outlet. This allows the refrigerant fluids to settle.
2. Plug the appliance into a dedicated, properly earthed power socket.
3. Set the temperature control to a medium setting.
4. Allow the appliance to run empty for approximately 12-24 hours to reach its operating temperature before loading food.

4. OPERATING INSTRUCTIONS

Temperature Adjustment

The appliance features a continuous temperature control dial, typically located inside the refrigerator compartment. Rotate the dial to adjust the cooling intensity:

- **Lower numbers (e.g., 1-2):** Less cooling, suitable for lighter loads or cooler ambient temperatures.
- **Higher numbers (e.g., 4-5):** More cooling, suitable for heavier loads or warmer ambient temperatures.

The refrigerator compartment maintains a temperature range of 0°C to +10°C, while the freezer compartment maintains ≤ -18°C for optimal food preservation.

Food Storage Guidelines

Proper organization helps maintain food freshness and energy efficiency.

» Oberes Fach

Marmelade, gegarte Lebensmittel, verpackter Käse etc.

» Mittleres Fach

Milch, Joghurt, Soße, unverpackter Käse etc.

» Unteres Fach

Wurst, frisches Fleisch, Fisch, Kuchen etc.

» Gemüsefach

Salat, Kräuter, Gemüse



Image: Visual guide for optimal food storage within the refrigerator, indicating recommended items for the upper, middle, lower, and vegetable compartments.

- **Upper Compartment:** Ideal for jams, cooked foods, and packaged cheese.

- **Middle Compartment:** Suitable for milk, yogurt, sauces, and unpackaged cheese.
- **Lower Compartment:** Best for sausages, fresh meat, fish, and cakes.
- **Vegetable Drawer:** Designed for salads, herbs, and vegetables to maintain their crispness.

Flexibles Kühlfach mit 121 Liter

Das Allroundtalent für jeden Haushalt



Verstellbarer
Glasboden

Transparente
Gemüseschale

Image: Close-up view of the refrigerator compartment, highlighting adjustable glass shelves and a transparent vegetable drawer, providing flexible storage options.



Image: Close-up view of the freezer compartment, showing the 4-star rating, an open drawer, and two additional freezer drawers, including an ice cube tray for convenient frozen food storage.

Door Alarm Function

The appliance is equipped with an acoustic door alarm. If the refrigerator door is left open for an extended period, an audible signal will sound to alert you, helping to prevent temperature fluctuations and energy waste.

5. MAINTENANCE

Cleaning

Regular cleaning ensures optimal performance and hygiene.

1. Always unplug the appliance before cleaning.
2. Clean the interior with a soft cloth dampened with a solution of lukewarm water and a mild, neutral detergent. Avoid abrasive cleaners or solvents.

- 3. Wipe down the exterior surfaces with a soft, damp cloth. For stainless steel finishes, use a specialized stainless steel cleaner.
- 4. Clean the door seals regularly to ensure a tight seal.
- 5. Periodically clean the condenser coils at the back of the appliance with a soft brush or vacuum cleaner to improve energy efficiency.

Defrosting

The freezer compartment of this appliance requires manual defrosting. Frost buildup can reduce cooling efficiency and storage capacity.

- 1. When the frost layer reaches about 3-5 mm thick, it's time to defrost.
- 2. Unplug the appliance.
- 3. Remove all food items from the freezer and store them in a cool place or another freezer.
- 4. Leave the freezer door open to allow the frost to melt naturally. Place towels at the bottom to absorb water.
- 5. Do not use sharp objects or heating devices to speed up defrosting, as this can damage the appliance.
- 6. Once defrosted, clean and dry the interior thoroughly before plugging the appliance back in and returning food.

Power Outage

In the event of a power failure, the appliance can maintain the temperature for a maximum of 7 hours, helping to keep your frozen food preserved for a limited time.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply. Power cord not plugged in. Fuse blown.	Check power connection. Check household fuse.
Appliance is not cooling sufficiently.	Temperature setting too high. Door opened too frequently. Too much food loaded. Poor ventilation.	Adjust temperature setting lower. Avoid frequent door openings. Do not overload. Ensure proper ventilation.
Unusual noise.	Appliance not level. Objects touching the back of the appliance.	Adjust leveling feet. Move appliance away from walls or other objects.
Door alarm sounds frequently.	Door not closed properly. Door seal dirty or damaged.	Ensure door is fully closed. Clean or inspect door seal for damage.

Betriebsgeräusch



Temperaturbe-
reich: 0°C ~+10°C

Temperatur-
bereich: ≤ -18°C

Nutzzinhalt:
173 Liter



Image: Diagram showing the operating noise level (40 dB), temperature ranges for the refrigerator (0°C to +10°C) and freezer (≤ -18°C), and the total usable volume of 173 liters. The noise level of 40 dB is comparable to a quiet whisper.

7. SPECIFICATIONS

Feature	Specification
Brand	Bomann
Reference Number	773599
Item Model Number	773599
Product Dimensions (L x W x H)	1 x 1 x 1 cm; 42 kilograms (Note: Other dimensions indicate 49.5 x 56 x 142.5 cm)
Capacity	173 Liters

Feature	Specification
Annual Energy Consumption	124 kWh per year
Refrigerator Volume	121 Liters
Freezer Volume	52 Liters
Installation Type	Freestanding
Type	Standard Depth
Special Features	Acoustic door alarm function for open refrigerator compartment, Storage time during power failure: max. 7H, Open drawer for easy access
Color	Stainless Steel
Voltage	240 Volts
Number of Grids / Supports	6
Number of Drawers	3
Door	Reversible
Door Finish	Stainless Steel
Shelf Type	Glass
Number of Shelves	3
Certification	Energy Star
Material	18/10 Steel
Weight	42 Kilograms
Spare Parts Availability	2 Years
Country of Origin	China
Configuration	Bottom Freezer
BEE Rating	4 Stars
Number of Doors	2



ENERG 



Bomann

KG 7359



124 kWh/annum



52 L



121 L



40 dB

AB **C** D

Image: Energy label for the Bomarini KG7359, showing energy class C, annual energy consumption of 124 kWh, 52L freezer volume, 121L refrigerator volume, and 40 dB noise level. For more details, visit the EPREL database: <https://eprel.ec.europa.eu/qv/2036365>

Produktdatenblatt																																																																																			
DELEGIERTE VERORDNUNG (EU) 2019/2016 DER KOMMISSION zur Energieverbrauchskennzeichnung von Kühlgeräten																																																																																			
Name oder Handelsmarke des Lieferanten: Bomann																																																																																			
Anschrift des Lieferanten: Zentrale Bomann, Heinrich-Horten-Straße 17, 47906 Kempen, DE																																																																																			
Modellkennung: KG 7359																																																																																			
Art des Kühlgeräts:																																																																																			
Geräuscharmes Gerät:		Nein	Bauart:		freistehend																																																																														
Weinlagerschrank:		Nein	Anderes Kühlgerät:		Ja																																																																														
Allgemeine Produktparameter:																																																																																			
Parameter		Wert		Parameter																																																																															
Gesamtabmessungen (in Millimeter)	Höhe	1 425		Gesamtrauminhalt (in dm³ oder l)	173																																																																														
	Breite	495																																																																																	
	Tiefe	560																																																																																	
EEI		64		Energieeffizienzklasse																																																																															
Luftschallemissionen (in dB(A) re 1 pW)		40		Luftschallemissionsklasse																																																																															
Jährlicher Energieverbrauch (in kWh/a)		124		Klimaklasse:																																																																															
Mindestumgebungstemperatur (in °C), für die das Kühlgerät geeignet ist		16		Höchstumgebungstemperatur (in °C), für die das Kühlgerät geeignet ist																																																																															
Winterschaltung		Nein																																																																																	
Fachparameter:																																																																																			
Fachtyp		Fachparameter und #werte																																																																																	
		Rauminhalt des Fachs (in dm³ oder l)	Empfohlene Temperatureinstellung für eine optimierte Lebensmittellagerung (in °C) Diese Einstellungen dürfen nicht im Widerspruch zu den Lagerbedingungen nach Anhang IV	Gefriervermögen (in kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)																																																																														
<table border="1"> <thead> <tr> <th colspan="2"></th> <th colspan="4">Tabelle 3 stehen</th> </tr> </thead> <tbody> <tr> <td>Speisekammerfach</td> <td>Nein</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>Weinlagerfach</td> <td>Nein</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>Kellerfach</td> <td>Nein</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>Lagerfach für frische Lebensmittel</td> <td>Ja</td> <td>121,0</td> <td>4</td> <td>-</td> <td>A</td> </tr> <tr> <td>Kaltlagerfach</td> <td>Nein</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>Null-Sterne- oder Eisbereiterfach</td> <td>Nein</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>Ein-Stern-Fach</td> <td>Nein</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>Zwei-Sterne-Fach</td> <td>Nein</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>Drei-Sterne-Fach</td> <td>Nein</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>Vier-Sterne-Fach</td> <td>Ja</td> <td>52,0</td> <td>-18</td> <td>2,6</td> <td>M</td> </tr> <tr> <td>Zwei-Sterne-Abteil</td> <td>Nein</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>Fach mit variabler Temperatur</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>								Tabelle 3 stehen				Speisekammerfach	Nein	-	-	-	-	Weinlagerfach	Nein	-	-	-	-	Kellerfach	Nein	-	-	-	-	Lagerfach für frische Lebensmittel	Ja	121,0	4	-	A	Kaltlagerfach	Nein	-	-	-	-	Null-Sterne- oder Eisbereiterfach	Nein	-	-	-	-	Ein-Stern-Fach	Nein	-	-	-	-	Zwei-Sterne-Fach	Nein	-	-	-	-	Drei-Sterne-Fach	Nein	-	-	-	-	Vier-Sterne-Fach	Ja	52,0	-18	2,6	M	Zwei-Sterne-Abteil	Nein	-	-	-	-	Fach mit variabler Temperatur	-	-	-	-	-
		Tabelle 3 stehen																																																																																	
Speisekammerfach	Nein	-	-	-	-																																																																														
Weinlagerfach	Nein	-	-	-	-																																																																														
Kellerfach	Nein	-	-	-	-																																																																														
Lagerfach für frische Lebensmittel	Ja	121,0	4	-	A																																																																														
Kaltlagerfach	Nein	-	-	-	-																																																																														
Null-Sterne- oder Eisbereiterfach	Nein	-	-	-	-																																																																														
Ein-Stern-Fach	Nein	-	-	-	-																																																																														
Zwei-Sterne-Fach	Nein	-	-	-	-																																																																														
Drei-Sterne-Fach	Nein	-	-	-	-																																																																														
Vier-Sterne-Fach	Ja	52,0	-18	2,6	M																																																																														
Zwei-Sterne-Abteil	Nein	-	-	-	-																																																																														
Fach mit variabler Temperatur	-	-	-	-	-																																																																														
Für Vier-Sterne-Fächer																																																																																			
Schnelleinfrierfunktion			Nein																																																																																
Lichtquellenparameter:																																																																																			
Art der Lichtquelle			LED																																																																																
Energieeffizienzklasse			G																																																																																
Mindestlaufzeit der vom Hersteller angebotenen Garantie: 24 Monate																																																																																			
Weitere Angaben:																																																																																			
Weblink zur Website des Lieferanten, auf der die Informationen gemäß Anhang II Nummer 4 der Verordnung (EU) 2019/2019 der Kommission zu finden sind: www.bomann-germany.de																																																																																			



Image: Official product data sheet (EPREL) for the Bomann KG7359, detailing technical specifications and energy information. This document provides comprehensive regulatory data. The QR code on the document links to: <https://eprel.ec.europa.eu/qr/2036365>

8. WARRANTY AND SUPPORT

Warranty Information

The Bomann KG7359 Refrigerator and Freezer comes with a **24-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the availability of spare parts for a period of 2 years. Please retain your proof of purchase for any warranty claims.

Customer Support

For technical assistance, warranty claims, or spare parts inquiries, please contact your retailer or the Bomann customer service department. You can find contact information on the official Bomann website or through your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question