

[Manuals.plus](#) /

> [PORLEI](#) /

> Wired Trackball Mouse, Easy Index Finger Control, Ergonomic Comfort Design Reduces Muscle Strain, Precision and Smooth Tracking, Compatible for PC, Laptop, Windows, Mac-Red A-Red

PORLEI TM552

PORLEI Wired Trackball Mouse User Manual

Model: TM552

INTRODUCTION

Thank you for choosing the PORLEI Wired Trackball Mouse. This manual provides essential information for setting up, operating, and maintaining your new trackball mouse. Designed for ergonomic comfort and precision, this device aims to enhance your productivity and reduce strain during extended use.






Figure 1: PORLEI Wired Trackball Mouse (Red A-Red variant)

What's in the Box

- 1 x PORLEI Wired Trackball Mouse
- 1 x User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components and features of your PORLEI Wired Trackball Mouse.

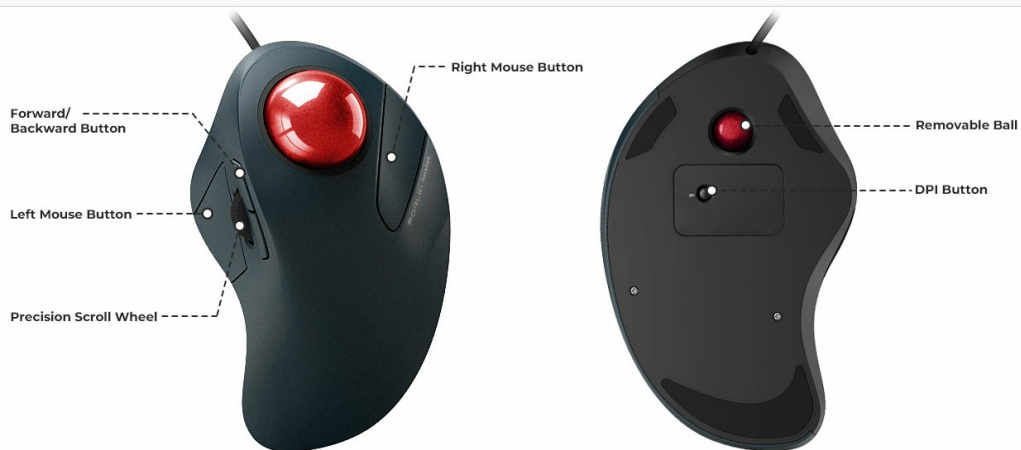

*All mouse buttons are not programmable.
*Forward/Backward buttons are not compatible with MAC OS.

Figure 2: Mouse Components and Button Layout

- **Right Mouse Button:** Standard right-click functionality.
- **Forward/Backward Buttons:** Navigate web pages or folders. *Note: These buttons are not compatible with Mac OS.*
- **Left Mouse Button:** Standard left-click functionality.
- **Precision Scroll Wheel:** For vertical scrolling.
- **Removable Ball:** The 44mm trackball can be removed for cleaning.
- **DPI Button:** Located on the bottom of the mouse, used to adjust cursor sensitivity.

SETUP

The PORLEI Wired Trackball Mouse is designed for simple plug-and-play operation.

1. **Connect the USB Cable:** Locate an available USB-A port on your computer (PC, laptop, desktop). Insert the 1.8m USB cable of the trackball mouse firmly into the USB port.
2. **System Recognition:** Your operating system (Windows, Mac OS, etc.) will automatically detect and install the necessary drivers. No manual driver installation is required.
3. **Ready for Use:** Once the system recognizes the device, the mouse is ready for immediate use.



OPERATING INSTRUCTIONS

Using the Trackball

The primary method of cursor control is through the 44mm index finger trackball. Use your index finger to roll the ball in any direction to move the cursor on the screen.



Figure 4: Ergonomic Design for Comfortable Use

Adjusting DPI (Cursor Speed)

The mouse features 5 distinct DPI settings, allowing you to customize cursor sensitivity. To change the DPI:

1. Locate the DPI button on the bottom of the mouse.
2. Press the DPI button to cycle through the available settings (200 DPI, 400 DPI, 800 DPI, 1200 DPI, 1600 DPI).
3. Select the DPI setting that best suits your preference and task.

Button Functions

- **Left Click:** Standard selection and activation.
- **Right Click:** Access contextual menus.
- **Scroll Wheel:** Roll up or down to scroll through documents and web pages. Press the scroll wheel for middle-click functionality (if supported by your software).
- **Forward/Backward Buttons:** Use for quick navigation in web browsers or file explorers.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your trackball mouse.

Cleaning the Trackball

Dust and debris can accumulate around the trackball, affecting its smooth operation. Clean the trackball periodically:

1. **Remove the Trackball:** Gently push the trackball from the underside of the mouse or carefully pry it out from the top.
2. **Clean the Ball:** Wipe the trackball with a soft, lint-free cloth. If necessary, dampen the cloth slightly with water or a mild, non-abrasive cleaner. Ensure the ball is completely dry before reinserting.
3. **Clean the Socket:** Use a cotton swab or a soft brush to remove any dust or debris from inside the trackball socket and around the optical sensor.
4. **Reinsert the Trackball:** Place the clean trackball back into its socket, ensuring it sits securely and rolls freely.

Removable Ball

Effortlessly Remove Trackball for Cleaning



Figure 5: Removing the Trackball for Cleaning

General Cleaning

Wipe the exterior of the mouse with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.

TROUBLESHOOTING

If you encounter issues with your PORLEI Wired Trackball Mouse, refer to the following common solutions:

- **Mouse Not Responding:**

- Ensure the USB cable is securely plugged into a working USB port on your computer.
- Try plugging the mouse into a different USB port.
- Restart your computer.

- **Cursor Movement is Erratic or Jumpy:**

- Clean the trackball and its socket as described in the Maintenance section. Dust or debris can interfere with the optical sensor.
- Ensure the surface the mouse is on is stable and clean, although the trackball design minimizes surface dependency.

- **Buttons Not Functioning:**

- Verify the mouse is properly connected.
 - For Forward/Backward buttons, remember they are not compatible with Mac OS.
 - Test the mouse on another computer if possible to rule out system-specific issues.
- **DPI Adjustment Not Working:**
 - Ensure you are pressing the correct DPI button located on the bottom of the mouse.

If these steps do not resolve the issue, please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	PORLEI
Model Number	TM552
Connectivity Technology	USB Wired
Movement Detection	Trackball
DPI Settings	200, 400, 800, 1200, 1600
Cable Length	1.8 meters
Color	A-Red
Item Weight	9.6 ounces (approx. 272 grams)
Package Dimensions	7.01 x 4.37 x 2.52 inches
Compatibility	Windows, Mac OS, Laptops, Desktops
Special Features	Ergonomic Design, USB Wired, Removable Trackball
Country of Origin	China

WARRANTY AND SUPPORT

PORLEI products are manufactured with quality and reliability in mind. For specific warranty information and support inquiries, please refer to the documentation included with your purchase or contact PORLEI customer service directly.

For the most up-to-date support information, please visit the official PORLEI website or contact their customer service department using the contact details provided on the product packaging or their official store page.

Note: This manual does not constitute a warranty. Warranty terms and conditions are subject to change and may vary by region.