Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

XJ-HOME XJ-H01

XJ-HOME All-in-One Vinyl Record Player Instruction Manual

Model: XJ-H01

Introduction

Thank you for choosing the XJ-HOME All-in-One Vinyl Record Player. This high-fidelity turntable is designed to provide an exceptional audio experience, combining classic vinyl playback with modern features like Bluetooth connectivity and USB recording. With its integrated 4-speaker system and magnetic cartridge, you can enjoy rich, warm sound directly from the unit or connect to external audio systems. Please read this manual carefully to ensure proper setup, operation, and maintenance of your new record player.



The XJ-HOME All-in-One Vinyl Record Player in Black Walnut Wood.

Included Components


Please verify that all the following items are included in your package:

- Vinyl Record Player Unit
- Power Adapter
- USB-to-PC Cable
- Dust Cover
- Instruction Manual (this document)

Setup Guide

Follow these steps to properly set up your XJ-HOME Vinyl Record Player:

1. **1. Install the Drive Belt:**
   Carefully wrap the drive belt around the raised circle on the back of the platter. Ensure it is seated correctly.

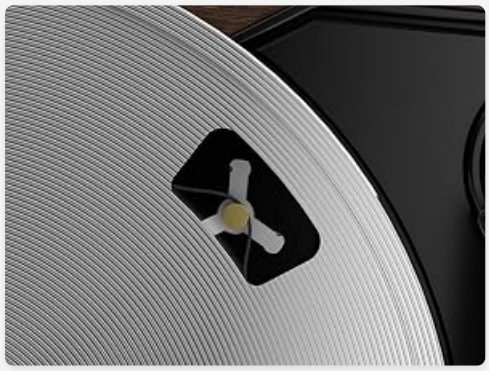

Step 1: Installing the drive belt on the platter.

2. **2. Position the Platter:**
   Align the platter with the center axis of the record player and gently place it down. Make sure the belt is properly positioned around the motor pulley.



Steps 1-6: Detailed assembly of the turntable platter and felt mat.

3. **3. Place the Felt Mat:**
   Place the included felt mat on top of the platter.

4. **4. Connect Power and Turn On:**
   Plug the power adapter into the DC IN 15V port on the back of the unit, then plug it into a wall outlet. Turn the power switch to the 'ON' position.



Rear panel connections including power input.

5. **5. Remove Stylus Protective Cover:**
   Carefully remove the clear plastic protective cover from the stylus (needle) at the end of the tonearm.

6. **6. Unlock the Tonearm:**
   Release the tonearm from its rest by gently moving the tonearm lock.

7. **7. Adjust Counterweight (if necessary):**
   The adjustable counterweight allows for precise tracking force. For optimal performance, adjust the counterweight scale to 3.5g. Refer to the detailed instructions in the full manual for precise adjustment.



The adjustable counterweight on the tonearm.

Operating Instructions

Playing Vinyl Records

1. Place a vinyl record on the felt mat on the platter.

2. Select the appropriate speed (33 or 45 RPM) using the speed selector switch. For 45 RPM records, ensure you use the included 45 RPM adapter if the record has a large center hole.



The speed selector and supported record sizes (7", 10", 12").

3. Gently lift the tonearm using the cueing lever. Position the tonearm over the desired starting groove of the record.

4. Slowly lower the tonearm using the cueing lever. The stylus will make contact with the record, and playback will begin.

5. Adjust the volume using the volume knob on the control panel.

6. To stop playback, lift the tonearm using the cueing lever and return it to its rest. The turntable features an auto-stop function that will stop the platter rotation when the record finishes.

Bluetooth Connectivity

The XJ-HOME turntable features Bluetooth 5.0, allowing you to stream audio wirelessly from your compatible devices (e.g., smartphones, tablets) through the turntable's built-in speakers.

1. Turn on the record player. The Bluetooth indicator light will begin to flash, indicating it is in pairing mode.

2. On your Bluetooth-enabled device, search for available Bluetooth devices and select "XJ-HOME H01" (or similar name) to pair.

3. Once successfully paired, the Bluetooth indicator light will remain solid. You can now play music from your device through the turntable's speakers.



Seamless Bluetooth 5.0 connection for streaming music from your devices.

Note: This turntable acts as a Bluetooth receiver. It does not support outputting audio to external Bluetooth headphones or speakers.

USB to PC Recording

You can convert your vinyl records into digital MP3 files by connecting the turntable to your computer via the USB-to-PC cable.

1. Connect one end of the USB-to-PC cable to the USB-PC port on the back of the turntable and the other end to an available USB port on your computer.

2. Install appropriate recording software on your computer (not included). Many free or paid options are available online.

3. Follow the instructions of your chosen recording software to begin recording your vinyl playback. This allows you to preserve your classic music collection digitally.

Maintenance

Cleaning the Turntable

- Wipe the exterior surfaces of the turntable with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, abrasive cleaners, or waxes, as they may damage the finish.
- Keep the dust cover clean to prevent dust from settling on the platter and records.

Stylus Care

- The stylus is delicate. Handle it with extreme care.
- Clean the stylus regularly using a soft brush designed for stylus cleaning, brushing gently from back to front.
- Replace the stylus approximately every 300-500 hours of playback, or if you notice a degradation in sound quality.

Dust Cover Care

- The removable dust cover helps protect your turntable from dust and debris.
- Clean the dust cover with a soft, damp cloth. Avoid using abrasive materials that could scratch the acrylic.

Troubleshooting

If you encounter any issues with your record player, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power adapter not connected; Power outlet not working; Power switch is off.	Ensure power adapter is securely connected to the unit and a working outlet. Turn the power switch to 'ON'.
No Sound	Volume too low; Stylus protective cover still on; Tonearm not lowered; Incorrect input mode (e.g., Bluetooth selected for vinyl).	Increase volume. Remove stylus cover. Lower tonearm onto record. Ensure correct mode is selected.
Record Skipping	Record is dirty or damaged; Turntable not level; Stylus is worn or dirty; Tracking force incorrect.	Clean record. Place turntable on a stable, level surface. Clean or replace stylus. Adjust counterweight to 3.5g.
Distorted Sound	Stylus is worn or dirty; Record is dirty; Speakers overloaded.	Clean or replace stylus. Clean record. Reduce volume.
Bluetooth Connection Issues	Device not in pairing mode; Turntable not discoverable; Interference.	Ensure turntable is in Bluetooth pairing mode (flashing light). Restart both devices. Move closer to the turntable.

Specifications

- **Model Name:** XJ-HOME H01 Vinyl Record Player
- **Model Number:** XJ-H01
- **Color:** Black Walnut Wood
- **Product Dimensions:** 17.72 x 13.78 x 9.45 inches (45 x 35 x 24 cm)
- **Item Weight:** 24 pounds (10.91 kg)
- **Material:** Aluminum, Plastic, Wood
- **Connectivity Technology:** Auxiliary, Bluetooth
- **Maximum Rotational Speed:** 45 RPM (supports 33 1/3 and 45 RPM)
- **Speakers:** Built-in 4 stereo speakers (Bass 4" x2, 4Ω 30W; Treble 2" x2, 8Ω 10W)
- **Cartridge:** AT-3600L (MM) Magnetic Cartridge
- **Special Features:** AUX Input, Adjustable Counterweight, Adjustable Speed, Built-in Preamp, Built-in Bluetooth Receiver, Detachable Headshell, Digital Recorder (USB to PC), Dust Cover, RCA Output, Volume Control.



Product dimensions for the XJ-HOME H01 Vinyl Record Player.

Warranty and Support

XJ-HOME is committed to providing quality products and excellent customer service. Your XJ-HOME Vinyl Record Player comes with a three-year quality guarantee and lifetime parts support.

For any questions, technical assistance, or support needs, please contact XJ-HOME customer service. We offer 24-hour feedback on solutions before and after sales.

For more information and support resources, please visit the officialXJ-HOME Store.

© 2024 XJ-HOME. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DHV9BMRQ

More documents and user manuals: **https://manuals.plus/**