

[Manuals.plus](#) /

› [SKINACT](#) /

› SKINACT Elegance Massage/Facial Bed & Table Instruction Manual

SKINACT Elegance

SKINACT Elegance Massage/Facial Bed & Table Instruction Manual

Model: Elegance (Gray)

PRODUCT OVERVIEW

The SKINACT Elegance Massage/Facial Bed & Table is designed for professional use in spas, salons, and medical offices. It features a sturdy wooden frame, comfortable PVC vinyl upholstery, and adjustable components for optimal client comfort and practitioner convenience.



This image shows the SKINACT Elegance Massage/Facial Bed & Table fully assembled, highlighting its sleek design and functional features.

SAFETY INFORMATION

- Always ensure all bolts and fasteners are securely tightened before use.
- Do not exceed the working weight capacity of 350 lbs (static capacity 900 lbs).
- Keep hands and fingers clear of moving parts during adjustments.
- Use on a flat, stable surface to prevent tipping.
- Refer to the product packaging for any additional safety warnings.

SETUP AND ASSEMBLY

This section provides step-by-step instructions for assembling your SKINACT Elegance Massage/Facial Bed & Table. For a visual guide, please refer to the assembly video below.

Your browser does not support the video tag. This video demonstrates the assembly process for the Elegance Spa Massage Facial Bed & Table.

Step-by-Step Assembly

1. **Prepare the Main Bed Section:** Place the large portion of the bed cushion-down on a clean, flat work surface.





This image shows the main bed section placed upside down, revealing the wooden frame and the opening for the face cradle.

2. **Attach the First Leg Section:** Take one leg section and position it at one end of the bed. Ensure the "SKINACT" logo faces outwards. Align the pre-drilled holes.



This image illustrates the attachment of a leg section to the main bed frame, ensuring proper alignment.

3. **Secure the First Leg Section:** Use the longer bolts provided. Place a lock washer on each bolt before inserting it into the holes. Hand-tighten the bolts, then use the included Allen wrench to secure them firmly.
4. **Attach the Second Leg Section:** Repeat the process for the second leg section at the opposite end of the bed. If the backrest is slightly elevated, gently lift the frame to allow the backrest to click into place, providing more room for assembly.
5. **Install the Bottom Shelf:** Orient the bottom shelf correctly. Slide it between the leg sections and align the holes. Use the shorter bolts to partially secure the shelf, starting with opposite corners, then fully tighten all bolts with the Allen wrench.



This image details the installation of the bottom shelf, which provides convenient storage space.

6. **Right Side Up:** Carefully turn the assembled bed right side up.
7. **Install Face Cradle:** Insert the face cradle into the designated opening at the head of the bed. Adjust as needed.




This image highlights the adjustability of the face cradle for personalized comfort.

OPERATING INSTRUCTIONS

Adjusting Bed Height


The bed height can be adjusted from 25 to 33 inches. Locate the adjustment knobs on the legs. Loosen the knobs, adjust the legs to the desired height, and then securely tighten the knobs. Ensure all four legs are adjusted to the same height for stability.

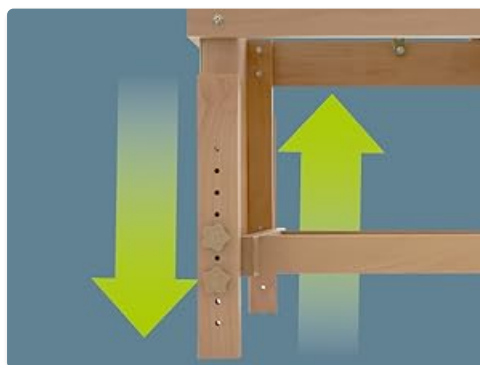

This image demonstrates the mechanism for adjusting the bed's height.

Adjusting Backrest Angle

The backrest can be manually adjusted to various angles. Lift the backrest section until it clicks into the desired position. To lower, lift it to its highest point, then gently push down to release the locking mechanism and lower it.

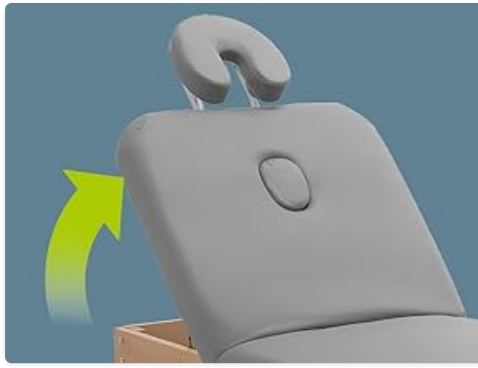

This image shows the backrest in an elevated position, illustrating its adjustability.

Using the Face Cradle

The face cradle is removable and adjustable. Insert it into the opening at the head of the bed. Adjust its angle and position for client comfort.

MAINTENANCE

Cleaning

To clean the PVC vinyl upholstery, wipe with a damp cloth. Do not use bleach or harsh chemicals, as these can damage the material.

General Care

Regularly check all bolts and fasteners to ensure they remain tight. Avoid placing excessive weight on any single point of the bed.

TROUBLESHOOTING

Instability

- Ensure all leg bolts are securely tightened.
- Verify that all four legs are adjusted to the same height.
- Check if the bed is placed on a level surface.

Difficulty Adjusting Backrest/Face Cradle

- Ensure no obstructions are preventing movement.
- For backrest, lift fully to release the lock before lowering.
- For face cradle, ensure it is inserted correctly into the receiving holes.

SPECIFICATIONS

Feature	Detail
Brand	SKINACT
Model	Elegance
Color	Grey

Material	Nylon, Wood (Upholstered in PVC vinyl)
Dimensions (L x W x H)	76 x 29 x 24 inches (Adjustable Length: 76-88 inches with headrest, Height: 25-33 inches, Width: 28.5 inches)
Cushion Thickness	3 inches
Working Capacity	350 lbs
Static Capacity	900 lbs
Item Weight	90 Pounds
Included Components	Face Cradle
Assembly Required	Yes

WARRANTY AND SUPPORT

Warranty Information

Please retain all original packaging for the duration of your warranty period. This may be required for returns or warranty claims. Once you have confirmed all functions are working properly, you may dispose of the packaging if space is a concern.

Customer Support

For any questions, concerns, or technical assistance regarding your SKINACT Elegance Massage/Facial Bed & Table, please contact SKINACT customer support. Refer to your purchase documentation for specific contact details.