

[Manuals.plus](#) /

› [LUMISOL](#) /

› LUMISOL Dual Motor Power Lift Recliner Chair with Massage and Heat User Manual

LUMISOL B0DKD739WN

LUMISOL Dual Motor Power Lift Recliner Chair User Manual

Model: B0DKD739WN

1. INTRODUCTION

Thank you for choosing the LUMISOL Dual Motor Power Lift Recliner Chair. This chair is designed to provide comfort and convenience with its power lift mechanism, dual motor recline, 8-point vibration massage, and lumbar heating functions. This manual provides essential information for safe assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your recliner.

Please read this manual thoroughly before assembly and use, and retain it for future reference.

2. SAFETY INSTRUCTIONS

- **Weight Capacity:** Do not exceed the maximum weight capacity of 350 lbs (158 kg).
- **Children and Pets:** Keep children and pets away from the chair's moving parts. Do not allow them to play on or under the chair.
- **Power Cord:** Ensure the power cord is not pinched, tangled, or placed under the chair. Keep it away from heat sources and sharp edges.
- **Liquids:** Avoid spilling liquids on the chair, especially near electrical components.
- **Clearance:** Ensure adequate clearance around the chair when reclining or lifting to prevent obstruction or injury.
- **Unplug When Not in Use:** Always unplug the chair from the power outlet before cleaning or if it will not be used for an extended period.
- **Professional Repair:** Do not attempt to repair the chair yourself. Contact qualified service personnel for any repairs.

3. PACKAGE CONTENTS

Your LUMISOL Power Lift Recliner Chair is shipped in two boxes. Please ensure all components are present before beginning assembly. If any parts are missing or damaged, contact customer service.

- Seat Base (1)

- Backrest (1)
- Armrests (2)
- Power Adapter (1)
- Power Remote Control (1)
- Assembly Hardware (screws, washers, etc.)
- Instruction Manual (1)

PRODUCT DIMENSION



Figure 3.1: Product dimensions, weight capacity (350 lbs), and indication of delivery in two boxes (Box A and Box B).

4. ASSEMBLY INSTRUCTIONS

Partial assembly is required. All necessary tools are included. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Attach Backrest:** Slide the backrest onto the metal brackets located on the seat base. Ensure it clicks securely into place.
3. **Attach Armrests:** Connect the armrests to the sides of the seat base, aligning the metal slots and pushing

down until they lock.

4. **Connect Wiring:** Locate the electrical cables extending from the backrest and seat base. Connect them according to the color-coded connectors. Ensure all connections are firm.
5. **Connect Power Adapter:** Plug the power adapter into the chair's power input port, then plug the adapter into a standard wall outlet.
6. **Test Functions:** Before use, test all functions (lift, recline, massage, heat) using the remote control to ensure proper operation.

5. OPERATING INSTRUCTIONS

5.1. Power Lift and Recline Functions

The chair features a dual motor system for independent control of the backrest and footrest, as well as a power lift function to assist in standing.



Figure 5.1: Remote control for power lift and recline functions.

- **Footrest Up/Down:** Use the dedicated buttons on the remote to raise or lower the footrest independently.


- **Backrest Up/Down:** Use the dedicated buttons to adjust the backrest angle independently from 45° to 180°.
- **One-Click Stand Assistance:** Press the designated button to gently lift the chair to an almost standing position, assisting the user in getting up.
- **Home Position:** Press the "HOME" button to return the chair to its upright, default position.

DUAL MOTOR LIFT CHAIR



Figure 5.2: Illustration of the dual motor system allowing independent adjustment of backrest (45°-180°) and footrest (90°-180°).


45°-180° ADJUSTABLE ANGLE

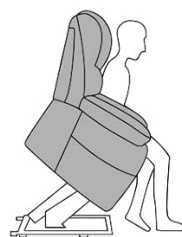


45°
Lifting



110°
Reading

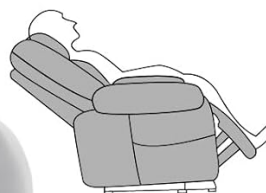

140°
Watching TV

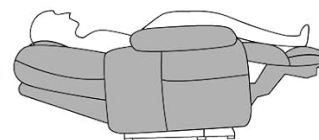

180°
Sleeping



Figure 5.3: Visual guide to adjustable angles for different activities: 45° (Lifting), 110° (Reading), 140° (Watching TV), and 180° (Sleeping).

5.2. Massage and Heating Functions

The recliner features an 8-point vibration massage system and a lumbar heating function for enhanced relaxation.



Figure 5.4: Overview of massage and heating features with remote control.



Figure 5.5: Detailed view of the massage and heating remote control.

- **8-Point Vibration Massage:** The chair has 8 vibrating nodes located in the back, lumbar, thighs, and legs.
- **3 Massage Modes:** Select from different massage modes (e.g., pulse, press, wave) using the remote.
- **Intensity Adjustment:** Adjust the massage intensity to your preference.
- **Lumbar Heating:** Activate the integrated lumbar heat point for soothing warmth.
- **Timer Function:** Set the massage and heating duration for 15, 30, or 60 minutes using the timer button.

6. MAINTENANCE AND CARE

- **Cleaning:** For the faux leather upholstery, wipe with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. For tougher stains, use a mild soap solution and wipe dry immediately.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Electrical Components:** Keep all electrical components dry. Do not immerse any part of the chair in water.
- **Inspections:** Periodically check all connections and hardware to ensure they are secure. Tighten any loose screws.

- **Storage:** If storing the chair, ensure it is in an upright position, unplugged, and in a dry environment.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not power on.	Power cord unplugged; outlet not working; loose connection.	Ensure power cord is securely plugged into chair and wall outlet. Test outlet with another device. Check all internal wiring connections.
Motor not responding to remote.	Remote control issue; motor connection loose.	Ensure remote cable is securely connected to the chair. Check for any obstructions to moving parts.
Massage/Heating not working.	Function not activated; loose wiring.	Ensure the massage/heating function is activated via the remote. Check wiring connections for these specific functions.
Chair makes unusual noises.	Loose hardware; obstruction in mechanism.	Check and tighten all visible hardware. Inspect for any foreign objects caught in the reclining mechanism.

If the problem persists after attempting these solutions, please contact customer support.

8. PRODUCT SPECIFICATIONS

- **Brand:** LUMISOL
- **Model:** B0DKD739WN
- **Overall Dimensions (Upright):** 36.7"L x 37.1"W x 44.5"H
- **Product Weight:** 114.4 lbs
- **Weight Capacity:** 350 lbs
- **Upholstery Material:** Faux Leather
- **Frame Material:** Metal, Wood (Pine)
- **Filler:** Fiber Foam and Polyester Fiber Pad
- **Motion Functionality:** Dual Motor Power Lift and Recline
- **Massage:** 8-Point Vibration Massage (Back, Lumbar, Thighs, Legs)
- **Heating:** Lumbar Heat Point
- **Assembly:** Partial Assembly Required

PRODUCT DIMENSION



Figure 8.1: Detailed product dimensions and weight capacity.

9. WARRANTY AND SUPPORT

LUMISOL provides a warranty for this product. For specific warranty details, including coverage and duration, please refer to the warranty card included with your purchase or contact LUMISOL customer service.

If you encounter any issues or have questions regarding your recliner, please do not hesitate to contact our dedicated customer support team for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DKD72ZKB>

More documents and user manuals: <https://manuals.plus/>