



Manuals.plus /

› Pawlytek /

› Pawlytek Smart Interactive Cat Toy Ball P01 User Manual

## Pawlytek P01

# Pawlytek Smart Interactive Cat Toy Ball P01 User Manual

Model: P01

## 1. PRODUCT OVERVIEW

---

The Pawlytek Smart Interactive Cat Toy Ball is designed to provide engaging and stimulating play for indoor cats. It features automatic movement, obstacle avoidance, and multiple interaction modes to keep your feline companion entertained.



*Image 1.1: The Pawlytek Smart Interactive Cat Toy Ball, featuring its red color and transparent outer shell, with a curious cat observing it.*

## 2. PACKAGE CONTENTS

---

Please verify that all items are present in your package:

- 1 x Smart Interactive Cat Toy Ball
- 1 x USB Charging Cable
- 1 x Bell Attachment
- 2 x Plush Hair Ties (accessories for the ball)



Image 2.1: Visual representation of the items included in the package: the main toy ball, a USB cable, a bell accessory, and two plush hair ties.

## 3. SETUP

---

### 3.1 Charging the Toy Ball

Before first use, fully charge the toy ball. The device uses a Type-C USB charging port.

1. Locate the Type-C charging port on the toy ball.
2. Connect the provided USB charging cable to the toy ball and a suitable USB power source (e.g., computer, wall adapter).
3. A full charge typically takes approximately 0.5 hours.
4. Once fully charged, the toy provides up to 1.5 hours of playtime.

### 3.2 Attaching Accessories

The toy ball comes with a bell and plush hair ties that can be attached for added interaction.

- To attach the bell, clip it onto the designated loop on the toy ball's outer shell.
- The plush hair ties can be used to customize the toy's appearance or provide different textures for your cat to interact with.

# Pawlytek 2nd Gen Cat Ball

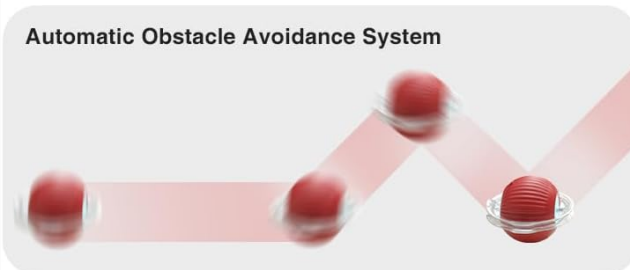


Image 3.1: Details on charging the device via USB-C, indicating 0.5 hours charge time for 1.5 hours playtime. Also highlights the durable silicone material and the attachable bell feature.

## 4. OPERATING INSTRUCTIONS

### 4.1 Powering On/Off and Mode Selection

The toy ball features an automatic on/off function and multiple interaction modes.

- To activate the toy, press the power button located on the ball.
- Each press of the power button cycles through the available interaction modes, indicated by different LED light colors.

### 4.2 Interaction Modes

The toy ball offers three distinct interaction modes:

- **Fast Mode (Blue Light):** Provides fast rolling motion, ideal for active and energetic cats.
- **Slow Mode (Purple Light):** Offers a slow to fast rolling motion, suitable for timid cats.
- **Interactive Mode (Yellow Light):** Features fast shaking and rolling, designed for curious cats.

# 3 Interaction Modes

## Fast Mode

blue light: fast rolling

perfect for active and energetic cats



## Slow Mode

purple light: slow to fast rolling

perfect for timid cats



## Interactive Mode

yellow light: fast shaking and rolling

perfect for curious cats



*Image 4.1: Illustration of the three interaction modes: Fast Mode with blue light for active cats, Slow Mode with purple light for timid cats, and Interactive Mode with yellow light for curious cats.*

## 4.3 Automatic Obstacle Avoidance

The toy ball is equipped with an intelligent obstacle avoidance system, allowing it to navigate various surfaces and avoid getting stuck.

# Intelligent Obstacle Avoidance



*Image 4.2: A cat observes the toy ball as it demonstrates its intelligent obstacle avoidance capabilities, moving around objects on the floor.*

## **4.4 Play/Rest Balance**

To prevent overstimulation and conserve battery, each mode will enter a rest mode after running for 5 minutes. The toy will reactivate upon touch, encouraging intermittent play.

# Play Rest Balance

Each mode will enter rest mode after running for 5 minutes and will reactivate upon touch



*Image 4.3: A cat resting near the toy ball, symbolizing the 'Play Rest Balance' feature where the toy pauses after 5 minutes and reactivates with touch.*

## 5. MAINTENANCE

---

### 5.1 Cleaning the Toy Ball

The toy ball features a detachable structure for easy cleaning, especially for removing accumulated cat hair.

1. To detach the outer shell, use a small tool (e.g., a thin plastic pry tool or a fingernail) to gently pry open the buckle on the transparent ring.
2. Once the buckle is open, carefully remove the buckle ring.
3. Separate the inner ball from the outer shell.
4. Clean any hair or debris from both parts using a soft cloth. Do not immerse the electronic components in water.
5. Reassemble the toy by aligning the inner ball with the outer shell and snapping the buckle ring back into place.

# Detachable Structure for Easy Hair Cleaning



Use the tool to pry open the buckle and remove the buckle ring

*Image 5.1: Instructions on how to detach the toy ball's outer shell for cleaning, showing the buckle and ring components.*

## 6. TROUBLESHOOTING

---

If you encounter issues with your Pawlytek Smart Interactive Cat Toy Ball, please refer to the following common solutions:

- **Toy not turning on:** Ensure the toy is fully charged. Connect it to the USB charging cable and allow it to charge for at least 30 minutes.
- **Toy not moving or moving erratically:** Check for any obstructions (e.g., cat hair, debris) in the moving parts. Clean the toy as described in Section 5.1. Ensure it is on a relatively flat surface.
- **Short battery life:** Ensure the toy is fully charged before use. Battery performance can vary based on usage patterns and environmental factors.
- **Toy not reactivating after rest mode:** Gently tap or nudge the toy to trigger its motion sensor and reactivate it.

If the problem persists, please contact customer support.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Name	P01
Item Weight	2.89 ounces
Item Dimensions (LxWxH)	2.14 x 2.53 x 3.12 inches
Battery Type	1 Nonstandard Battery (included)
Charging Time	Approx. 0.5 hours
Playtime per Charge	Up to 1.5 hours
Color	Red
Specific Uses	Indoor

## 8. WARRANTY AND SUPPORT

---

### 8.1 Warranty Information

This product is covered by a 30-day free return policy. Please refer to your purchase documentation for specific terms and conditions.

### 8.2 Customer Support

For further assistance, technical support, or warranty claims, please contact your retailer or the manufacturer directly through their official channels.