

## Bwrethay 1

# Bwrethay Dog Training Collar User Manual

Model: 1

## INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Bwrethay Dog Training Collar. Please read this manual thoroughly before operating the device to ensure proper training and the well-being of your dog.

## IMPORTANT SAFETY GUIDELINES

- This training collar is intended for dogs weighing 5-120 lbs with a neck size of 7.5-24 inches.
- Do not use this product on aggressive dogs.
- Avoid leaving the collar on your dog for more than 12 hours per day to prevent skin irritation.
- Regularly check your dog's neck for signs of irritation or sores. If irritation occurs, discontinue use until the skin heals.
- The static stimulation feature should be used responsibly and only after other training modes (beep, vibration) have been attempted. Always start at the lowest effective level.
- Keep the remote control out of reach of children.
- Ensure the collar is properly fitted; it should be snug but allow two fingers to fit comfortably under the strap.

## PACKAGE CONTENTS

The Bwrethay Dog Training Collar package includes the following items:

- 1 x Handheld Remote Transmitter
- 2 x Receiver Collars (Light Green and Black)
- 1 x Test Light Tool
- 1 x Wrist Strap

- 1 x User Manual (this document)
- 2 x USB Charging Cables
- 2 x Metal Prongs (pre-installed)
- 2 x Conductive Silicone Caps (for metal prongs)



Figure 1: Included components of the Bwrethay Dog Training Collar system.

## PRODUCT OVERVIEW

The Bwrethay Dog Training Collar system consists of a remote transmitter and two receiver collars, designed for effective and humane dog training. It offers three distinct training modes: beep, vibration, and static stimulation.



Figure 2: Bwrethay Dog Training Collar Remote and Receiver Collars.

### Remote Transmitter Features:

- **Display Screen:** Shows current mode, level, battery status, and active dog channel.
- **Mode/Level Adjustment Knob:** Used to select training mode (beep, vibration, static) and adjust intensity levels.
- **Beep Button:** Activates an audible tone.
- **Vibration Button:** Activates vibration.
- **Static Stimulation Button:** Activates static stimulation.
- **Security Lock Button:** Prevents accidental static stimulation.
- **Channel (CH) Button:** Selects which receiver collar to control (up to 3 dogs).
- **USB-C Charging Port:** For recharging the remote's internal battery.

## Receiver Collar Features:

- **Power Button:** Turns the receiver on/off and is used for pairing.
- **Indicator Light:** Shows power status, charging status, and pairing status.
- **Contact Points (Metal Prongs):** Deliver static stimulation. Can be covered with silicone caps for comfort.
- **USB-C Charging Port:** For recharging the receiver's internal battery, protected by a rubber cap.
- **Adjustable Nylon Strap:** Durable and reflective, suitable for various dog sizes.

## SETUP GUIDE

---

### 1. Charging the Devices

Before initial use, fully charge both the remote transmitter and the receiver collars. A full charge typically takes approximately 2 hours.

- Connect the USB charging cable to the charging port on the remote and the receiver collar.
- Plug the other end of the USB cable into a power adapter, computer, laptop, or power bank.
- The indicator light on the receiver will show charging status. The remote's display will indicate battery level.
- Once fully charged, disconnect the cables. Ensure the rubber cap on the receiver collar's charging port is securely closed to maintain waterproofing.

# Quick charge & Ultra Last Long

## 2 Hours Fast Charge



Remote standby time  
**Up to 90 days**



Receiver standby time  
**Up to 30 days**



Computer



Laptop



Power Adapter



Power Bank

Figure 3: Charging the remote and receiver collars.

## 2. Attaching the Collar and Fitting

Proper fit is essential for the collar's effectiveness and your dog's comfort.

- Thread the nylon strap through the receiver unit.
- Place the collar around your dog's neck, ensuring the contact points are positioned underneath, touching the skin.
- Adjust the strap so it is snug but not too tight. You should be able to fit two fingers comfortably between the collar and your dog's neck.
- For dogs with thick coats, you may need to trim some fur around the contact points to ensure proper skin contact.
- The collar is adjustable for neck sizes from 7.5 to 24 inches, suitable for dogs weighing 5-120 lbs.

# Adjustable Collar for Dogs 5-120LBs



Figure 4: Proper collar fitting and size guide.

### 3. Pairing the Remote and Receiver Collars

The remote can control up to three receiver collars. Each collar must be paired to a specific channel (1, 2, or 3).

1. **Turn on the Remote:** The remote is always on but goes to sleep. Press any button to wake it up.
2. **Select a Channel:** Press the "CH" button on the remote to select the desired channel (1, 2, or 3) for the collar you are pairing.
3. **Turn on the Receiver Collar:** Press the power button on the back of the receiver collar. The light will flash green, and it will beep once.
4. **Enter Pairing Mode:** Immediately after turning on the receiver, press and hold its power button again until you hear a long beep and the indicator light starts flashing rapidly.
5. **Complete Pairing:** While the receiver's light is flashing, press any training mode button (Beep, Vibration, or Static) on the remote. The receiver will beep, indicating successful pairing.
6. Repeat these steps for any additional receiver collars, assigning each to a different channel.

## OPERATING INSTRUCTIONS

### 1. Understanding Training Modes

The Bwrethay Dog Training Collar offers three modes to assist in training:

- **Beep:** An audible tone used as a warning or positive reinforcement. This mode has a fixed intensity.
- **Vibration:** A tactile stimulation with 15 adjustable levels (1-15). Useful for gaining attention or mild correction.
- **Static Stimulation:** An electronic pulse with 99 adjustable levels (1-99). This mode should be used as a last resort and at the lowest effective level.



Figure 5: Overview of the three effective training modes.

### 2. Using the Remote Transmitter

The remote control is designed for ease of use with clear button functions.

1. **Select Dog Channel:** Use the "CH" button to switch between controlling Dog 1, Dog 2, or Dog 3. The selected dog icon will be highlighted on the display.

## 2. Select Training Mode and Level:

- Press the top button (Mode/Level Adjustment Knob) once to select Static Stimulation. Rotate the knob to adjust the level from 1 to 99.
- Press the top button a second time to select Vibration. Rotate the knob to adjust the level from 1 to 15.
- Press the top button a third time to select Beep. This mode has a fixed intensity.

3. **Activate Training Mode:** Once the desired mode and level are set, press the corresponding button on the remote (Beep, Vibration, or Static Stimulation) to activate it.

4. **Security Lock:** The remote features a safety keypad lock to prevent accidental static stimulation. When the padlock icon with a lightning bolt is displayed, static stimulation is locked. Press the lock button to unlock it. The lock remains unlocked until manually re-engaged.



Figure 6: Easy operation design of the remote control.

## 3. Remote Range

The Bwrethay Dog Training Collar offers an extended remote range of up to 4500 feet (approximately 1370 meters) in open areas. This allows for effective training in various outdoor environments.

# UP TO 4500FT REMOTE RANGE

More stable and powerful signal, easy to use



Figure 7: Remote control range demonstration.

## MAINTENANCE

### 1. Cleaning

Regular cleaning helps maintain the collar's performance and hygiene.

- Clean the receiver collar and remote with a damp cloth.
- Ensure the contact points on the receiver are clean and free of debris.
- Do not use harsh chemicals or abrasive cleaners.

### 2. Battery Care

To prolong battery life:

- Fully charge the devices before long periods of inactivity.
- Avoid extreme temperatures.

- The remote has a standby time of up to 90 days, and the receiver up to 30 days on a full charge.

### 3. Waterproofing

The receiver collar is IP67 waterproof and dustproof, allowing your dog to wear it during activities like bathing, splashing, and swimming. Ensure the charging port's rubber cap is securely closed when not charging to maintain its waterproof integrity.



Figure 8: Receiver collar's IP67 waterproof capability.

### 4. Replacing Metal Prongs and Using Silicone Caps

The collar comes with removable metal prongs. Silicone caps are provided to cover these prongs, which can enhance comfort for your dog and reduce direct contact with the metal, especially if static stimulation is not frequently used or for sensitive skin.

- Use the provided test light tool as a wrench to easily remove or attach the metal prongs.
- Place the conductive silicone caps over the metal prongs if desired. The beep and vibration functions will still operate normally with the caps installed.

# Discourage Negative Behavior With The E-Collar

Encourage compliance with commands and bonding with our dogs!

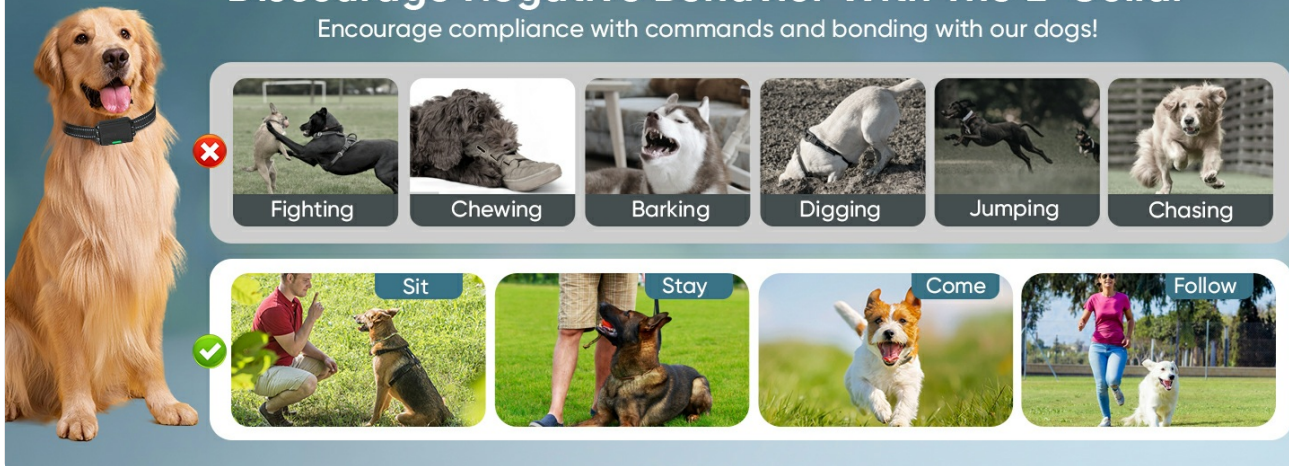


Figure 9: Removable metal prongs and silicone caps.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Collar not responding to remote.	<ul style="list-style-type: none"> <li>• Low battery on remote or receiver.</li> <li>• Collar not paired to the selected channel.</li> <li>• Out of range.</li> <li>• Static stimulation locked on remote.</li> </ul>	<ul style="list-style-type: none"> <li>• Charge both devices fully.</li> <li>• Re-pair the collar to the desired channel (refer to "Pairing" section).</li> <li>• Move closer to the dog.</li> <li>• Unlock the static stimulation feature on the remote.</li> </ul>
Static stimulation not working.	<ul style="list-style-type: none"> <li>• Static stimulation level too low.</li> <li>• Poor contact between prongs and dog's skin.</li> <li>• Static stimulation locked on remote.</li> </ul>	<ul style="list-style-type: none"> <li>• Increase the static stimulation level gradually.</li> <li>• Ensure collar is snug and prongs make good contact. Trim fur if necessary.</li> <li>• Unlock the static stimulation feature on the remote.</li> <li>• Use the test light tool to verify static function.</li> </ul>
Collar indicator light not flashing.	<ul style="list-style-type: none"> <li>• Collar is off.</li> <li>• Low battery.</li> </ul>	<ul style="list-style-type: none"> <li>• Press the power button to turn on.</li> <li>• Charge the collar.</li> </ul>
Remote display is blank.	<ul style="list-style-type: none"> <li>• Remote is in sleep mode.</li> <li>• Low battery.</li> </ul>	<ul style="list-style-type: none"> <li>• Press any button to wake up the remote.</li> <li>• Charge the remote.</li> </ul>

## Professional design, higher training efficiency



Next-gen intelligent chip  
Precise control of safety current



Specialized motors  
Double Vibration Intensity



New generation of  
high-capacity battery

Figure 10: Using the multi-functional test tool.

## SPECIFICATIONS

- **Brand:** Bwrethay
- **Model Name:** 1
- **Item Weight:** 12 ounces (total package)
- **Material:** Plastic (receiver unit), Nylon (collar strap)
- **Color:** Light Green (collar)
- **Remote Range:** Up to 4500 feet
- **Training Modes:** Beep, Vibration (1-15 levels), Static Stimulation (1-99 levels)
- **Waterproof Rating:** IP67 (Receiver Collar)
- **Battery Type:** Rechargeable Lithium-ion (internal for both remote and receiver)
- **Charging Time:** Approximately 2 hours
- **Remote Standby Time:** Up to 90 days
- **Receiver Standby Time:** Up to 30 days
- **Adjustable Collar Size:** 7.5 - 24 inches
- **Recommended Dog Weight:** 5 - 120 lbs

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Bwrethay website. Keep your purchase receipt as proof of purchase.