

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Newbealer](#) /

> [Newbealer 2-in-1 Pro Steam Station Iron \(Model NB318A\) User Manual](#)

Newbealer NB318A

Newbealer 2-in-1 Pro Steam Station Iron (Model NB318A) User Manual

Model: NB318A

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Newbealer 2-in-1 Pro Steam Station Iron. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the electrical outlet when filling with water, emptying, or when not in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
- Close supervision is necessary for any appliance used by or near children.
- Use the appliance only for its intended household use.
- Do not direct steam at people, animals, or electrical appliances.
- The iron must be used and rested on a stable surface.
- The appliance has an auto-shutoff feature after 10 minutes of inactivity for safety.
- Ensure the safety lock is engaged when moving or storing the appliance.

2. PRODUCT OVERVIEW

The Newbealer 2-in-1 Pro Steam Station Iron is a versatile appliance designed for efficient garment care, offering both powerful steam and dry heat ironing capabilities. It features a detachable water tank, multiple steam and dry heat modes, and innovative storage options.

2.1 Key Features

- **1550W Power System:** Ensures rapid heat-up in approximately 30 seconds.
- **Advanced PSA Steam Technology:** Offers 3 steam settings with up to 40g/min steam output.
- **3 Dry Heat Modes:** Adjustable temperatures from 212°F to 338°F for various fabrics.
- **1.2L Detachable Water Tank:** Provides up to 40 minutes of continuous steaming.
- **2-in-1 Functionality:** Supports both horizontal ironing and vertical steaming with a 360° anti-drip design.
- **Diamond Ceramic Soleplate:** Ensures smooth gliding and even heat distribution.

- **Smart LED Screen:** For easy mode selection and temperature display.
- **Innovative Storage:** Flexible hook and wall-mount options for space-saving convenience.
- **Safety Features:** 10-minute auto standby, safety lock, anti-scald base, and independent switches.
- **Self-Cleaning Function:** One-step self-cleaning for enhanced durability and performance.

2.2 Components

Familiarize yourself with the main components of your Newbealer Steam Station Iron:



Image 2.2.1: Overview of the Newbealer 2-in-1 Pro Steam Station Iron components. This image highlights the main unit, the detachable handheld steamer, the 1.2L water tank, the smart LED screen for settings, the steam and dry switch button, the power button, and the impurity filter.

- **Main Unit:** Houses the water tank and provides the base for the handheld steamer.
- **Handheld Steamer/Iron:** The primary tool for steaming and ironing, featuring the Diamond Ceramic Soleplate and control buttons.
- **Detachable Water Tank:** 1.2L capacity for water.

- **Smart LED Screen:** Displays current settings and fabric modes.
- **Steam & Dry Switch Button:** Toggles between steam and dry ironing functions.
- **Power Button:** Turns the appliance on and off.
- **Impurity Filter:** Located in the water tank to help maintain water quality.
- **Silicone Cord:** Connects the handheld unit to the main unit.
- **Power Cord:** Connects the main unit to the electrical outlet.

3. SETUP

3.1 Unpacking and Initial Inspection

Carefully remove all components from the packaging. Inspect the appliance for any signs of damage. Retain packaging for future storage or transport.

3.2 Filling the Water Tank

1. Ensure the appliance is unplugged from the power outlet.
2. Remove the detachable water tank from the main unit.
3. Open the water tank cap.
4. Fill the tank with distilled or demineralized water up to the MAX line (1.2L). Do not overfill.
5. Close the water tank cap securely and reinsert the tank into the main unit until it clicks into place.



Image 3.2.1: Illustration of filling the detachable water tank. Use distilled water for optimal performance and to prevent mineral buildup.

3.3 Mounting Options

The Newbealer Steam Station Iron offers flexible storage and usage options:

- **Wall-Mount:** Use the provided wall-mount kit to secure the main unit to a suitable wall surface. Ensure it is mounted securely and within reach of a power outlet.
- **Flexible Hook:** The integrated hook allows the unit to be hung on a rod, door, or closet rail for convenient vertical steaming.
- **Tabletop Use:** The main unit can also be placed on a stable, heat-resistant surface for horizontal ironing.



Image 3.3.1: Various innovative storage and usage scenarios for the steam iron, including hanging on a rod and wall-mounting.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Heating Up

1. Ensure the water tank is filled and securely in place.
2. Plug the power cord into a suitable electrical outlet.
3. Press the Power Button on the main unit. The LED screen will illuminate.
4. The appliance will begin to heat up. This typically takes about 30 seconds. The indicator light will change or stop flashing when ready.

ULTRA-POWERFUL STEAM

1550W of power and 40g/min continuous steam output for efficient steaming sessions

1550
WATTS

30^s
READY

3
STEAM &
DRY LEVELS

40
STEAM
g/min



Image 4.1.1: Visual representation of the steam iron's rapid heating and powerful steam generation capabilities.

4.2 Selecting Steam and Dry Heat Modes

The appliance offers three steam levels and three dry heat modes for various fabric types. Use the Smart LED Screen and Steam & Dry Switch Button to select your desired mode.

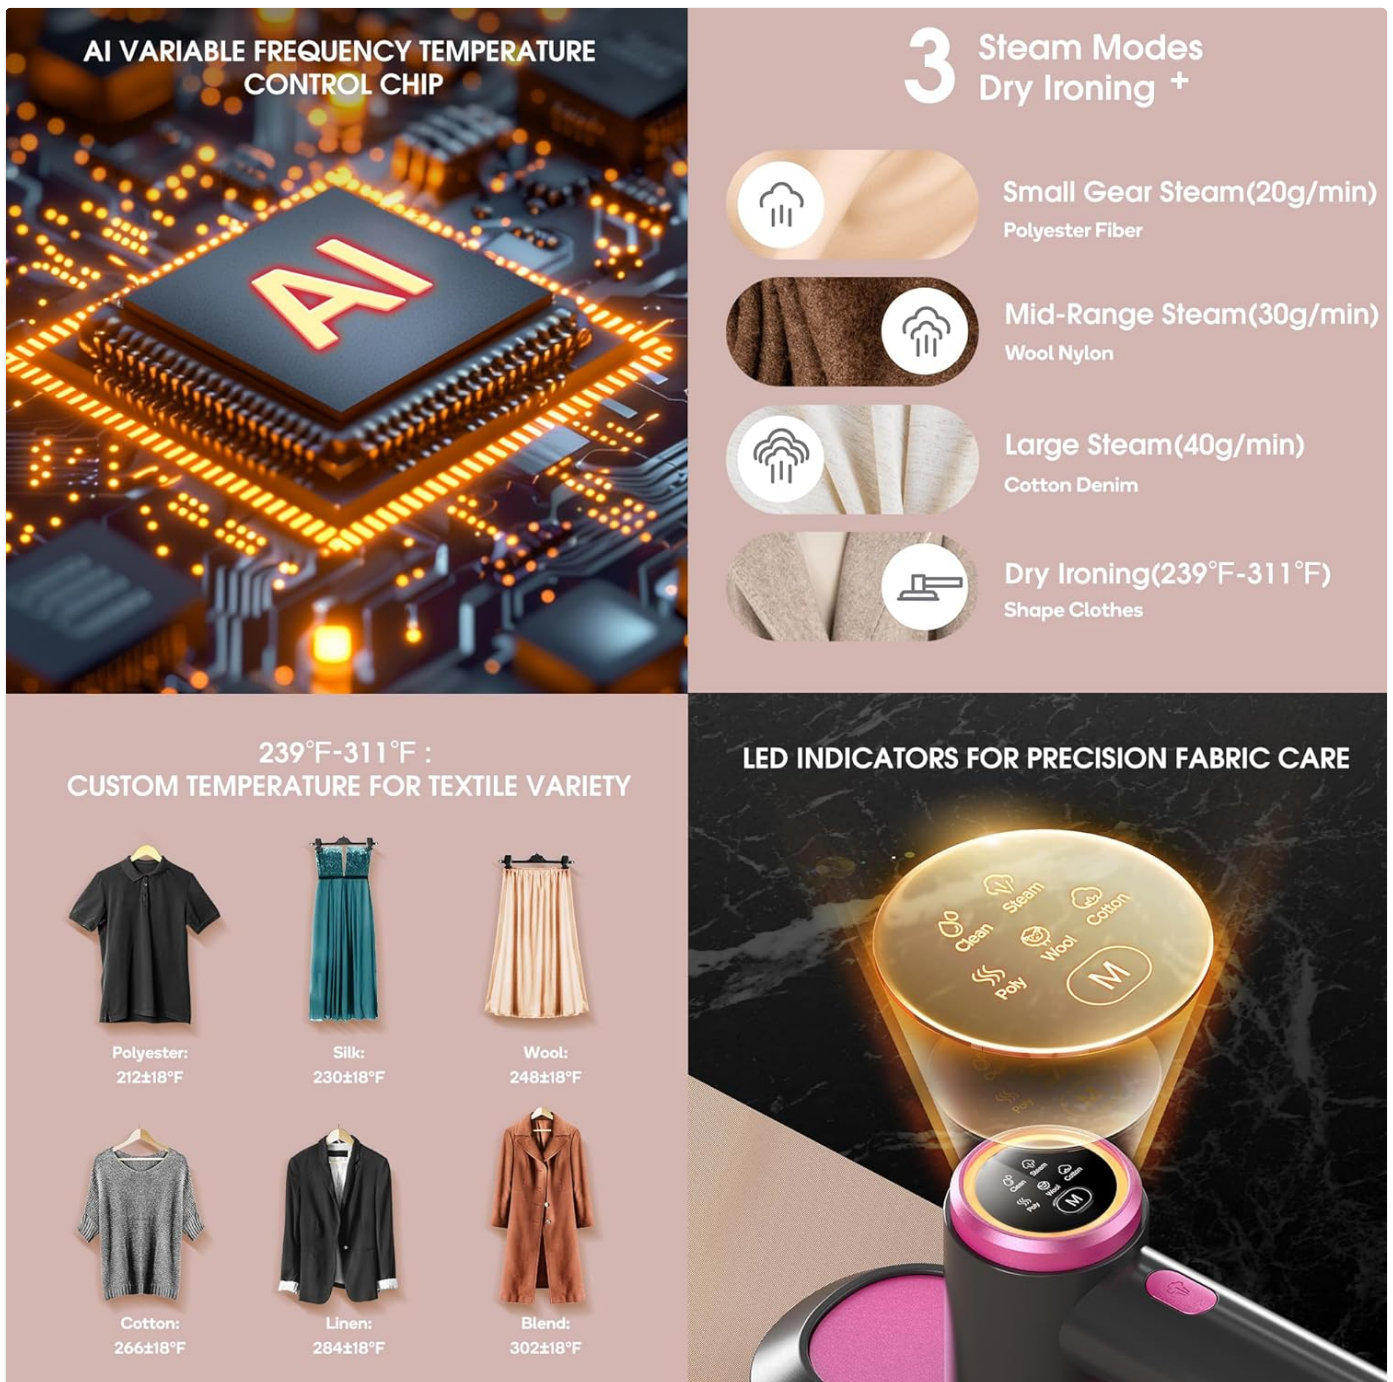


Image 4.2.1: Detailed view of the AI variable frequency temperature control chip and the various steam and dry ironing modes with recommended temperatures for different fabrics.

- **Steam Modes:**

- **Small Steam (20g/min):** Ideal for delicate fabrics like Polyester.
- **Mid-Range Steam (30g/min):** Suitable for Wool and Nylon.
- **Large Steam (40g/min):** Best for heavier fabrics like Cotton and Denim.

- **Dry Ironing:**

- Adjustable temperatures from 212°F to 338°F for shaping clothes.
- Specific temperature recommendations: Polyester (212°F), Silk (230°F), Wool (248°F), Cotton (266°F), Linen (284°F), Blends (302°F).
- Press the 'M' button on the handheld unit to cycle through the fabric modes.
- Press the Steam & Dry Switch Button to activate steam or use as a dry iron.

4.3 Ironing and Steaming Techniques

The 2-in-1 design allows for both vertical steaming and horizontal ironing.

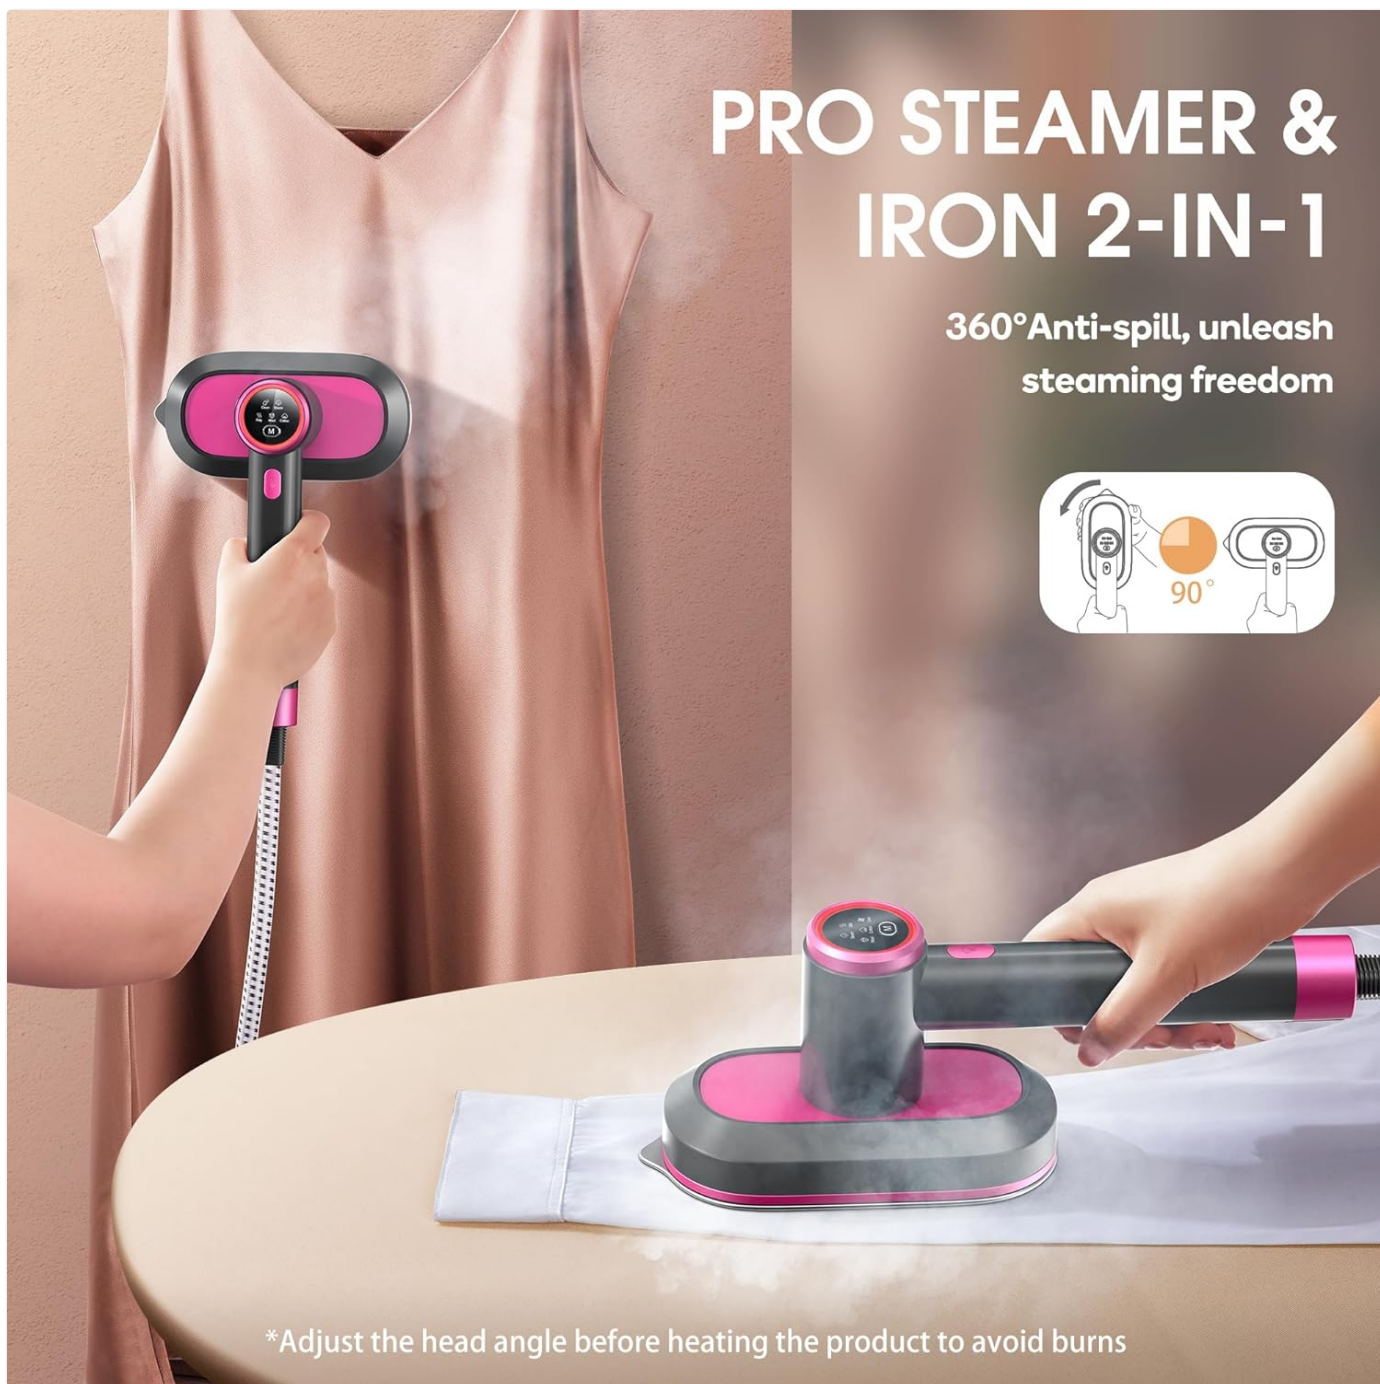


Image 4.3.1: The steam iron in use for both vertical steaming of hanging garments and horizontal ironing on a flat surface. Note the 90° rotatable head for convenience.

- **Vertical Steaming:** Hang the garment on a hanger. Hold the handheld steamer a few inches away from the fabric and move it up and down, allowing the steam to penetrate and relax the fibers.
- **Horizontal Ironing:** Place the garment on a clean, heat-resistant ironing board. Use the handheld unit like a traditional iron, gliding the Diamond Ceramic Soleplate over the fabric. The 90° rotational flexibility allows for comfortable handling.
- The 360° anti-drip design prevents water leakage regardless of orientation.

5. MAINTENANCE

5.1 Self-Cleaning Function

The appliance features a one-step self-cleaning function to minimize mineral residue and prolong its lifespan.



Image 5.1.1: Visual guide to the self-cleaning process, showing water being expelled from the soleplate, and the location of the advanced tank filter.

1. Ensure the water tank is filled with clean water.
2. Place the handheld unit over a sink or basin.
3. Hold down the 'M' button on the handheld unit to activate the Self-Cleaning function.
4. The appliance will cycle through a cleaning process, expelling steam and water to clear internal pathways.
5. Once complete, unplug the appliance and allow it to cool before storing.

5.2 Water Tank and Filter Care

- Always empty the water tank after each use to prevent mineral buildup.
- Rinse the water tank periodically with clean water.
- The advanced tank filter helps to filter impurities. Clean the filter as needed by rinsing it under running water.

5.3 Exterior Cleaning

- Ensure the appliance is unplugged and completely cool before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the Diamond Ceramic Soleplate with a damp cloth if necessary. Avoid scratching the surface.

6. TROUBLESHOOTING

If you encounter issues with your Newbealer Steam Station Iron, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam output	Water tank empty; appliance not heated; steam button not pressed; mineral buildup.	Refill water tank; allow appliance to heat up fully; press steam button; perform self-cleaning.
Water leaking from soleplate	Appliance not hot enough; water tank overfilled; mineral buildup.	Allow appliance to heat up completely before steaming; do not overfill tank; perform self-cleaning.
Appliance not turning on	Not plugged in; power outlet malfunction; auto-shutoff activated.	Ensure power cord is securely plugged in; test outlet with another device; press power button to restart.
Steam is weak or inconsistent	Low water level; mineral buildup; incorrect steam mode selected.	Refill water tank; perform self-cleaning; select a higher steam mode.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Newbealer
Model Number	NB318A
Color	Ashpink
Product Dimensions	13.4"L x 7.4"W x 7.3"H
Item Weight	5 Pounds
Wattage	1550 watts
Voltage	120 Volts
Heat Time	30 Seconds
Product Benefits	Fabric Refreshening, Wrinkle Removal
Water Tank Capacity	1200 Milliliters (1.2L)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Newbealer products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging for specific terms and conditions, or visit the official Newbealer website for more details.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Newbealer customer support. Contact details can typically be found on the product packaging, the official Newbealer website, or through your retailer. You may also visit the [Newbealer Store on Amazon](#) for additional product information and support resources.

