

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bubbacare](#) /

› [Bubbacare Heated Socks User Manual - APP Control Electric Rechargeable Foot Warmers Model A1](#)

Bubbacare A1

Bubbacare Heated Socks User Manual

MODEL A1 - APP CONTROL ELECTRIC RECHARGEABLE FOOT WARMERS

Introduction

Thank you for choosing Bubbacare Heated Socks. These socks are designed to provide warmth and comfort in cold environments, featuring an invisible heating element, wearable battery, and intelligent APP control. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your product.



Image: Bubbacare Heated Socks demonstrating heating zones and smartphone application control.

Package Contents

Please verify that all items are present in your package:

- 1 Pair of Bubbacare Heated Socks
- 2 Rechargeable Batteries (5000 mAh each)
- 1 USB Charging Cable
- 1 Laundry Bag
- 1 User Manual



Image: Overview of items included in the product package, such as socks, batteries, charging cable, laundry bag, and user manual.

Setup Instructions

1. Charging the Batteries

1. Connect the provided USB charging cable to the batteries.
2. Plug the USB cable into a power adapter (recommended: > 5V/2A).
3. A single battery typically takes 5-6 hours to fully charge with a 5V/2A adapter. Charging time may be longer with adapters below 2A.
4. Ensure batteries are fully charged before first use for optimal performance.

2. Inserting Batteries into Socks

1. Locate the battery pocket on the upper part of each sock.
2. Insert a fully charged battery into each pocket.
3. Connect the sock's power cable to the battery.

4. There is no distinction between right or left batteries; they are interchangeable.

3. APP Installation and Connection

The Bubbacare Heated Socks can be controlled via a smartphone application for precise temperature adjustments.

1. Scan the QR code provided in the physical manual or search for "WARM UPING" in your device's APP store to download the application.
2. Ensure Bluetooth and location services are enabled on your smartphone.
3. Open the WARM UPING APP. The app will guide you through the connection process.
4. To connect, ensure only the pair of socks you intend to connect is within a 10-meter range. If multiple pairs are present, connect them one by one.
5. The APP allows independent control of each sock.



Image: A person using a smartphone to connect and control the heated socks via the dedicated application.

Operating Instructions

1. Powering On/Off

- **Manual Control:** Press and hold the button on the sock for a few seconds to power on or off. The indicator light will show the current heating gear.
- **APP Control:** Once connected, you can power the socks on or off directly through the WARM UPING application.

2. Temperature Control

- **APP Control:** The application allows for precise temperature adjustment from 30°C to 70°C (86°F to 158°F) by sliding the control. You can set different temperatures for each sock.
- **Manual Control:** Short press the button on the sock to cycle through available heating levels. Refer to the table below for reference temperatures.

3. Timed Shutdown Function


To prevent prolonged heating and potential discomfort, the socks feature a timed shutdown function:

- Through the APP, you can set the heating time to automatically turn off after 30, 45, 60, 90, or 120 minutes.

4. Heating Levels and Duration

The battery life varies depending on the selected heating level. Under comfortable temperature settings, the socks can operate for 4 to 6 hours. Overall duration ranges from 3.5 to 11 hours.

6 LEVELS TEMPERATURE SETTING

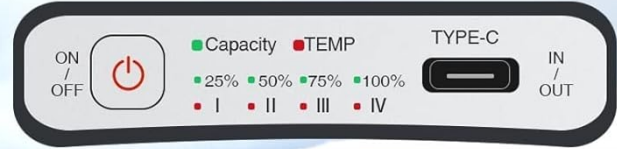

Light Status	Current Mode	Reference Temperature
● Out ● On ● Flash ● I ● II ● III	6	140°F
● I ● II ● III	5	134°F
● I ● II ● III	4	122°F
● I ● II ● III	3	113°F
● I ● II ● III	2	104°F
● I ● II ● III	1	95°F
● I ● II ● III	Flash-Heating	167°F



Lasting Time: 3-10 Hours

Image: A detailed table illustrating the different heating levels, corresponding indicator light statuses, and approximate reference temperatures in Fahrenheit.

Reference Temperature Settings

Light Status	Current Mode	Reference Temperature
Red (Flashing)	Flash-Heating	167°F (75°C)
Red (Solid)	6	140°F (60°C)
Orange (Solid)	5	134°F (57°C)
Yellow (Solid)	4	122°F (50°C)
Green (Solid)	3	113°F (45°C)
Blue (Solid)	2	104°F (40°C)
White (Solid)	1	95°F (35°C)

Maintenance

Washing Instructions

Proper care ensures the longevity and performance of your heated socks. The socks support both hand wash and machine wash.

1. **Remove Batteries:** Always remove the batteries from the sock pockets before washing.
2. **Prepare for Washing:**
 - For machine washing, place the socks inside the provided laundry bag.
 - For hand washing, gently wash the socks.
3. **Washing Temperature:** Do not exceed a water temperature of 122°F (50°C).
4. **Drying:** Air dry the socks completely before reinserting batteries or using them. Do not wring or twist.

Important Warnings:

- Do not dry-clean.
- Do not use bleach.
- Do not iron.

MACHINE & HAND WASHABLE



Hand wash



Machine wash



1

Remove batteries before washing.



2

Put socks into the laundry bag (Wash socks by hand).



3

Put them in the washing machine for cleaning.



Machine Wash



Hand Wash



No Dry-cleaning



No Bleach



Water Temp < 122°F



No Ironing

Image: Visual guide for cleaning the heated socks, including removing batteries, using a laundry bag for machine wash, and general care symbols.

Troubleshooting

This section addresses common issues you might encounter with your Bubbacare Heated Socks.

Issue 1: Failed to control temperature via APP

- **(A) Battery Charge:** Check if the batteries are fully charged.
- **(B) Battery Connection:** Ensure the socks are properly connected to the batteries. Verify if the socks can be switched on/off manually or if the red gear light can be activated.
- **(C) Component Isolation:** To determine if the issue is with the socks or batteries, try exchanging batteries between socks and reconnecting.
- **(D) Bluetooth & Location:** Confirm that Bluetooth and location services are enabled on your mobile device.
- **(E) Proximity:** Ensure only the pair of socks you intend to connect is within a 10-meter range. If multiple pairs are present, connect them one by one.
- **(F) APP Operation:** Check if the socks are powered on and if there are any incorrect operations within the

APP, or if the correct sock button is selected in the APP.

- **(G) Rebinding:** If connection attempts repeatedly fail, exit the APP, clear the APP and mobile phone cache, then attempt to bind again.

Issue 2: Strengthen gear (Flash-Heating) only operates for 1 minute then automatically closes

This is a safety feature designed to prevent low-temperature burns. The Flash-Heating mode is intended for rapid initial heating. After 1 minute, it automatically reduces to a lower, sustained heating level to maintain a comfortable temperature and conserve battery life.

Issue 3: How long does it take to fully charge the batteries?

With an adapter greater than 5V/2A, a single battery takes approximately 5-6 hours to fully charge. If the adapter is less than 2A, the charging time will be longer, or the current may be insufficient for charging.

Issue 4: How long will the batteries last on a full charge?

Battery duration depends on the selected heating gear. It typically ranges from 3.5 to 11 hours. Under comfortable temperature settings, you can expect 4 to 6 hours of use.

Specifications

Feature	Detail
Model Number	A1
Material	Cotton
Battery Capacity	5000 mAh (per battery)
Upper Temperature Rating	70°C (158°F)
Input Voltage (Charger)	Recommended > 5V/2A
Battery Life	3.5 to 11 hours (depending on heat setting)
Washing Compatibility	Hand wash, Machine wash (with laundry bag)
Color	Black

Size Chart

Please refer to the size chart below to select the appropriate sock size. If your foot size falls between two ranges, it is recommended to choose the larger size.



SIZE CHART

NOTE: If your foot size falls into both ranges, please choose the larger one.

SIZE	SOCKS LENGTH (IN)		SUGGEST SIZE	
	SOCKS LENGTH	LENGTH OF STOCKINGS	UK	EU
L	6.9 - 7.3	12.2 - 12.6	4 - 8	35 - 43
XXL	7.9 - 8.3	13.4 - 13.8	8 - 13	41 - 53



Image: A table providing sock length measurements in inches and corresponding suggested UK and EU shoe sizes for sizes Large and XXL.

Bubbacare Heated Socks Size Chart

Size	Socks Length (IN)	Length of Stockings (IN)	Suggested UK Size	Suggested EU Size
L	6.9 - 7.3	12.2 - 12.6	4 - 8	35 - 43
XXL	7.9 - 8.3	13.4 - 13.8	8 - 13	41 - 53

Warranty and Support

Bubbacare offers a 90-day free return and refund policy for these heated socks. If you encounter any quality issues or have questions regarding sizing, please contact customer support. We aim to respond and assist within 24 hours. For support, please refer to the contact information provided with your purchase or on the official Bubbacare website.

