

## BOBLOV A23

# BOBLOV Body Camera A23 User Manual

Model: A23

## 1. INTRODUCTION

---

This manual provides detailed instructions for the operation and maintenance of your BOBLOV A23 Body Camera. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize its features.



Image 1.1: BOBLOV A23 Body Camera and included accessories.

## 2. PACKAGE CONTENTS

Verify that all items are present in the package:



## Packaging List

- |                        |               |               |
|------------------------|---------------|---------------|
| ① Bike Mount           | ② USB-C Cable | ③ Short Clip  |
| ④ A23 Body Worn Camera | ⑤ Lanyard     |               |
| ⑥ User Manual          | ⑦ Adapter     | ⑧ 1/4in Mount |

Image 2.1: Visual representation of the package contents.

1. A23 Body Worn Camera
2. USB-C Cable
3. Short Clip (360° rotating clip)
4. Lanyard
5. Bike Mount
6. 1/4in Mount
7. User Manual
8. Adapter (USB-A to USB-C adapter, TF card reader)

### 3. DEVICE OVERVIEW AND CONTROLS

Familiarize yourself with the camera's physical features and buttons.



Image 3.1: Front, side, and back views of the camera with button labels.

- **Power Button (Bottom Left):** Long-press to power on/off. Short-press to turn the screen on/off.
- **Video Mode Button (Top Left):** Short-press to start/stop video recording. Long-press from power-off to start recording immediately. Red light flashes during recording.
- **Photo Mode Button (Middle Left):** Short-press to take a photo. Red light flashes momentarily. Long-press for IR mode.
- **Audio Mode Button (Top Right):** Short-press to start/stop audio recording. Amber light flashes during recording.
- **Playback Button (Middle Right):** Access recorded files.
- **Return Button (Bottom Right):** Navigate back in menus.
- **Navigation Buttons (Front):** Up, Down, and OK/Confirm buttons for menu navigation.

## 4. SETUP

### 4.1. Charging the Battery

The camera is equipped with a 2200mAh battery, providing up to 9 hours of continuous recording during the day. Use the provided USB-C cable for charging.

1. Connect the USB-C cable to the camera's USB-C port.
2. Connect the other end of the cable to a USB power adapter or computer.
3. The LED indicator will be blue during charging. A full charge typically takes approximately 4 hours.



# Don't have to recharge it until the end of each day.

  
Recording **9Hours**

  
Charging **4Hours**

  
USB-C Port

  
**30%**

  
**60%**

  
**100%**



Image 4.1: Charging the camera and battery life indicators.


## 4.2. Inserting and Formatting the Memory Card

The camera supports external memory via a TF (Micro SD) card. A 128GB card is included with this model.

1. Ensure the camera is powered off.
2. Locate the TF card slot on the camera.
3. Gently insert the TF card into the slot until it clicks into place.
4. Power on the camera.
5. Navigate to the camera's menu using the navigation buttons.
6. Select "Format SD card" and confirm to format the card. This prepares the card for optimal performance and clears any existing data.

# External Memory Desgin

## Comes with TF card for ready recording

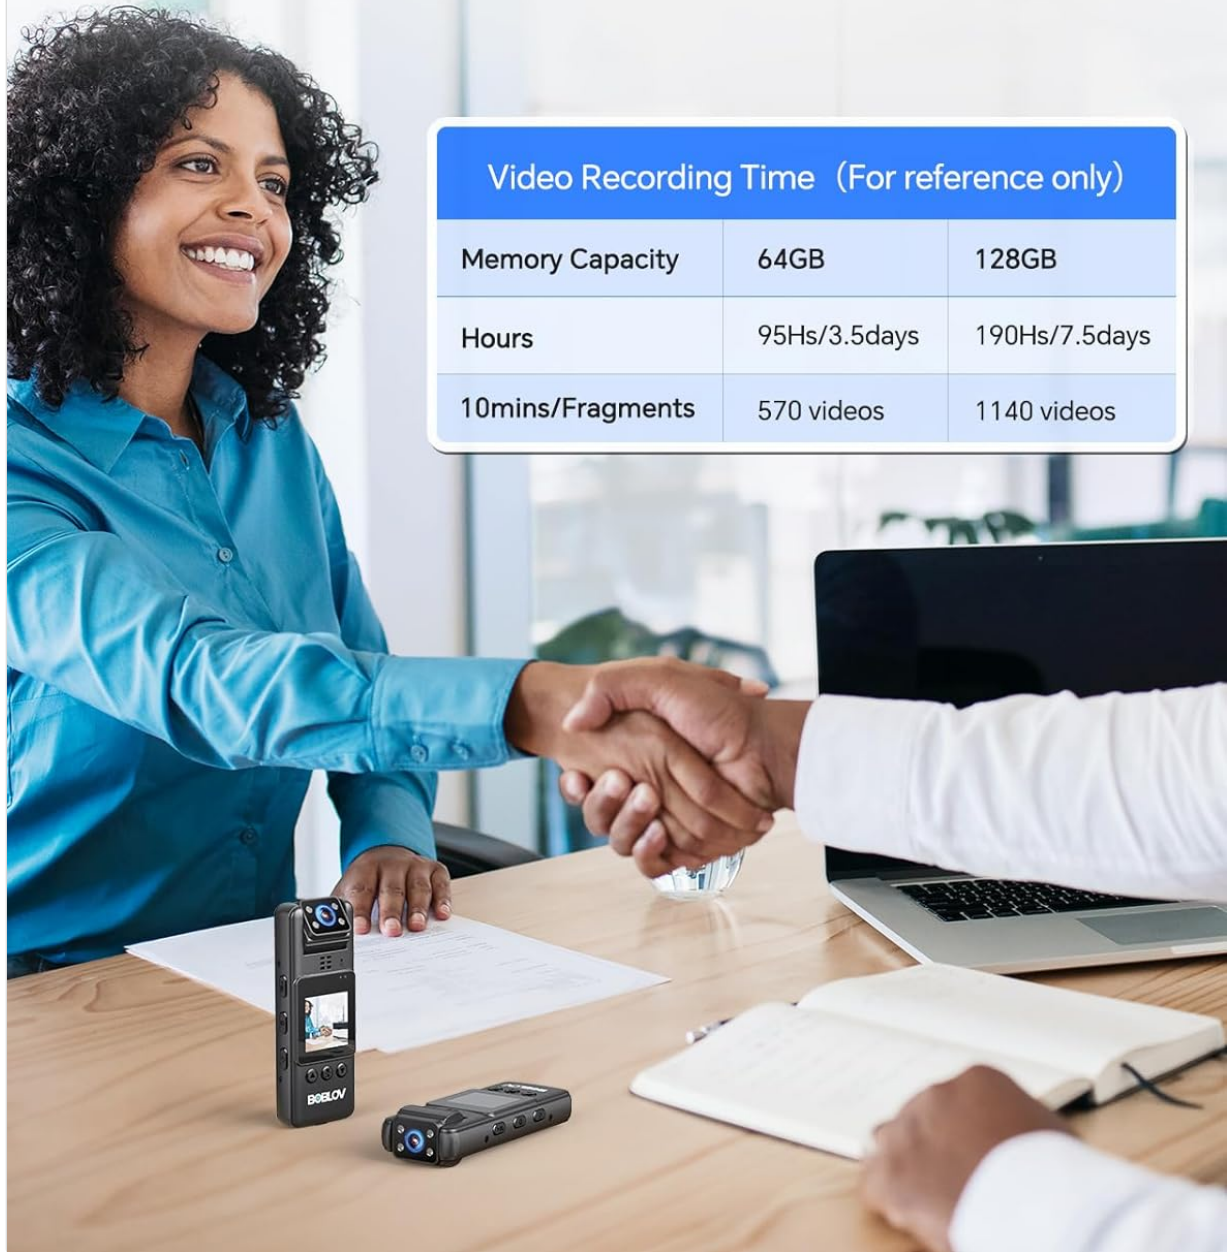

Video Recording Time (For reference only)		
Memory Capacity	64GB	128GB
Hours	95Hs/3.5days	190Hs/7.5days
10mins/Fragments	570 videos	1140 videos

Image 4.2: Inserting the TF card and reference for recording capacity.

**Note:** Formatting the SD card will erase all data on it. Back up important files before formatting.

### 4.3. Setting Date and Time

The date and time must be set manually to ensure accurate timestamps on your recordings. The internal clock operates on a 24-hour format.

1. Power on the camera.
2. Navigate to the camera's menu.
3. Select "Date/time set".
4. Adjust the year, month, day, hour (24-hour format), and minute using the navigation buttons.

5. Confirm your settings.

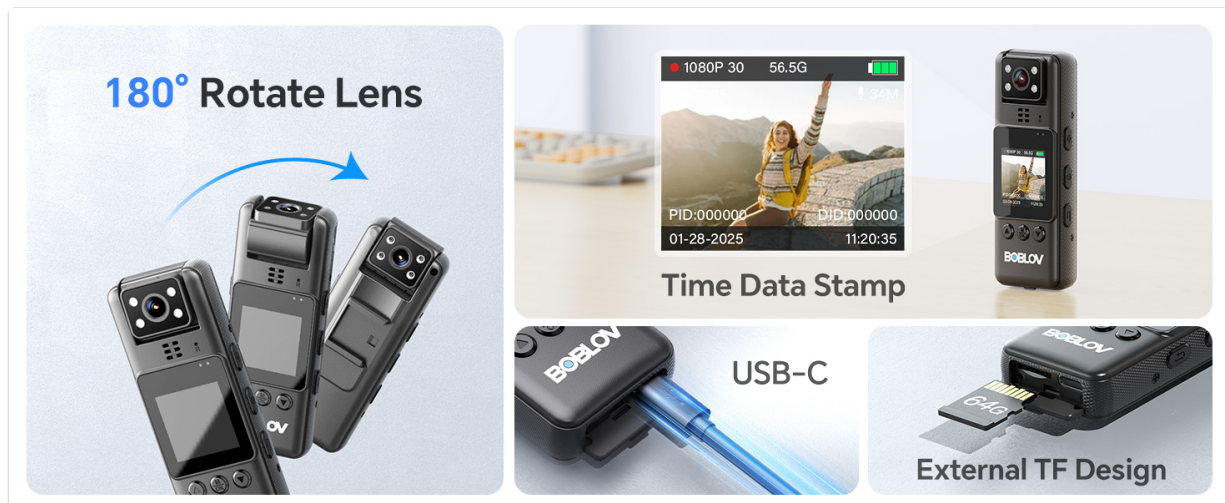


Image 4.3: The camera features a time data stamp for recordings.

#### 4.4. Attaching the Camera

The A23 offers multiple wearing options for versatile use:

- **360° Rotating Clip:** Attach the short clip to the back of the camera and secure it to clothing, pockets, or straps. The clip allows for 360-degree rotation.
- **Lanyard:** Attach the lanyard for neck wearing, providing hands-free operation.
- **Bike Mount:** Use the bike mount and 1/4in mount to secure the camera to bicycle handlebars.



## 3 in 1 Wearable Ways



Image 4.4: Various attachment methods for the A23 Body Camera.



## Several Ways for usage



Image 4.5: Practical examples of camera usage and attachment.

## 5. OPERATING THE CAMERA

### 5.1. Video Recording

1. Ensure the camera is powered on.
2. Press the **Video Mode Button** (top left) once to start recording. The red LED will flash.
3. Press the **Video Mode Button** again to stop recording. The red LED will stop flashing, and the camera will return to standby (green LED).
4. To quickly start recording from power-off, long-press the **Video Mode Button**.

### 5.2. Photo Capture

1. Ensure the camera is powered on.
2. Press the **Photo Mode Button** (middle left) once to take a single photo. The red LED will flash momentarily.

### 5.3. Audio Recording

1. Ensure the camera is powered on.
2. Press the **Audio Mode Button** (top right) once to start audio recording. The amber LED will flash.
3. Press the **Audio Mode Button** again to stop recording. The amber LED will stop flashing, and the camera will return to standby (green LED).

### 5.4. Night Vision

The A23 features 4 IR lights for night vision, enabling clear footage in low-light conditions for up to 5 hours of recording.

1. To activate night vision, long-press the **Photo Mode Button** (middle left).
2. Night vision can be set to manual or auto mode via the camera's menu under "IR filter".



Image 5.1: Night vision capability of the A23 Body Camera.

## 5.5. Menu Settings

Access the menu to customize various settings:

- **Resolution:** 1080P/30, 720P/30, 480P/30.
- **Photo Size:** 48M, 40M, 34M, 26M, 20M, 14M, 12M, 8M.
- **Photo Burst Mode:** Off, 3 pictures, 5P, 10P, 20P, 25P.
- **Post-record:** Off, 5 seconds, 30s, 1 min, 5 mins.
- **Compression Storage:** On/Off.
- **Loop Recording:** On/Off. Allows continuous recording by overwriting the oldest files when the memory card is full. Video length options: 5, 10 (default), 15, 20 minutes.
- **Date Stamp:** On/Off.
- **Motion Detection:** On/Off.
- **LCD Auto Off:** Off, 5min, 10mins.
- **Auto Power Off:** 10 or 15 mins (when no operation).
- **Key Tone:** On/Off (disables button beeps).
- **Record with Sound:** On/Off.
- **Button Volume:** Off, Low, Medium, High.
- **Dash Camera Mode:** On/Off.
- **Device ID / Police ID:** Customizable 7-digit/6-digit combinations for filenames.
- **Stealth Mode:** On/Off (shuts off LED lights).
- **IR Filter:** Manual or Auto.
- **Voice Broadcast:** On/Off.
- **Language:** English, S Chinese, T Chinese.
- **Format SD card:** Erase all data on the memory card.
- **Return to Default settings:** Reset all settings.
- **Date/time set:** Adjust date and time.
- **Version:** Display firmware version.

Default to **Loop Recording** Support different fragment for choose



Image 5.2: Loop recording options for continuous footage.

## 5.6. Playback and File Transfer

To review recordings directly on the device:

1. Press the **Playback Button** (middle right).
2. Use the front navigation buttons (Up/Down/OK) to browse and select files.

To transfer files to a computer:

1. Connect the camera to your computer using the provided USB-C cable.
2. The camera will appear as a removable storage device.
3. Drag and drop files to your computer.
4. Alternatively, use the provided TF card reader to directly access files from the memory card.

### Compatible with both mac and windows



Image 5.3: Compatibility with Mac and Windows for file management.

## 6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your BOBLOV A23 Body Camera.

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged (around 50%) if storing for extended periods.

- **Battery Care:** Avoid fully discharging the battery frequently. Recharge the camera regularly, even if not in active use, to maintain battery health.
- **Firmware Updates:** Check the official BOBLOV website periodically for any available firmware updates to improve performance or add features.

## 7. TROUBLESHOOTING

If you encounter issues with your BOBLOV A23 Body Camera, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Inaccurate Date/Time Stamp	The date and time must be set manually. Ensure you use the 24-hour format when setting the time in the camera's menu.
Battery Life Shorter Than Expected	Actual battery life can vary based on usage (e.g., continuous recording, night vision, screen on/off). Ensure the camera is fully charged (approx. 4 hours). The on-screen battery indicator may not always be precise.
Video Files Have Inconsistent Lengths	When using loop recording, video files are segmented. While a specific length (e.g., 20 minutes) is selected, actual file lengths may vary slightly due to internal processing. This is normal operation.
Shaky Video Footage	The A23 camera does not feature built-in image stabilization. For smoother footage, minimize camera movement during recording or use a stable mounting option.
Automatic Night Vision (IR) Turns On/Off Repeatedly	In auto mode, the IR sensor may react to subtle light changes or proximity. Try setting the IR filter to "Manual" in the menu for consistent night vision operation.
Power Button is Stuck or Unresponsive	This may indicate a hardware issue. If within the warranty period, contact customer support for assistance.
Cannot Access Files on Computer	Ensure the USB-C cable is securely connected. Try a different USB port or cable. If using a Mac, ensure the camera is recognized as an external drive. Alternatively, use the provided TF card reader.

## 8. SPECIFICATIONS

Feature	Detail
Brand	BOBLOV
Model Number	A23
Item Weight	1.8 ounces (approx. 51 grams)
Product Dimensions	0.75 x 3.9 x 3.9 inches (approx. 1.9 x 9.9 x 9.9 cm)
Battery	2200mAh (1 A battery included)
Color	Black








Feature	Detail
Special Features	Night Vision, 360° Rotating Clip
Photo Sensor Technology	CMOS
Video Capture Resolution	1080p (Full HD)
Maximum Focal Length	28 Millimeters
Maximum Aperture	f/2
Flash Memory Type	Micro SD (TF Card)
Video Capture Format	MOV
Supported Audio Format	AAC
Screen Size	1.28 Inches
Connectivity Technology	USB


## 9. WARRANTY AND SUPPORT

BOBLOV provides product coverage and technical support for its customers.

- **Product Coverage:** The BOBLOV A23 Body Camera comes with 24 months of product coverage.
- **Technical Support:** BOBLOV offers quick response within 24 hours and lifetime technical support.
- For further assistance or to claim warranty, please visit the official BOBLOV store or contact their customer service.

**Official BOBLOV Store:** [BOBLOV Store on Amazon](#)

<p>Mini camera Full HD 1080P Boblov IDV007 - 3000mAh - 12MP</p> 	<p><a href="#">Инструкция и технические характеристики мини-камеры Boblov IDV007 Full HD 1080P</a></p> <p>Подробное руководство пользователя для мини-камеры Boblov IDV007, охватывающее настройку, эксплуатацию, параметры и технические характеристики. Узнайте, как использовать функции видео, аудио и фото.</p>
<p><b>BOBLOV</b></p>  <p>Mini Body Camera User Manual Model: A23 Official Email Address: support@boblov.com Official Website: www.boblov.com</p>	<p><a href="#">BOBLOV A23 Mini Body Camera User Manual</a></p> <p>Comprehensive user manual for the BOBLOV A23 Mini Body Camera, covering setup, operation, features, specifications, troubleshooting, and customer service. Learn how to charge, power on/off, record video and audio, take photos, and use advanced features.</p>
<p><b>BOBLOV</b> Mini Body Camera - Manual utilizare www.boblov.com   support@boblov.com Model: A23</p> 	<p><a href="#">Manual de utilizare cameră mini body BOBLOV A23</a></p> <p>Manual de utilizare complet pentru camera mini body BOBLOV A23, acoperind configurarea, operarea, caracteristicile, specificațiile și depanarea.</p>
<p><b>BOBLOV</b></p> <p>MINI BODY CAMERA MODEL: A22/A22P</p>  <p>User Manual</p>	<p><a href="#">BOBLOV A22/A22P Mini Body Camera User Manual</a></p> <p>Comprehensive user manual for the BOBLOV A22/A22P Mini Body Camera. Learn about its features, operation, charging, recording modes, system settings, troubleshooting, and technical specifications.</p>
<p>Boblov X9 Body Worn Camera User Setup Manual</p> 	<p><a href="#">Boblov X9 Body Worn Camera User Setup Manual</a></p> <p>User setup manual for the Boblov X9 Body Worn Camera, covering product specifications, quick operations, key features, menu options, and file management on Windows.</p>

	<p><a href="#">BOBLOV W4 Mini Body Camera User Manual - Setup, Features, Troubleshooting</a></p> <p>Get the most out of your BOBLOV W4 Mini Body Camera with this comprehensive user manual. Learn about setup, recording features, specifications, indicator lights, troubleshooting common issues, and packaging contents.</p>
--	--

Documents - BOBLOV – A23



[Manual de utilizare cameră mini body BOBLOV A23](#)

Manual de utilizare complet pentru camera mini body BOBLOV A23, acoperind configurarea, operarea, caracteristicile, specificațiile și depanarea.

lang:it score:36 filesize: 2.2 M page\_count: 40 document date: 2025-10-03

[BOBLOV A23 Mini Body Camera User Manual](#)

Comprehensive user manual for the BOBLOV A23 Mini Body Camera, covering setup, operation, features, specifications, troubleshooting, and customer service. Learn how to charge, power on/off, record video and audio, take photos, and use advanced features.

lang:it score:23 filesize: 4.2 M page\_count: 28 document date: 2023-06-13

