Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

RIMOO JSQ-JANEY

RIMOO 4L Ultrasonic Cool Mist Humidifier Instruction Manual

Model: JSQ-JANEY

1. Introduction

Thank you for purchasing the RIMOO 4L Ultrasonic Cool Mist Humidifier. This device is designed to improve air quality and comfort by adding moisture to the air. Featuring a durable stainless steel tank and a user-friendly design, it provides efficient and quiet operation. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. Important Safety Instructions

- Always place the humidifier on a firm, flat, waterproof surface at least 12 inches (30 cm) away from walls and appliances.
- Do not place the humidifier directly on carpet, towels, or other absorbent surfaces.
- Keep the humidifier out of reach of children and pets.
- Do not immerse the control box (top part with electronic components) in water. Only the stainless steel tank is washable.
- Unplug the humidifier before filling, cleaning, or moving it.
- Do not add essential oils or other additives directly into the water tank, as this may damage the unit.
- Use clean, cool tap water. Distilled or demineralized water is recommended to prevent mineral buildup.
- Do not block the mist outlet.
- If the humidifier emits unusual sounds, smells, or smoke, unplug it immediately and contact customer support.

3. Package Contents

Verify that all components are present in the package:

- RIMOO 4L Ultrasonic Cool Mist Humidifier (Control Box, Stainless Steel Tank, Oscillator, Removable Nozzle)
- User Manual

4. Product Diagram

Familiarize yourself with the parts of your humidifier:

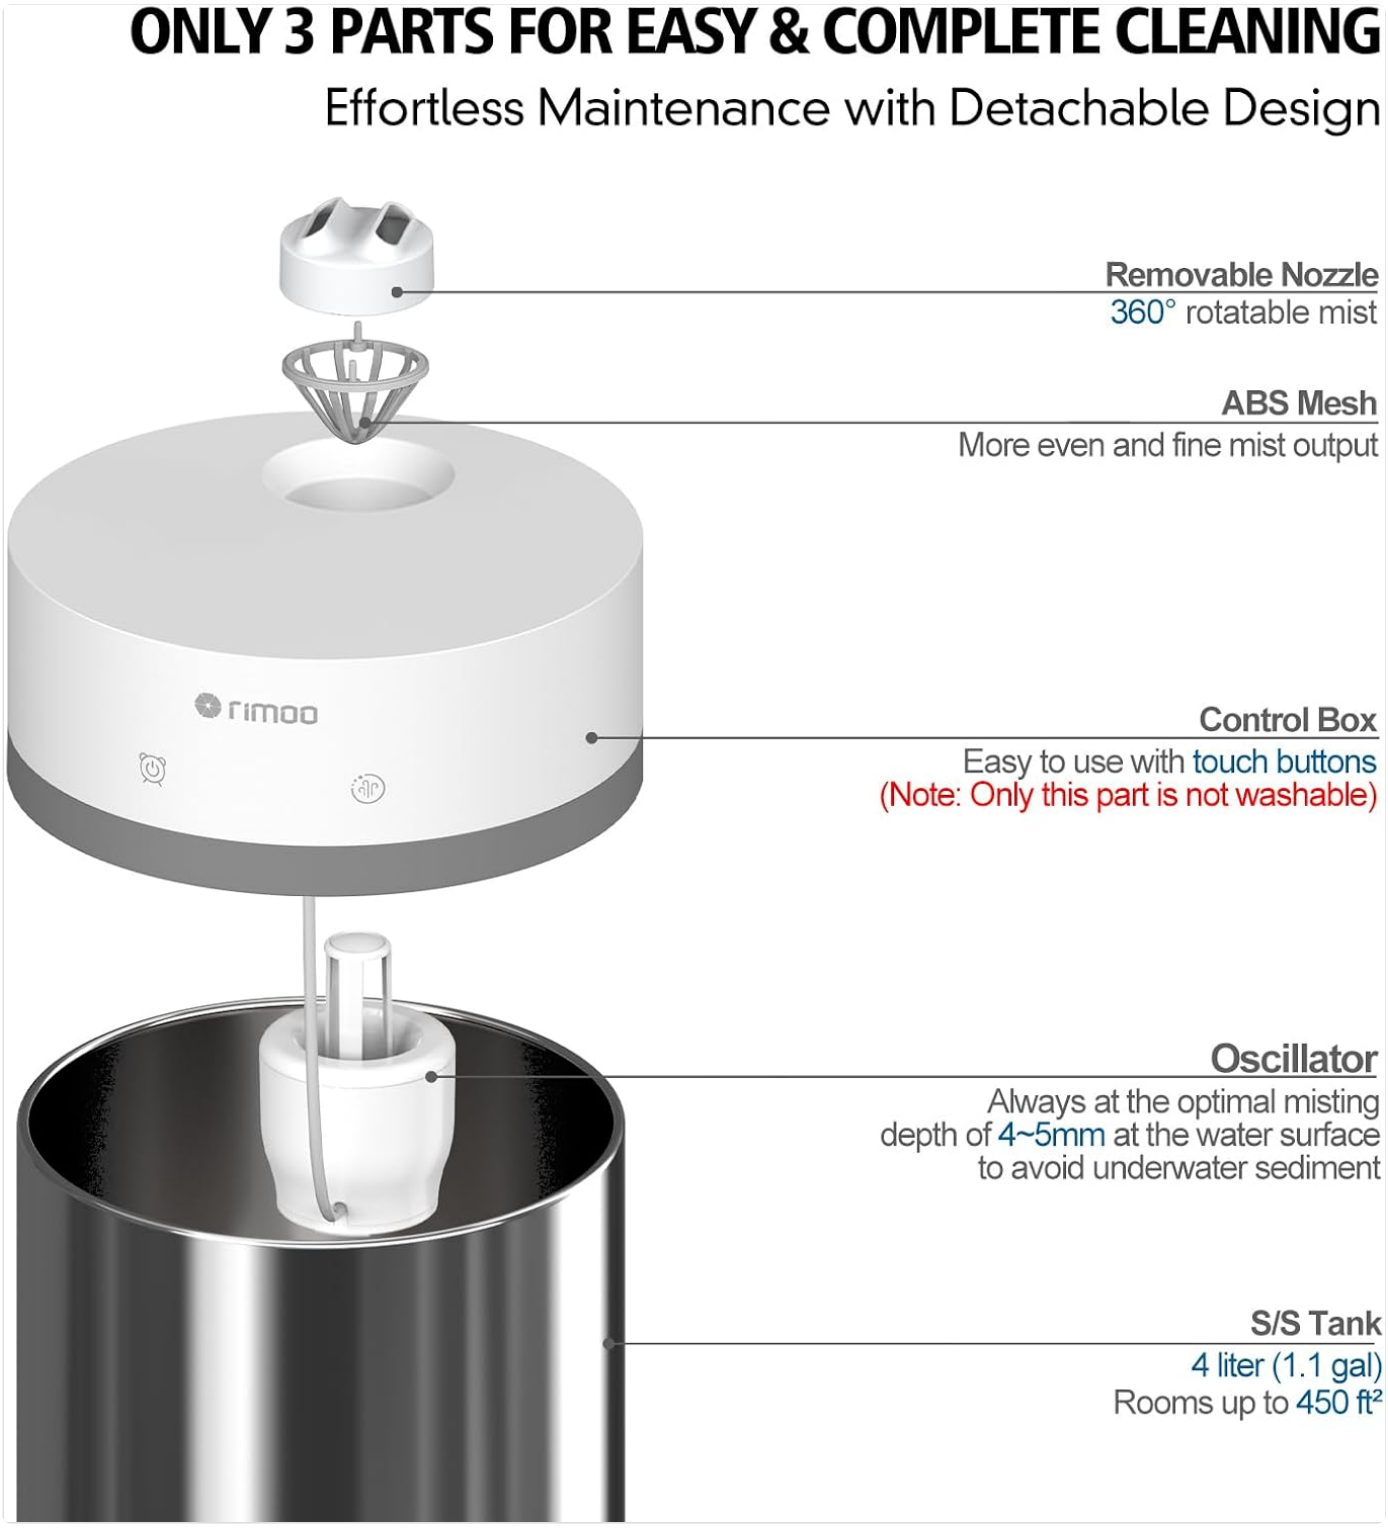


Image Description: An exploded view diagram of the RIMOO humidifier showing its main components: the removable nozzle, ABS mesh, control box, oscillator, and the stainless steel tank. Labels indicate the function of each part, highlighting that only 3 parts need cleaning and the control box is not washable.

- **Removable Nozzle:** Directs mist output, 360° adjustable.
- **ABS Mesh:** Ensures fine and even mist output.
- **Control Box:** Contains electronic components and touch buttons. *Note: This part is not washable.*
- **Oscillator:** Generates ultrasonic vibrations to create mist. Designed to float at optimal depth.
- **Stainless Steel Tank:** 4-liter capacity water reservoir, made of 304 food-grade stainless steel.

5. Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the humidifier on a flat, stable, and waterproof surface. Ensure it is at least 12 inches (30 cm) away from walls and furniture.
3. **Assemble:** Ensure the oscillator is correctly seated in the stainless steel tank. Place the control box onto the tank, aligning it properly. Attach the removable nozzle to the top of the control box.
4. **Fill Water:**



Image Description: A close-up view of the RIMOO humidifier with water being poured directly into the top opening, illustrating the convenient top-fill design.

   Pour clean, cool tap water directly into the top mist outlet until it reaches the maximum fill line inside the tank. Do not overfill. Distilled or demineralized water is recommended to minimize mineral dust and scale buildup.
5. **Connect Power:** Plug the power cord into a standard electrical outlet. The humidifier will emit a beep and the display will light up briefly.

6. Operating Instructions

The humidifier features touch controls for easy operation.



Image Description: A detailed view of the humidifier's control panel, showing the power button, digital display, and mist level button. Text indicates that the 1-9H timer is available when powered on, and there are 3 mist levels (High: 280ml/H, Mid: 200ml/H, Low: 120ml/H).

1. **Power On/Off:** Press and hold the power button (usually indicated by a power symbol) for 3 seconds to turn the humidifier on or off.
2. **Adjust Mist Level:**

Your browser does not support the video tag.

Video Description: This video demonstrates how to adjust the mist levels on the RIMOO humidifier. It shows a finger pressing the mist button to cycle through low, medium, and high mist settings, with corresponding visual changes in mist output.

Press the mist level button (usually indicated by a mist symbol) to cycle through the 3 available mist levels: Low, Medium, and High. The current mist level will be displayed on the screen.

- Low: Approximately 120 ml/hour

- Medium: Approximately 200 ml/hour
- High: Approximately 280 ml/hour

3. **Set Timer:**



Image Description: The RIMOO humidifier is shown on a wooden table with a green circle overlay indicating "1-9 Hours Timer Setting," highlighting its timer function.

While the humidifier is on, press the timer button (usually indicated by a clock symbol) to set the operating time from 1 to 9 hours. The humidifier will automatically turn off once the set time has elapsed.

4. **360° Adjustable Mist Outlet:** Rotate the removable nozzle to direct the mist in any desired direction.
5. **Automatic Shut-off:** The humidifier will automatically turn off when the water level is too low. Refill the tank to resume operation.

7. Maintenance and Cleaning

Regular cleaning is essential for optimal performance and hygiene. The RIMOO humidifier is designed for easy cleaning with only 3 main parts.

1. **Daily Cleaning:**
   - Unplug the humidifier.
   - Remove the control box and nozzle.
   - Empty any remaining water from the stainless steel tank.
   - Rinse the stainless steel tank, oscillator, and nozzle with clean water.
   - Wipe the exterior of the control box with a damp cloth.*Do not wash the control box with water.*
   - Allow all parts to air dry completely before reassembly or storage.

2. **Deep Cleaning (Weekly or Bi-weekly):**



Image Description: Two images demonstrating deep cleaning. One shows the stainless steel tank boiling on a stovetop, and the other shows a hand wiping the interior of the tank with a cloth, emphasizing its wide opening for easy access.

- Unplug the humidifier and disassemble it.
- **Stainless Steel Tank:** The 304 food-grade stainless steel tank can be deep cleaned by boiling. Fill the tank with water and boil it separately on a stovetop to sterilize and remove mineral buildup. *Do not use a gas stove as it may scorch the tank. Ensure no other accessories are boiled with the tank.* The 6.9-inch diameter allows for easy manual cleaning of the inner walls.
- **Oscillator and Nozzle:** Clean these parts with a soft brush and a mild descaling solution (e.g., white vinegar diluted with water) to remove any mineral deposits. Rinse thoroughly with clean water.
- **Control Box:** Wipe with a damp cloth. Ensure no water enters the electronic components.
- Rinse all parts thoroughly to remove any cleaning solution residue.
- Allow all parts to air dry completely before reassembly.

3. **Storage:** If storing the humidifier for an extended period, ensure all parts are clean and completely dry. Store in a

cool, dry place.

8. Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No mist or low mist output	Low water level Mineral buildup on oscillator Mist outlet blocked Unit not powered on	Refill water tank. Clean the oscillator as per maintenance instructions. Ensure the mist outlet is clear. Press and hold the power button for 3 seconds.
Unusual noise	Unit not on a flat surface Water level too low Foreign object in tank	Place on a stable, flat surface. Refill water tank. Unplug and check tank for foreign objects.
Water leakage	Tank overfilled Control box not properly seated	Do not overfill the tank. Ensure the control box is correctly placed on the tank.
Humidifier stopped working unexpectedly	Water tank empty (auto shut-off) Timer expired Power connection issue	Refill water tank. Check timer settings. Ensure power cord is securely plugged in.

If the problem persists after trying these solutions, please contact RIMOO customer support.

9. Specifications

Brand:	RIMOO
Model Name:	JSQ-JANEY
Capacity:	4 Liters (1.1 Gallons)
Operation Mode:	Ultrasonic Cool Mist
Material:	304 Stainless Steel (Tank), Acrylonitrile Butadiene Styrene (ABS)
Voltage:	110 Volts
Wattage:	22 Watts
Runtime:	Up to 36 hours (on low mist setting)
Noise Level:	Approximately 28 dB (Whisper-Quiet)
Filter Type:	Filterless
Control Method:	Touch

Item Dimensions (D x W x H):	7.12"D x 7.12"W x 11.26"H
Item Weight:	3.23 Pounds

10. Warranty and Support

RIMOO offers a **1-year worry-free warranty** for this product. If you encounter any issues or have questions regarding your humidifier, please contact RIMOO customer service.
Customer Service: Please refer to the contact information provided on the product packaging or the official RIMOO website for support. We aim to respond to inquiries within 24 hours.
For additional information and FAQs, you may visit theRIMOO Brand Store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DV58TK3K

More documents and user manuals: **https://manuals.plus/**