

JLDK.26.04.06 RF365B

User Manual: Replacement Remote Control for Adjustable Bed Base

Model: JLDK.26.04.06 RF365B

1. INTRODUCTION

This document provides comprehensive instructions for the setup, operation, and maintenance of your new replacement remote control for Okin JLDK.26.04.06 adjustable bed bases. This remote is specifically designed to work with the JLDK.26.04.06 control box. Please read this manual carefully before using the remote control to ensure proper functionality and to avoid any issues.

2. IMPORTANT COMPATIBILITY NOTE

This remote control is **not universal**. It is crucial to verify that your existing adjustable bed base uses the **Okin JLDK.26.04.06 control box** and that your old remote control is identical to this replacement. Failure to do so may result in incompatibility.

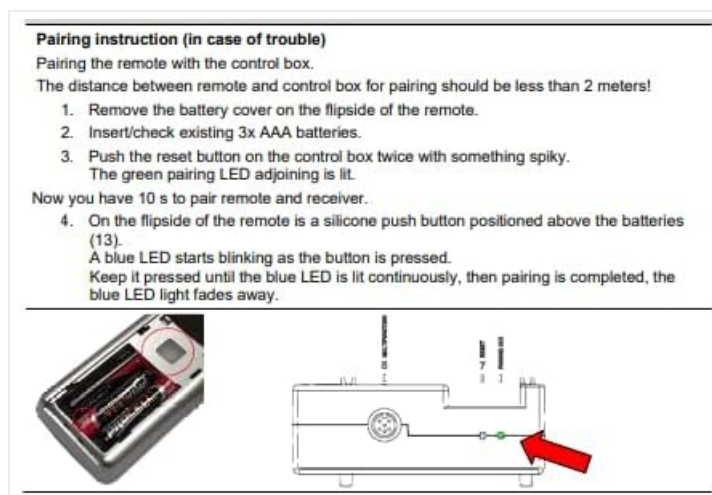


Image 2.1: Visual guide emphasizing the need to provide photos of your control box and old remote for compatibility verification.

Before purchasing or attempting to pair, please troubleshoot your control box and verify the product number of your old remote control (often found in the battery compartment). If you are unsure, contact the seller with detailed information about your bed, control box, and old remote for assistance.

3. SETUP INSTRUCTIONS

3.1 Battery Installation

The remote control requires 2 AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert 2 AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.





Image 3.1: Remote control with battery cover removed (left) and with batteries inserted (right).

3.2 Pairing Instructions

The remote control must be paired with your adjustable bed base's control box. The distance between the remote and control box for pairing should be less than 2 meters (approximately 6.5 feet). Follow these steps:

1. **Step 1:** Unplug the power cord of your adjustable bed base from the electrical outlet. Wait approximately 5 seconds, then plug it back into the outlet.
2. **Step 2:** Within 10 seconds of plugging the power cord back in, locate the PAIR button on the back of the remote control (often a small, recessed button). Press and hold this PAIR button.
3. **Step 3:** The PAIR button on the remote will illuminate blue and begin flashing. Continue to hold the button. When the PAIR button stops flashing and the LED light on the control box goes out, release the PAIR button.
4. **Step 4:** Test all remote functions to confirm successful pairing. If the remote does not respond, repeat the pairing

process.

remote control pairing

Remote Pairing

The original remote that comes in the box is already paired to the adjustable base. No further action is required. In the event that the remote is not paired with the base, follow the steps below.*

STEP 1

Locate the Power Down Box and press the button TWICE. A light on the Battery Back Up Box will illuminate.

POWER DOWN
Button



STEP 2

Remove the back cover of the remote, press and hold down the PAIR button. The PAIR button will illuminate blue and start flashing. When the PAIR button stops flashing, the illuminated light on the Battery Backup Box will go out. Release the PAIR button. The remote is now paired to the adjustable base.


PAIR
Button



STEP 3

After remote is paired, press the following buttons at the same time: Head Up, Head Down, Foot Up and Foot Down. The Power Down Box will blink 4 times in succession to confirm successful pairing. Base paired in steps 1 and 2 is base B. Secondary base is now bed A.

STEP 4

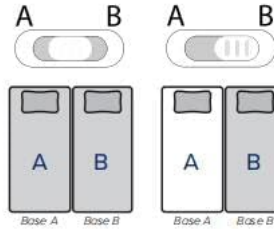

Move slider switch in back of remote to control bed A (slide to far left), bed B (slide to far right) or both beds A & B simultaneously (slide switch to middle).

*ALTERNATE REMOTE PAIRING PROCESS!

Locate the Control Box (see base overview and quick reference guide for corresponding base) and press the Reset/Pairing button twice. A pairing LED light will illuminate green on the Control Box. On the back of the remote, press and hold the PAIR button. The PAIR button will illuminate blue and start flashing. When the PAIR button stops flashing, the green LED light on the Control Box will go out. Release the PAIR button. The remote is now paired to the adjustable base.



Image 3.2: Detailed pairing instruction diagram for the remote control and bed base.

4. OPERATING INSTRUCTIONS

The remote control features intuitive buttons for adjusting your bed base. Familiarize yourself with the button layout:



Image 4.1: Front view of the remote control with labeled buttons.

- **HEAD Up/Down Arrows:** Press the up arrow to raise the head section of the bed; press the down arrow to lower it.
- **FOOT Up/Down Arrows:** Press the up arrow to raise the foot section of the bed; press the down arrow to lower it.
- **ZERO G Button:** Press this button to move the bed into the pre-programmed Zero Gravity position, which elevates both the head and foot sections to promote circulation and relieve pressure.
- **Flat/Memory Button (Horizontal Line):** Press this button to return the bed to a flat position. This button may also function as a memory preset depending on your bed base model.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace the batteries when the remote's response becomes sluggish or if the indicator light (if present) does not illuminate. Always replace both batteries at the same time with new AAA batteries. Dispose of old batteries according to local regulations.

6. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
- Ensure the remote is paired with the bed base. Refer to Section 3.2 for pairing instructions.
- Verify that the bed base is plugged into a working electrical outlet.

- **Remote not pairing:**

- Ensure you are performing the pairing steps within the specified timeframes (e.g., 10 seconds after plugging in the bed base).
- Make sure the remote is within 2 meters of the control box during pairing.
- Confirm that your control box is indeed the JLDK.26.04.06 model.

- **Intermittent operation:**

- Weak batteries may cause intermittent operation. Replace them.
- Ensure there are no obstructions between the remote and the bed base's receiver.

If you continue to experience issues after following these troubleshooting steps, please refer to the original manual for your adjustable bed base or contact the seller for further assistance.

7. SPECIFICATIONS

Model Number	JLDK.26.04.06 RF365B
Power Source	2 x AAA Batteries (not included)
Compatibility	Okin JLDK.26.04.06 Control Box
Color	Black
Special Feature	Not a Universal Remote

8. WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product details. For any warranty claims, technical support, or further inquiries, please contact the seller directly through your purchase platform. It is recommended to retain your proof of purchase for any support requests.

