

Manuals.plus /

› [ELUKHT](#) /

› ELUKHT F01 Fingerprint Attendance Machine User Manual

ELUKHT F01

ELUKHT F01 Fingerprint Attendance Machine User Manual

Model: F01 | Brand: ELUKHT

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ELUKHT F01 Fingerprint Attendance Machine. Please read this manual carefully before using the device to ensure proper functionality and to maximize its lifespan. This device is designed to efficiently track employee attendance using advanced fingerprint recognition technology.

2. PRODUCT FEATURES

The ELUKHT F01 Fingerprint Attendance Machine offers a range of features designed for efficient time management:

- **Efficient Time Tracking:** Accurately records employee attendance, working hours, and shifts to simplify time management.
- **High User Capacity:** Capable of storing a large number of user fingerprints and attendance data records.
- **Fast Identification:** Utilizes advanced technology for quick and accurate fingerprint recognition, ensuring rapid clock-in and clock-out times.
- **Reliable Performance:** Engineered for consistent reliability and minimal maintenance, meeting daily attendance demands.
- **Versatile Application:** Suitable for various environments including offices, factories, schools, and retail stores, enhancing operational efficiency.



Fingerprint
collection without film



Automatically
generate reports



Support for
T9 input method



Real person voice
function



USB drive export



100000 records
capacity

Simple Attendance Machine

Support for multiple languages ◀

Take attendance offline ◀

Real voice ◀



Figure 2.1: Overview of the ELUKHT F01 Fingerprint Attendance Machine highlighting key features like fingerprint collection, report generation, T9 input, voice function, USB export, and record capacity.

3. SETUP

3.1 Unpacking and Inspection

Carefully unpack the attendance machine and all accessories. Inspect the device for any signs of damage. If any components are missing or damaged, contact customer support immediately.

3.2 Power Connection

1. Connect the provided power adapter to the DC IN port on the attendance machine.
2. Plug the power adapter into a standard electrical outlet.
3. The device will power on automatically.

3.3 Initial Configuration

Upon first power-on, the device may prompt you to set the date, time, and language. Follow the on-screen instructions to complete these initial settings.

4. OPERATING INSTRUCTIONS

4.1 Enrolling Fingerprints

To enroll a new user's fingerprint:

1. Press the **MENU** button to access the main menu.
2. Navigate to "User Management" or "Enroll User" using the arrow keys and press **OK**.
3. Select "Enroll Fingerprint" and follow the on-screen prompts.
4. Place the user's finger on the fingerprint sensor. The device will prompt you to lift and place the finger multiple times for accurate registration.
5. Once successfully enrolled, assign a user ID and other relevant information.

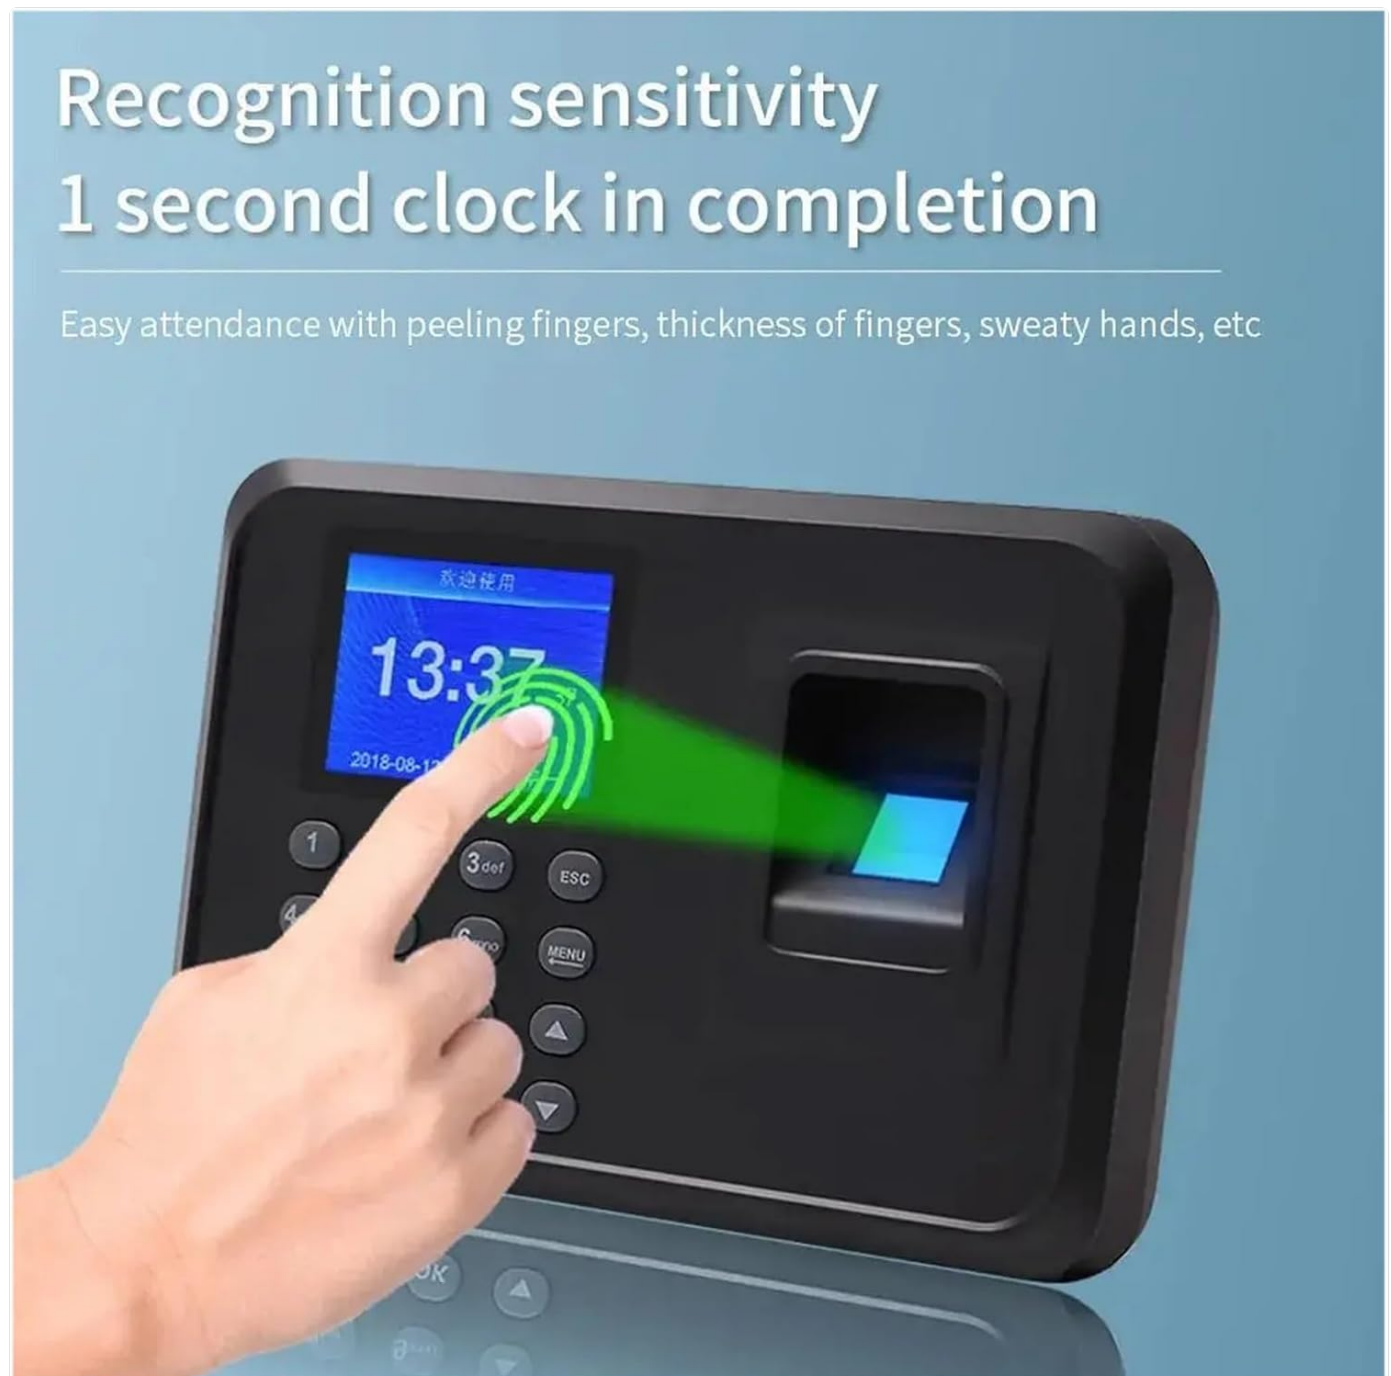


Figure 4.1: Demonstrating the fast 1-second fingerprint recognition process. The device is designed for high sensitivity, accommodating various finger conditions.

4.2 Recording Attendance (Clock-in/Clock-out)

To record attendance, users simply place their registered finger on the fingerprint sensor. The device will confirm successful recognition with a visual and/or audio prompt. The time will be automatically recorded.

4.3 System Settings

Access the system settings via the **MENU** button to configure options such as:

- Date and Time
- Language
- Voice Prompts
- Attendance Rules (e.g., early/late settings, shift management)
- Data Management (e.g., export, delete)

5. DATA MANAGEMENT

5.1 USB Data Export

The ELUKHT F01 supports offline attendance data export via USB. To export attendance records:

1. Insert a USB flash drive into the USB port on the side of the device.
2. Press the **MENU** button and navigate to "Data Management" or "USB Data".
3. Select "Download Attendance Data" or "Export Report".
4. The device will save the attendance report (typically in Excel format) to the USB drive.
5. Safely remove the USB drive and open the report directly on your computer.

Support offline attendance

Intelligent generation of reports for your reference



Export report from USB flash drive and open it directly on the computer

**Intelligent
integration**
Record Mode

**Offline
support**
function

※ Offline attendance: Status without direct connection to computer/network cable

Figure 5.1: Illustrating the USB data export function, allowing for intelligent report generation and offline data transfer without direct computer connection.

5.2 Record Capacity

The device has a substantial capacity for storing attendance data and user fingerprints:

- **Record Capacity:** Up to 100,000 attendance records.
- **Fingerprint Capacity:** Up to 1,000 unique fingerprints.

100000 Massive Records

Large capacity memory, suitable for use by enterprises of different sizes and sizes

100000 pieces

Record capacity

1000 pieces

Fingerprint capacity

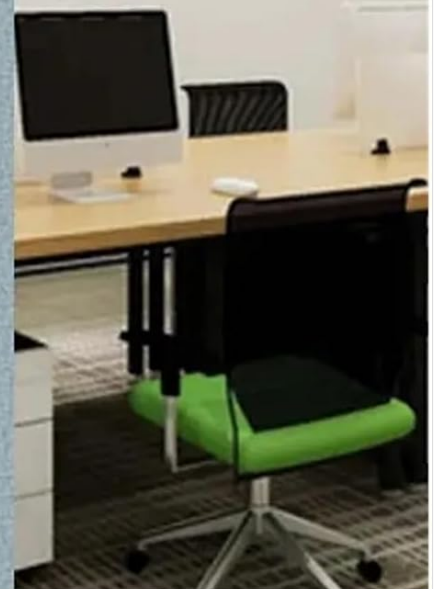


Figure 5.2: Visual representation of the device's large memory capacity, capable of storing 100,000 attendance records and 1,000 fingerprints, suitable for various enterprise sizes.

6. MAINTENANCE

6.1 Cleaning the Device

To ensure optimal performance and longevity, regularly clean the device:

- Use a soft, dry cloth to wipe the exterior of the machine.
- For the fingerprint sensor, use a lint-free cloth lightly dampened with isopropyl alcohol. Avoid excessive moisture.
- Do not use abrasive cleaners or solvents.

6.2 Software Updates

Check the manufacturer's website periodically for any available firmware updates. Follow the provided instructions carefully when performing updates.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	No power supply; faulty adapter.	Check power connection and outlet. Ensure the power adapter is functioning correctly.
Fingerprint not recognized.	Finger placement incorrect; sensor dirty; fingerprint not enrolled.	Ensure finger is placed flat and covers the sensor. Clean the sensor. Re-enroll fingerprint if necessary.
USB data export fails.	USB drive incompatible; drive full; incorrect menu selection.	Try a different USB drive (FAT32 format recommended). Ensure enough space. Follow data export steps carefully.
Incorrect date/time.	Settings not saved; internal battery issue.	Adjust date and time in system settings and ensure they are saved. If the issue persists, contact support.

8. SPECIFICATIONS

- **Model:** F01
- **Brand:** ELUKHT
- **Identification Method:** Fingerprint
- **Fingerprint Capacity:** 1,000
- **Record Capacity:** 100,000
- **Data Output:** USB Flash Drive
- **Offline Attendance:** Supported
- **Manufacturer:** ELUKHT
- **ASIN:** B0DYXFXDZ8

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official ELUKHT website. Keep your purchase receipt as proof of purchase for warranty claims.

If you encounter any issues not covered in this manual, please contact ELUKHT customer service for assistance.

© 2023 ELUKHT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DYXFXDZ8>

More documents and user manuals: <https://manuals.plus/>