

QUI BQ100

QUI Presentation Clicker Wireless Presenter Remote (Model BQ100) Instruction Manual

Your essential guide to seamless presentations.

INTRODUCTION

Thank you for choosing the QUI Presentation Clicker Wireless Presenter Remote, Model BQ100. This device is designed to enhance your presentations by providing intuitive control over your slides and a built-in red laser pointer. With broad compatibility and a plug-and-play design, it's an ideal tool for educators, lecturers, and business professionals.

PACKAGE CONTENTS

- 1 x QUI Wireless Presenter Remote (Model BQ100)
- 1 x USB Receiver (stored inside the remote)
- 1 x User Manual

Note: AAA battery is not included and must be purchased separately.

SETUP GUIDE

1. Battery Installation

The QUI Presentation Clicker requires one AAA battery for operation. To install:

1. Gently slide open the battery compartment cover located on the back of the remote.
2. Insert one AAA battery, ensuring the polarity (+/-) matches the indicators inside the compartment.
3. Close the battery compartment cover securely.

2.4G Wireless Presenter

Obvious controls and red laser presenter make presentations easily even in the darkest lecture rooms



Page Up/
Page Down



Comfortable
Grip



Full/
Black Screen



Built-in USB
Receiver



Bright Light



Button evenly
Distributed

Image: The QUI Presentation Clicker with its battery compartment open, revealing a AAA battery and the integrated USB receiver.

2. Connecting the USB Receiver (Plug & Play)

The remote uses a 2.4GHz wireless USB receiver for connection. No software installation is required.

1. Carefully remove the USB receiver from its storage slot within the remote's battery compartment.
2. Plug the USB receiver into an available USB port on your computer (laptop, desktop, electronic whiteboard, or projector).
3. The computer should automatically detect and install the necessary drivers. This process may take a few seconds.
4. Once installed, turn on the remote using the power switch located on its side. The remote is now ready for use.

PLUG & PLAY

Just Plug The Usb Receiver Into The Computer,
No Need To Download Additional Drivers



Image: The USB receiver being inserted into a laptop's USB port, demonstrating the plug-and-play setup.

OPERATING INSTRUCTIONS

The QUI Presentation Clicker offers intuitive controls for a smooth presentation experience.

Button Functions:

- **Page Up/Next Slide (▲):** Press to advance to the next slide or scroll up.
- **Page Down/Previous Slide (▼):** Press to go back to the previous slide or scroll down.
- **Laser Pointer (*):** Press and hold to activate the red laser pointer. Release to turn off.
- **Full/Black Screen (□):** Press to toggle between full screen mode and a black screen.
- **Power Switch (On/Off):** Slide to turn the remote on or off, conserving battery life when not in use.

Key function

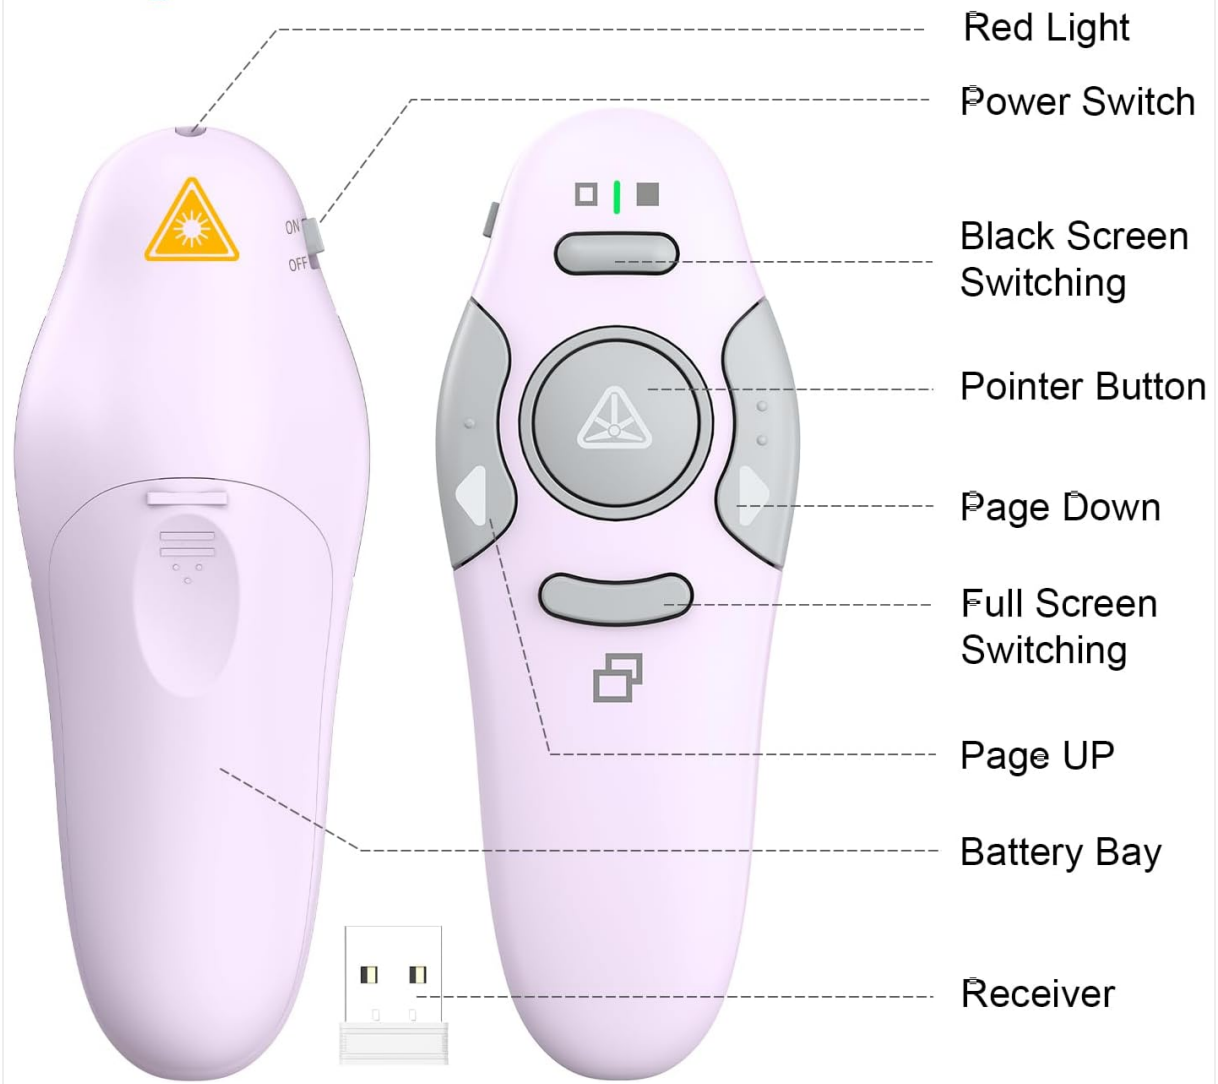


Image: A detailed diagram illustrating each button on the QUI Presentation Clicker and its corresponding function, including the red light, power switch, black screen switching, pointer button, page down, full screen switching, page up, battery bay, and receiver.

Wireless Range:

Enjoy freedom of movement with a wireless control range of up to 328 feet (100 meters). This allows you to interact with your audience and move around the presentation area without being tethered to your computer.

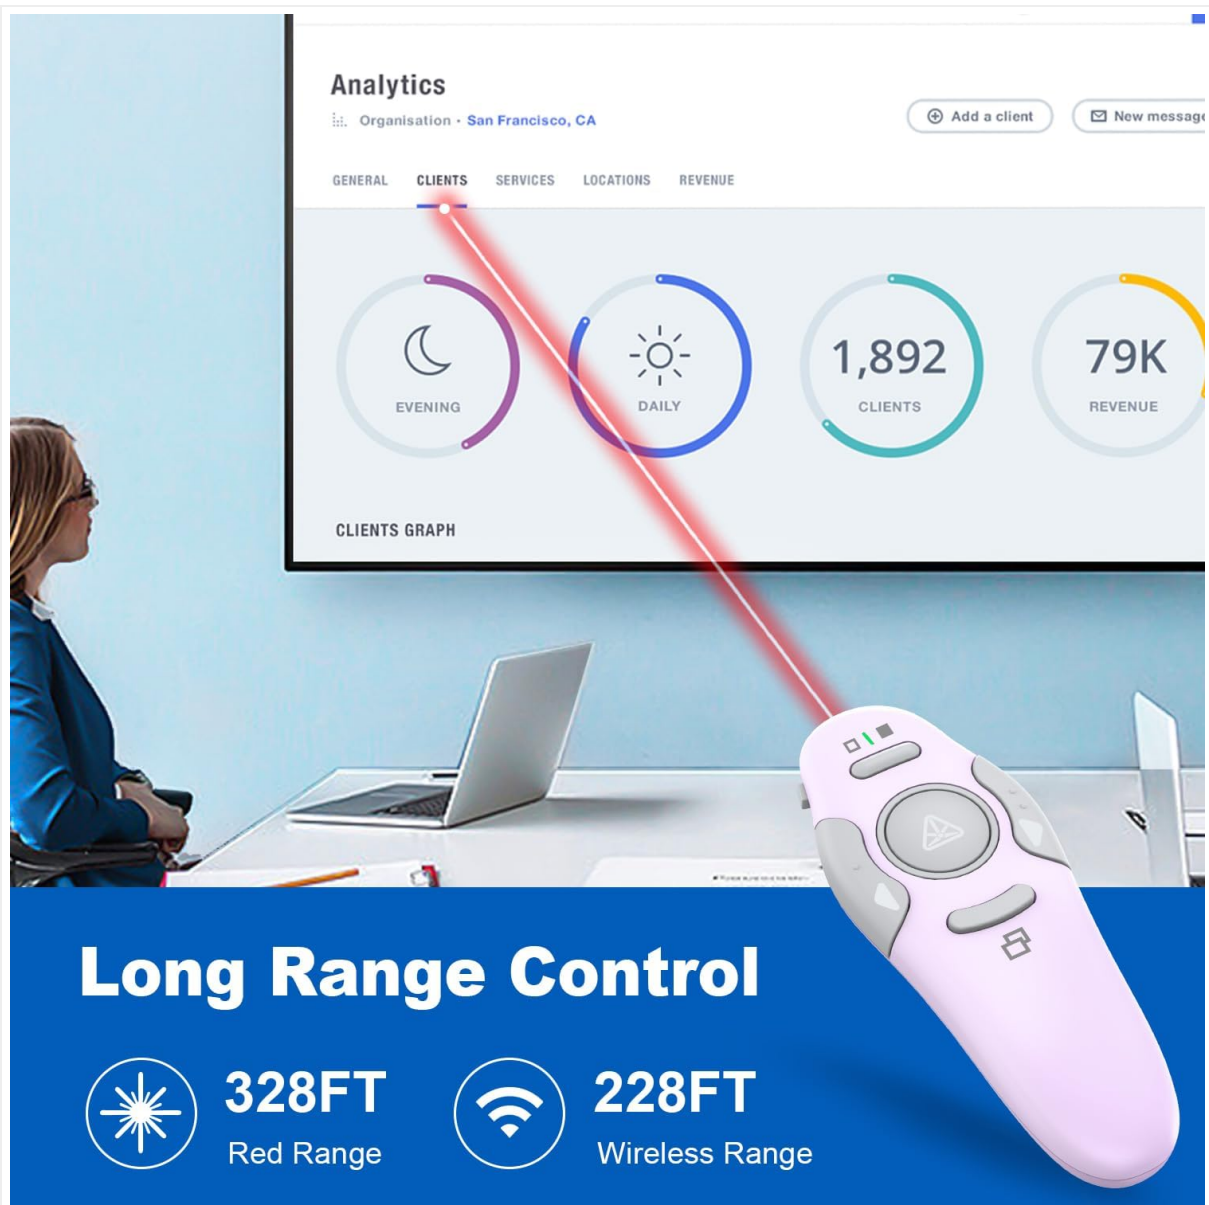


Image: The QUI Presentation Clicker being used to point a red laser at a large screen, illustrating its long-range control capability of up to 328 feet.

Official Product Video:

Your browser does not support the video tag.

Video: A seller-provided video demonstrating the QUI wireless presentation clicker, highlighting its features and ease of use for teachers and presenters.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the remote. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace the AAA battery when the remote's performance degrades or the indicator light (if present) signals low power. Always dispose of used batteries responsibly.
- **Storage:** When not in use, turn off the remote and store the USB receiver inside its designated slot to prevent loss. Keep the device in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Solution
Remote is not responding.	1. Ensure the remote is turned on. 2. Check if the AAA battery is inserted correctly and has sufficient charge. Replace if necessary. 3. Verify the USB receiver is securely plugged into the computer's USB port. 4. Try plugging the USB receiver into a different USB port.
Laser pointer is not working.	1. Ensure the remote is turned on. 2. Press and hold the laser pointer button firmly. 3. Check battery level.
Slides are not advancing/going back.	1. Ensure the USB receiver is properly connected and recognized by the computer. 2. Verify that your presentation software (PowerPoint, Google Slides, Keynote, etc.) is in focus and in presentation mode. 3. Check for any interference that might affect the wireless signal.
Limited wireless range.	1. Ensure there are no large metallic objects or other wireless devices causing interference between the remote and the USB receiver. 2. Move closer to the computer.

SPECIFICATIONS

- **Model:** BQ100
- **Wireless Technology:** 2.4GHz RF
- **Wireless Range:** Up to 328 feet (100 meters)
- **Laser Type:** Red Light Pointer
- **Battery:** 1 x AAA Battery (not included)
- **Operating System Compatibility:** Mac OS, Windows 2003/XP/Vista/7/8/10 and above, Linux, Android
- **Software Compatibility:** PowerPoint, Excel, Prezi, Google Slides, iWork (Keynote, Numbers, Pages)
- **Dimensions:** 4.4 x 1.8 x 1.1 inches
- **Item Weight:** 1.58 ounces

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your QUI Presentation Clicker, please refer to the contact information provided with your purchase or visit the official QUI website. We are committed to providing high-quality products and excellent customer service.