



[Manuals.plus](#) /

> [AIKEEP](#) /

> AIKEEP 2-in-1 Dog Shock and Bark Collar User Manual

AIKEEP OTB3

AIKEEP 2-in-1 Dog Shock and Bark Collar User Manual

Model: OTB3

INTRODUCTION

Thank you for choosing the AIKEEP 2-in-1 Dog Shock and Bark Collar. This device is designed to assist in effective dog training and automatic bark control, promoting a harmonious relationship between you and your pet. It combines a remote-controlled training collar with an automatic anti-bark feature, offering multiple modes for various behavioral corrections. Please read this manual thoroughly before use to ensure proper setup, safe operation, and optimal performance.

IMPORTANT SAFETY INFORMATION

Your pet's safety and comfort are paramount. Please adhere to the following guidelines:

- This dog training collar is a training tool, not a toy. Keep it out of reach of children.
- The collar receiver is IP67 waterproof, but the remote control is NOT waterproof. Keep the remote away from water.
- Ensure proper fit: The collar should be snug enough for the contact points to touch the dog's skin, but not so tight as to restrict breathing or cause discomfort.
- Avoid leaving the collar on your dog for more than 12 hours per day. Reposition the collar every 1-2 hours to prevent pressure necrosis (collar sores).
- Regularly check your dog's neck for any signs of irritation, redness, or sores. If irritation occurs, discontinue use until the skin heals. Consult a veterinarian if the condition persists.
- The shock mode should be used responsibly and only after other modes (beep, vibration) have been attempted. Start with the lowest effective level.
- This collar is suitable for dogs weighing 8-120 lbs.

PRODUCT COMPONENTS

The package includes the following items:

- Dog Training Collar Remote
- Dog Shock Collar Receiver with Nylon Collar Strap

- Charging Cable (Type-C)
- Metal Contact Points (various sizes)
- Test Lamp for Bark Collar



Image: The AIKEEP 2-in-1 Dog Shock Collar and Bark Collar, showing the remote and the collar receiver with its orange and black nylon strap.

SETUP GUIDE

1. Charging the Devices

Before first use, fully charge both the collar receiver and the remote control. The devices feature a high-capacity rechargeable battery for long-lasting performance.

- Connect the Type-C charging cable to the charging ports on both the receiver and the remote.

- Plug the USB end of the cable into a compatible USB power source (e.g., wall adapter, computer USB port, power bank).
- A full charge typically takes about 2 hours. The receiver lasts 15+ days, and the remote lasts 30+ days on a single charge.

For 8-120lbs



Adjustable **6-27** Inches Nylon Collar

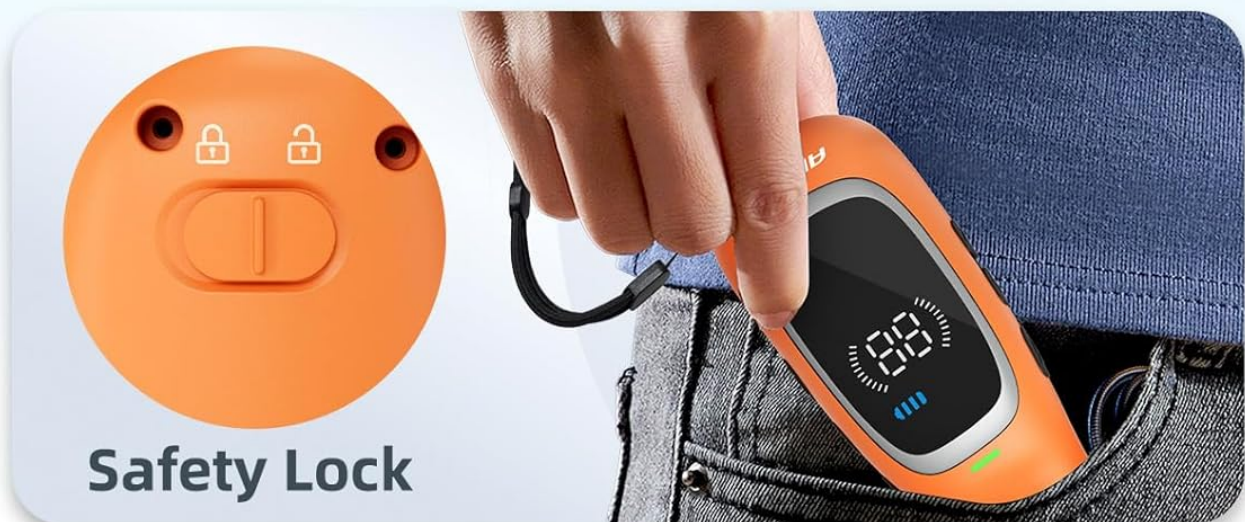


Image: The collar receiver and remote control being charged simultaneously with the included Type-C cable, illustrating the long-lasting battery life.

2. Adjusting the Collar Strap

The nylon collar strap is adjustable from 6 to 27 inches to fit small, medium, and large dogs (8-120 lbs). Ensure a proper fit for effective and safe operation.

1. Slide the buckle to loosen the strap.
2. Slide and thread the strap through the receiver and buckle to adjust the length.
3. Once adjusted, ensure the collar is snug enough for the contact points to make consistent contact with your dog's skin, but loose enough to allow one finger to fit comfortably between the strap and your dog's neck.
4. If the strap is too long, you can trim it. After cutting, use a lighter to carefully singe the cut end to prevent fraying.

Long-Lasting Battery Life



Fully Charged
in **2** Hours



Last for
15-30 days




Image: Various dog breeds demonstrating the adjustable nylon collar, along with an illustration of how to adjust and trim the strap for a perfect fit.

3. Contact Points and Skin Contact

For the shock mode to be effective, the contact points must make direct contact with your dog's skin. Choose the appropriate length of contact points based on your dog's coat length.

- Ensure the contact points are securely screwed into the receiver.
- Periodically check the contact points for cleanliness and ensure they are not causing irritation.



Double Protection

Reduces skin irritation

Note 1:
Skin contact is crucial for the effectiveness of the shock mode. Please fit the collar properly so that the Contact Points press firmly against the dog's skin.

Note 2:
Please avoid leaving the collar on the dog for over 12 hours per day. And please reposition the collar every 1-2 hours.

Image: A beagle wearing the collar, illustrating the importance of proper skin contact for effectiveness and the need to reposition the collar to prevent irritation.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn on: Press and hold the power button on both the receiver and the remote until the LED indicator lights up.
- To turn off: Press and hold the power button on both devices until the LED indicator turns off.

2. Training Modes

The AIKEEP collar offers three distinct training modes, easily switchable with the 'M' button on the remote:

- **Bark Collar Mode:** Automatically detects barking and applies corrections based on sensitivity levels (5 levels).
- **Shock Collar Mode:** Allows manual control of beep (8 levels), vibration (16 levels), and shock (99 levels) via the remote.
- **Combined Mode:** Integrates both automatic bark detection and remote-controlled training functions.

3 Training Modes

Easy to Change with M Button

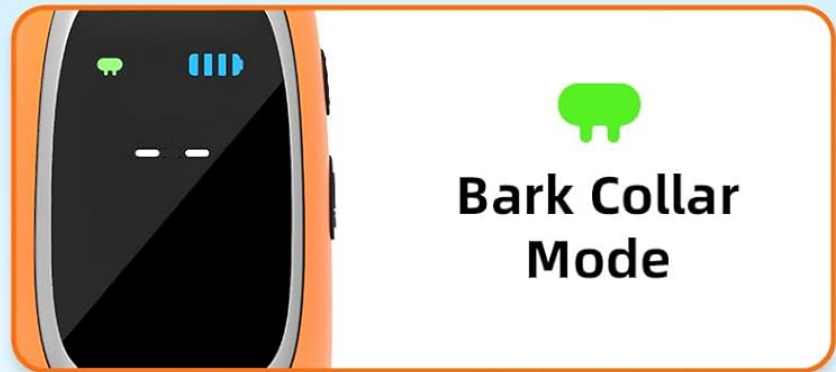


Image: The remote control illustrating the three training modes: Bark Collar Mode, Shock Collar Mode, and Combined Mode, with the 'M' button for switching.

2-IN-1

Bark and Shock Collar



Dog Bark Collar

Dog Bark Collar Sensitivity



Beep
(1-8 levels)



Vibration
(1-16 levels)



Safe Shock
(1-99 levels)



Dog Shock Collar

Image: A visual representation of the 2-in-1 functionality, showing the dog bark collar sensitivity levels and the beep, vibration, and safe shock levels for the dog shock collar.

3. Remote Control Features

- **Extended Range:** The remote offers an ultra-long 3300FT range for uninterrupted training in various environments.
- **LED Display:** A large, backlit LED screen provides clear visibility of settings and battery status, even in low light.
- **Safety Lock:** The remote features a secure safety lock button to prevent accidental operation and unintended stimulation.

3300Ft

Remote Range & Stable Signal



Image: A person using the remote control in an open field with a dog, demonstrating the 3300ft remote range and stable signal.



Image: The remote and collar receiver with their large LED displays, highlighting the effortless training experience.


Image: A close-up of the remote's safety lock mechanism and the remote being carried in a pocket, emphasizing how it reduces unintended stimulation.

MAINTENANCE

1. Waterproofing

The collar receiver boasts an IP67 waterproof rating, allowing your dog to train in various wet conditions, including rain, swimming, or mud. However, the remote control is NOT waterproof.

IP67 Waterproof Receiver Collar

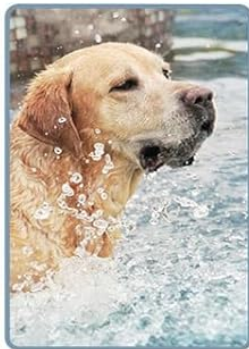

Note: The remote is not waterproof

Image: A dog swimming with the collar on, demonstrating the IP67 waterproof capability of the receiver. Note: The remote is not waterproof.

Your browser does not support the video tag.

Video: Demonstration of the AIKEEP collar receiver's IP67 waterproof ability. The video shows the collar submerged in water, and the remote still successfully activating its functions, confirming its water resistance. It also explicitly states that the remote is not waterproof.

2. Cleaning and Storage

- Clean the collar receiver and contact points regularly with a damp cloth to remove dirt and debris.

- Ensure the devices are completely dry before charging or storing.
- Store the collar and remote in a cool, dry place when not in use.

TROUBLESHOOTING

If you encounter any issues with your AIKEEP 2-in-1 Dog Shock and Bark Collar, please refer to the following common solutions:

- **Device Not Responding:** Ensure both the receiver and remote are fully charged and powered on. Check if they are properly paired (refer to pairing instructions if available, or try re-pairing).
- **No Correction/Weak Correction:** Verify the collar is fitted snugly and the contact points are making good skin contact. Adjust contact point length if necessary. Increase the intensity level gradually.
- **Bark Collar Not Activating:** Adjust the bark sensitivity level. Ensure the collar is positioned correctly on the dog's neck.
- **Accidental Activations:** Ensure the remote's safety lock is engaged when not in active use. Check bark sensitivity settings if in bark mode.
- For further assistance, please contact AIKEEP customer support.

SPECIFICATIONS

Feature	Detail
Brand	AIKEEP
Model Name	OTB3
Item Weight	11.6 ounces
Collar Material	Nylon
Collar Adjustment Range	6-27 inches
Suitable Dog Weight	8-120 lbs
Remote Range	Up to 3300FT
Receiver Waterproof Rating	IP67
Remote Waterproof	No
Charging Time	Approx. 2 hours
Receiver Battery Life	15+ days
Remote Battery Life	30+ days
Training Modes	Beep (8 levels), Vibration (16 levels), Shock (99 levels)
Bark Collar Sensitivity	5 levels

WARRANTY AND SUPPORT

AIKEEP is committed to providing high-quality products and customer satisfaction. For any questions, concerns, or warranty inquiries regarding your 2-in-1 Dog Shock and Bark Collar, please contact AIKEEP customer support directly. Refer to the product packaging or the seller's information on the purchase platform for specific contact details.

We recommend keeping your purchase receipt as proof of purchase for warranty purposes.

© 2025 AIKEEP. All rights reserved.