

## Fisher-Price BB722

# Fisher-Price Shieldpro 360° i-Size Car Seat Instruction Manual

Model: BB722

For children from 40 cm to 150 cm (approximately birth to 12 years)

## 1. INTRODUCTION

This manual provides essential information for the safe and correct use of your Fisher-Price Shieldpro 360° i-Size Car Seat, Model BB722. Please read all instructions carefully before installation and use, and keep this manual for future reference. This car seat is designed to provide maximum safety and comfort for children from 40 cm to 150 cm in height, adhering to the i-Size (R129) safety standard.

Key features include 360° rotation, ISOFIX and Top Tether fixation, multiple recline positions, and adjustable headrest and harness to accommodate your child's growth.

## 2. SAFETY INFORMATION

Your child's safety is paramount. Always follow these guidelines:

- **i-Size (R129) Standard:** This car seat complies with the latest European safety standard, which uses child height for classification, ensuring enhanced protection, especially for side impacts.
- **Correct Installation:** Always use the ISOFIX and Top Tether system for installation. Ensure all indicators are green and audible alarms (if applicable) confirm correct engagement. Incorrect installation significantly reduces safety.
- **Harness Usage:** For children up to 105 cm, always secure your child with the integrated 5-point harness. Ensure the harness is snug and not twisted.
- **Vehicle Seat Belt:** For children from 100 cm to 150 cm, the car seat converts to a high-back booster, and the child must be secured with the vehicle's 3-point seat belt.
- **Rear-Facing Position:** Children up to 105 cm (approximately 4 years old) must travel in the rear-facing position for optimal safety.
- **Side Impact Protection:** The reinforced structure of the car seat is designed to absorb impact forces in the event of a side collision.
- **Never leave your child unattended** in the car seat.
- **Do not modify** the car seat in any way.

- **Replace the car seat** after any accident, even if there is no visible damage.




**Proteção contra impactos frontais e laterais**

Segurança em primeiro lugar!



**Prendedores do cinto de segurança**

Facilidade para colocar e retirar a criança do assento.

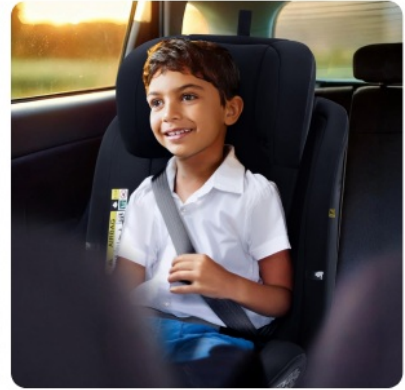

**Certificada pela norma i-Size**

De 40 a 150 cm (do nascimento até cerca de 12 anos)

*Image 2.1: Key safety features including side impact protection and i-Size certification.*

### 3. COMPONENTS OVERVIEW

Familiarize yourself with the main parts of your Shieldpro car seat:

- **Headrest:** Adjustable to 17 positions.
- **5-Point Harness:** For children up to 105 cm, with automatic adjustment and audible alarm indicators.
- **Harness Buckle Holders:** Keep harness straps out of the way when placing the child.
- **Recline Lever:** Adjusts the seat to 4 recline positions (1 rear-facing, 3 forward-facing).
- **Rotation Button:** Enables 360° rotation of the seat.
- **ISOFIX Connectors:** Extendable connectors for secure attachment to vehicle's ISOFIX anchor points.
- **Top Tether Strap:** Provides additional stability and prevents rotation, with audible alarm indicator.
- **Infant Reducers:** Padded inserts for newborns and smaller infants.
- **Washable Cover:** Removable fabric cover for easy cleaning.



Image 3.1: Front view of the Fisher-Price Shieldpro 360° i-Size Car Seat.

## 4. SETUP AND INSTALLATION

Proper installation is crucial for safety. Follow these steps carefully:

### 4.1. Preparing the Car Seat

1. **Infant Reducers:** For newborns and small infants (40-60 cm), ensure the infant reducer cushions are correctly installed for optimal support and comfort. Remove them as your child grows.
2. **Harness Adjustment:** Before installation, ensure the 5-point harness is at the correct height for your child's shoulders. The harness straps should be at or slightly below the child's shoulders when rear-facing, and at or slightly above when forward-facing.

### 4.2. ISOFIX and Top Tether Installation

This car seat must be installed using the ISOFIX system and the Top Tether strap.

1. **Locate ISOFIX Anchor Points:** Find the ISOFIX anchor points in your vehicle's back seat. These are usually marked with an ISOFIX symbol.
2. **Extend ISOFIX Connectors:** Press the ISOFIX release buttons on the car seat base and extend the ISOFIX connectors.
3. **Attach ISOFIX Connectors:** Push the ISOFIX connectors onto the vehicle's anchor points until they click securely into place. Visual indicators on the connectors should turn green, and an audible click confirms engagement.
4. **Push Car Seat Firmly:** Push the car seat firmly against the vehicle seat back to ensure a tight fit.
5. **Attach Top Tether:** Locate the Top Tether anchor point in your vehicle (usually on the back of the vehicle seat, parcel shelf, or boot floor). Extend the Top Tether strap from the car seat and attach the hook to the vehicle's anchor point.
6. **Tighten Top Tether:** Pull the Top Tether strap firmly until it is taut. The visual indicator on the Top Tether buckle should turn green, and an audible alarm will sound if not correctly tensioned.
7. **Verify Installation:** Gently pull and push the car seat to ensure it is securely installed and does not move excessively. All indicators must be green.



#### Sistema ISOFIX reversível com Top Tether

Fixação muito mais segura com rotação 360° livre de amarrações.



#### Indicação de má instalação com alarme sonoro.

Sistema presente nas fivelas do cinto de 5 pontos e do Top Tether.



#### Ajuste do apoio de cabeça

São 17 opções de altura para o apoio de cabeça com ajuste automático do cinto de 5 pontas.

Image 4.1: Illustration of ISOFIX system with Top Tether and alarm indicators for correct installation.



Image 4.2: Close-up of the Top Tether buckle and 5-point harness buckle, showing visual and audible indicators for correct installation.

## 5. OPERATING INSTRUCTIONS

### 5.1. 360° Rotation

The 360° rotation feature allows for easy placement and removal of your child.

1. **To Rotate:** Ensure the car seat is not under tension from the Top Tether. Press the rotation button (usually located at the front of the base) and turn the seat to the desired position (e.g., facing the car door for easy access).
2. **Lock Position:** Once rotated, release the button and ensure the seat locks securely into place, either rear-facing or forward-facing. The Top Tether must be re-tensioned if it was loosened for rotation.



Image 5.1: Illustration of the 360° rotation feature and convenient harness buckle holders.

## 5.2. Recline Positions

The car seat offers 4 recline positions for your child's comfort:

- 1 position for rear-facing.
- 3 positions for forward-facing.

To adjust the recline, locate the recline lever (usually at the front or side of the base), pull it, and tilt the seat to the desired angle. Release the lever to lock the position.

# Passeios tranquilos



Image 5.2: Visual representation of the 4 available recline positions.

## 5.3. Headrest and Harness Adjustment

The headrest and 5-point harness adjust simultaneously to 17 different height levels.

1. **To Adjust:** Locate the headrest adjustment lever (usually at the top back of the headrest). Squeeze the lever and slide the headrest up or down to the appropriate height.
2. **Correct Height:** Ensure the harness straps are at or slightly below your child's shoulders when rear-facing, and at or slightly above when forward-facing.

# Acompanha o crescimento



©2025 Mattel.



Image 5.3: Diagram showing the 17-position headrest and automatic harness adjustment.

## 5.4. Securing Your Child

1. **Open Harness:** Press the red button on the harness buckle to release the harness. Use the harness buckle holders to keep the straps open.
2. **Place Child:** Seat your child in the car seat.
3. **Fasten Harness:** Bring the two buckle tongues together and insert them into the central buckle until you hear a click.
4. **Tighten Harness:** Pull the adjustment strap at the front of the seat to tighten the harness until it is snug against your child's body. You should not be able to pinch any excess webbing at the shoulder.
5. **Check Alarms:** Ensure any audible alarms on the harness buckle are not active, indicating correct fastening.

## 6. MAINTENANCE

Regular cleaning and maintenance will prolong the life of your car seat.

- **Washable Cover:** The fabric cover is fully removable and washable. Refer to the care label on the cover

for specific washing instructions (typically machine wash cold on a gentle cycle). Do not bleach or tumble dry.

- **Cleaning Hard Parts:** Wipe plastic and metal parts with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Harness Care:** Inspect the harness straps regularly for wear or damage. Clean with a damp cloth; do not immerse in water or use harsh chemicals, as this can weaken the webbing.



Image 6.1: The car seat with its fully removable and washable cover.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Possible Cause	Solution
Car seat feels loose after installation.	ISOFIX connectors not fully engaged or Top Tether not tight enough.	Ensure ISOFIX indicators are green and Top Tether is pulled taut until its indicator is green. Push the seat firmly against the vehicle backrest. Re-install if necessary.

Problem	Possible Cause	Solution
Harness buckle alarm sounds.	Harness not correctly fastened or buckle not fully engaged.	Ensure both buckle tongues are fully inserted into the central buckle until a clear click is heard and the alarm stops.
Cannot rotate the car seat.	Rotation lock engaged or Top Tether tension.	Ensure the rotation button is fully pressed. If the Top Tether is very tight, it might restrict rotation; slightly loosen it if necessary, then re-tension after rotation.
Harness is difficult to tighten or loosen.	Harness straps may be twisted or caught.	Check that the harness straps are not twisted behind the seat or under the child. Ensure the adjustment strap is clear.

## 8. SPECIFICATIONS

- **Model:** BB722
- **Brand:** Fisher-Price
- **Child Height Range:** 40 cm to 150 cm
- **Approximate Age Range:** Birth to 12 years
- **Safety Standard:** i-Size (R129)
- **Installation Type:** ISOFIX + Top Tether
- **Harness Type:** 5-point harness (for children up to 105 cm)
- **Recline Positions:** 4 (1 rear-facing, 3 forward-facing)
- **Headrest Adjustment:** 17 positions, automatic harness adjustment
- **Rotation:** 360°
- **Materials:** Metal, Plastic, Polyester fabric
- **Product Dimensions:** 53 x 57.5 x 44 cm
- **Product Weight:** 12.4 kg
- **Certification:** Inmetro: 000564/2025

## 9. WARRANTY AND SUPPORT

This Fisher-Price Shieldpro 360° i-Size Car Seat (Model BB722) comes with a **12-month warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims. For technical support, warranty claims, or any questions regarding the use of your car seat, please contact Fisher-Price customer service. Contact information can typically be found on the product packaging or the official Fisher-Price website.

For more information, you may visit the official [Fisher-Price Store on Amazon](#).

