

[Manuals.plus](#) /

› [AYJOIR](#) /

› AYJOIR Massage Recliner Power Lift Chair Instruction Manual (Model n719-Power Lift Chair)

AYJOIR n719-Power Lift Chair

AYJOIR Massage Recliner Power Lift Chair Instruction Manual

Model: n719-Power Lift Chair

INTRODUCTION

Thank you for choosing the AYJOIR Massage Recliner Power Lift Chair. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new recliner. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: Assembled AYJOIR Massage Recliner Power Lift Chair.

SAFETY INFORMATION

- Ensure all components are securely assembled before use.
- Keep children and pets away from the chair's moving parts during operation.
- Do not place hands or feet under the chair while it is in motion.
- Avoid spilling liquids on the control panel or power connections.
- Unplug the chair from the power outlet before cleaning or maintenance.
- Do not exceed the maximum weight capacity of 250 lbs.
- If any unusual noise or malfunction occurs, discontinue use immediately and contact customer support.

PACKAGE CONTENTS

Carefully unpack all items and ensure all parts are present. If any parts are missing or damaged, do not proceed with assembly and contact

customer service.

- Main Chair Base
- Backrest
- Left Armrest
- Right Armrest
- Seat Cushion (Massage/Heating Pad)
- Headrest Cushion
- Lumbar Support Cushion
- Power Adapter
- Remote Control
- Instruction Manual (this document)

Massage Chair



**Powered
lift design**



**Heating
Therapy**



**Equipped
with a
remote
control**



**3
massage
modes**

Figure 2: Key components of the recliner, including the main chair, seat cushion, and remote.

Follow these steps to assemble your AYJOIR Massage Recliner Power Lift Chair. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place the main chair base on a flat, stable surface.
2. **Attach Armrests:** Slide the left and right armrests onto the metal brackets on the sides of the main chair base until they click securely into place. Ensure the side pockets are facing outwards.
3. **Prepare Seat Cushion:** The massage and heating pad is integrated into the seat cushion. Carefully remove it from its vacuum-sealed packaging. Allow it to expand fully.
4. **Install Backrest:** Align the metal brackets on the backrest with the corresponding slots on the main chair base. Push down firmly until the backrest locks into position.
5. **Connect Wires:** Locate the power cables for the massage and heating functions. Connect the corresponding wires from the backrest and seat cushion to the main chair base. Ensure a secure connection.
6. **Place Cushions:** Insert the headrest and lumbar support cushions into their designated pockets on the backrest.
7. **Connect Power:** Connect the power adapter to the chair's power input, then plug the adapter into a standard electrical outlet. Connect the remote control cable to the designated port.

Your browser does not support the video tag.

Video 1: Step-by-step assembly guide for the AYJOIR Massage Recliner Power Lift Chair. This video demonstrates unpacking, attaching armrests, installing the seat cushion and backrest, connecting internal wiring, and final power connections.



BIG EARS ARMREST

Selected high-quality padded armrest, flexible and thick, let your arm get the best comfort.

STORAGE POCKETS

With Convenient magazine storage pockets, you can store your loose items in it.



OVERSTUFFED HEADREST

The headrest and backrest is adequately filled with soft and elastic foam, providing considerate support to the body.

Figure 3: Detail of the armrest with storage pockets and the overstuffed headrest.

OPERATING INSTRUCTIONS

Your recliner is equipped with a remote control to manage its various functions. Ensure the chair is plugged into a power outlet before operation.

Remote Control Functions:

- **Power Lift:** Use the designated buttons on the remote to gently lift the chair, assisting you in standing up or sitting down.
- **Recline Function:** Press the recline buttons to adjust the backrest and footrest to your desired position, up to 135 degrees. The chair offers infinite positions for personalized comfort.
- **Massage Modes:** Select from 3 massage modes targeting the back, lumbar, thighs, and lower legs. Adjust the intensity between high and low settings.
- **Heating Function:** Activate the soothing warmth feature with 2 heat settings, concentrated around the lumbar area.
- **USB Charging Port:** A convenient USB port is located on the side of the chair for charging your electronic devices.



Figure 4: Recline positions, illustrating 95 degrees for reading and 135 degrees for napping.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your recliner.

- **Cleaning:** For general cleaning, use a soft, damp cloth with mild soap. Avoid harsh chemicals or abrasive cleaners. For spills, blot immediately with a clean, dry cloth.
- **Fabric Care:** The chair is upholstered in premium velvet. Vacuum regularly using an upholstery attachment to remove dust and debris.
- **Moving the Chair:** When moving the chair, lift it rather than dragging to prevent damage to the base and flooring.
- **Power Cord:** Regularly inspect the power cord for any signs of damage. If damaged, contact customer support for a replacement.

CRAFTED WITH QUALITY & COMFORTS



Figure 5: Details of the chair's construction, highlighting high-density foam, premium velvet, and the metal reclining mechanism.


TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not operate (no power).	Power cord not properly connected or power outlet malfunction.	Check if the power cord is securely plugged into both the chair and the wall outlet. Test the outlet with another device.
Massage or heating function not working.	Internal wires disconnected or remote control issue.	Ensure all internal wires are securely connected (refer to assembly steps). Check remote control batteries if applicable (this remote is wired, so check cable connection).
Chair makes unusual noises during operation.	Loose components or obstruction in the mechanism.	Inspect for any loose screws or obstructions. Ensure no items are caught in the reclining mechanism. If noise persists, contact customer support.

Problem	Possible Cause	Solution
Chair does not recline or lift smoothly.	Mechanism obstruction or motor issue.	Check for obstructions. Ensure the chair is not overloaded. If the issue continues, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	AYJOIR
Model Name	Power Lift Chair (n719-Power Lift Chair)
Color	Blue
Product Dimensions	21.1"D x 36.6"W x 41"H
Frame Material	Iron + MDF
Upholstery Material	Premium Velvet
Item Weight	107.8 pounds
Weight Capacity	250 lbs
Recline Angle	Up to 135 degrees (Infinite Position)
Massage Functions	3 modes, adjustable intensity (back, lumbar, thighs, lower legs)
Heating Zones	Lumbar area (2 settings)
Additional Features	Side storage pockets, USB charging port, LED lights

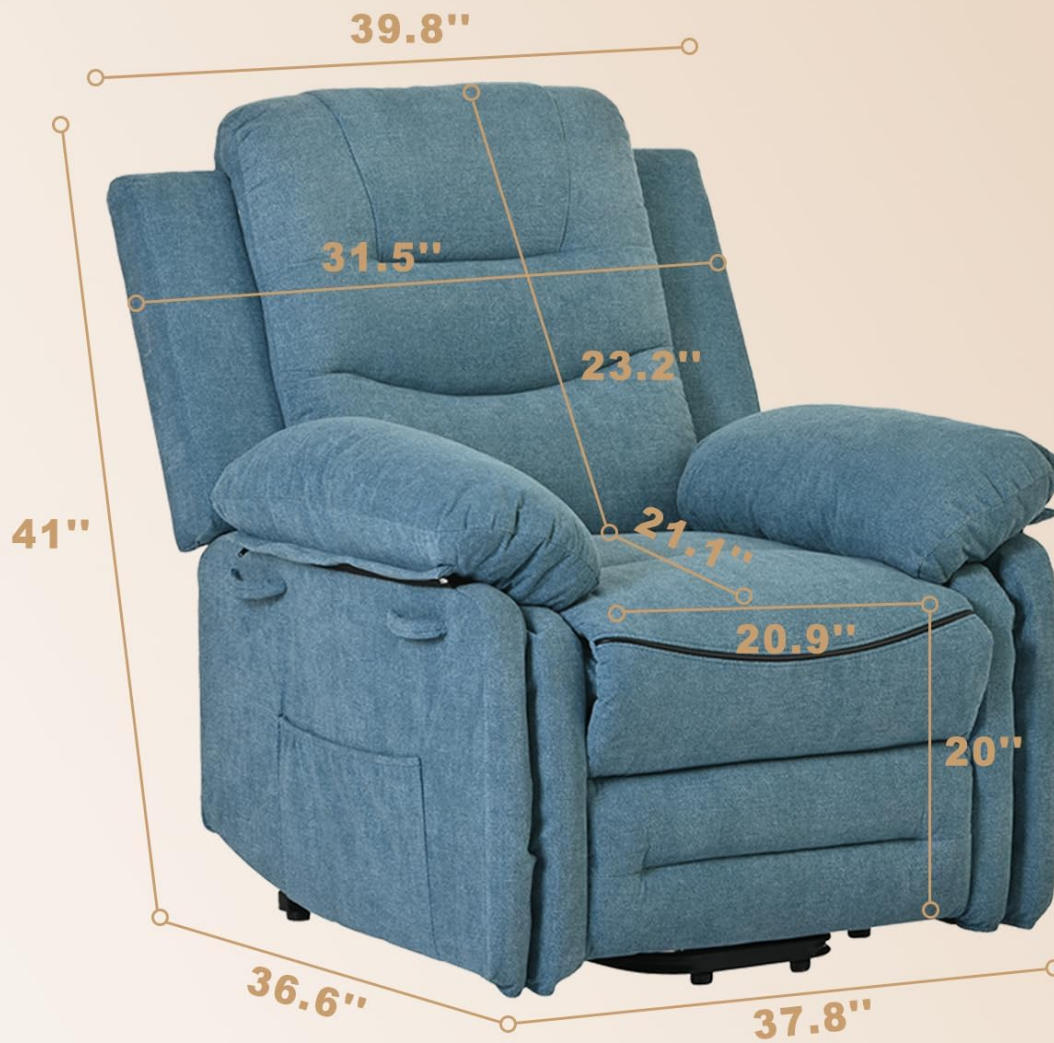

**TWIN
SIZE**

Dimension
37.8"x 36.6"x 41"

Material
Iron+MDF

Weight Capacity
250LBS

Figure 6: Product dimensions for the AYJOIR Massage Recliner Power Lift Chair.

WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact AYJOIR customer service. Refer to your purchase documentation for specific warranty terms and contact details.

You can also visit the official AYJOIR store on Amazon for more information: [AYJOIR Store](#)

