

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [WALKINGPAD](#) /
- › [WALKINGPAD C1 Foldable Walking Pad Treadmill User Manual](#)

WALKINGPAD C1

WALKINGPAD C1 Foldable Walking Pad Treadmill User Manual

Model: C1
Brand: WALKINGPAD

1. INTRODUCTION AND OVERVIEW

The WALKINGPAD C1 is a revolutionary foldable walking pad treadmill designed for seamless integration into your home or office environment. Its ultra-compact and portable design allows for easy storage and use in various settings, promoting an active lifestyle without requiring significant space. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your WalkingPad C1.



Image 1.1: The WALKINGPAD C1 in its unfolded state with a user, and a smaller image showing it in its folded, compact form.

2. KEY FEATURES

- **Space-Saving Foldable Design:** Equipped with a patented 180-degree folding mechanism, the WalkingPad C1 can be easily folded to a compact size of 33.5 inches in length, 15.7 inches in width, and 5.5 inches in height, occupying only 0.16 square meters. Built-in wheels facilitate effortless mobility and storage under furniture.



Image 2.1: Demonstrates the easy folding process and how the WalkingPad C1 can be stored compactly under a bed.

Suitable for Very Flat and Narrow Spaces



Image 2.2: Illustrates the compact dimensions of the WalkingPad C1, showing it stored conveniently under a sofa.

- **Smart Control System:** The treadmill offers intuitive speed control via a smart app or the included remote control. It also features a unique motion-controlled speed in smart mode, allowing the belt speed to adjust based on your footstep position. Speed can be adjusted from 0.5 to 3.72 mph.



Image 2.3: The compact remote control for adjusting speed and modes.

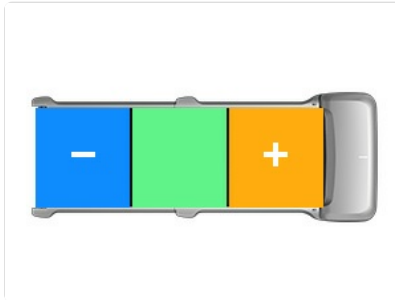


Image 2.4: Diagram illustrating the footstep induction speed control zones on the treadmill belt.

- **Enhanced Safety and Comfort:** Supports a maximum weight of 220 lbs and includes a child lock for safety. The low-profile 4.6-inch deck features a 4-layer shock-absorbing belt made of slip-resistant, high-density material, designed to reduce joint strain during workouts.



Image 2.5: Cross-section diagram highlighting the four layers of the composite running belt for shock absorption and durability.

- **Quiet and Efficient Operation:** Powered by an ultra-quiet brushless motor operating at a mere 40dB, making it suitable for any environment without causing disturbance. It offers a peak 2HP output while saving 25% energy. An integrated LED display shows real-time exercise data.

3. SETUP

The WALKINGPAD C1 requires no installation and is ready to use right out of the box. Simply unpack, unfold, and connect to power.

3.1 Unfolding the WalkingPad C1

1. Carefully remove the WalkingPad C1 from its packaging.
2. Place the folded unit on a flat, stable surface.
3. Gently unfold the rear section of the treadmill until it lies flat and locks into place. Ensure the folding mechanism is fully extended and stable before use.
4. Connect the power cord to the treadmill and then to a suitable power outlet.

Your browser does not support the video tag.

Video 3.1: Official demonstration of unfolding and setting up the WalkingPad C1 for use.

4. OPERATING INSTRUCTIONS

The WalkingPad C1 offers multiple ways to control your workout, including a remote control, smart app, and footstep induction speed control.

4.1 Powering On/Off

- To power on, ensure the treadmill is plugged in and press the power button on the remote control or the main unit (if available).
- To power off, press and hold the power button on the remote or main unit until the display turns off.

4.2 Speed Control

- **Remote Control:** Use the '+' and '-' buttons on the remote to adjust the speed incrementally. The speed range is 0.5 to 3.72 mph.
- **Footstep Induction (Smart Mode):** In smart mode, the treadmill detects your position on the belt. Walking towards the front increases speed, walking towards the middle maintains speed, and walking towards the rear decreases speed.
- **Smart App Control:** Download the official WalkingPad app to your smartphone. Connect the app to your WalkingPad C1 via Bluetooth to access advanced controls, track workout data, and set personalized programs.



Every step counts

Flat & movable to walk
wherever you want!

Image 4.1: A user demonstrating typical operation of the WalkingPad C1 in a home setting.



Image 4.2: The WalkingPad C1 being used with a standing desk, highlighting its suitability for office environments.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your WalkingPad C1. While specific detailed maintenance instructions are typically provided in a separate guide or the product's app, general care includes:

- **Cleaning:** Regularly wipe down the treadmill surface and belt with a damp cloth to remove dust and sweat.

Avoid using abrasive cleaners.

- **Belt Lubrication:** The running belt may require periodic lubrication to reduce friction and wear. Refer to the official WalkingPad app or support resources for specific lubrication instructions and recommended lubricants.
- **Inspection:** Periodically check all screws and bolts to ensure they are tight. Inspect the power cord for any damage.

6. TROUBLESHOOTING

If you encounter issues with your WalkingPad C1, try the following basic troubleshooting steps. For more complex problems, refer to the official WalkingPad app or contact customer support.

- **Treadmill Not Starting:**
 - Ensure the power cord is securely plugged into both the treadmill and a working electrical outlet.
 - Check if the main power switch (if present) is in the 'ON' position.
 - Verify that the remote control has working batteries and is properly paired.
- **Unusual Noises:**
 - Check for any loose parts or foreign objects under the belt.
 - The running belt may require lubrication.
- **Belt Slipping or Sticking:**
 - The belt may need lubrication or adjustment. Consult the official app or support for guidance on belt tensioning.

7. SPECIFICATIONS

Feature	Detail
Brand	WALKINGPAD
Model Name	C1
Product Dimensions (Unfolded)	57"D x 20.7"W x 4.6"H
Folded Size	33.66" x 20.78" x 5.7"
Item Weight	48 Pounds
Maximum Weight Recommendation	220 Pounds
Minimum Speed	0.5 Miles per Hour
Maximum Speed	3.72 Miles per Hour
Maximum Horsepower	2 Horsepower
Running Belt Layers	4-Layer Composite
Noise Level	~40dB
Assembly Required	No

Feature	Detail
Power Source	Corded Electric

8. WARRANTY AND SUPPORT

The WALKINGPAD C1 comes with a 1-year warranty and comprehensive technical support. Customer satisfaction is a priority, and the product is backed by a 30-day no-questions-asked return policy.

- **Warranty Period:** 1 year from the date of purchase.
- **Return Policy:** 30-day no-questions-asked return policy.
- **Customer Service:** 12-hour online customer service is available for assistance.
- For detailed warranty terms, technical support, or to access the smart app, please visit the official WALKINGPAD website or refer to the contact information provided with your product packaging.

Visit the WALKINGPAD
Store