



[Manuals.plus](#) /

> [Avisontek](#) /

> Avisontek Universal Garage Door Opener Remote 893MAX 893LM Instruction Manual

## Avisontek 893LM/893MAX

# Avisontek Universal Garage Door Opener Remote 893MAX 893LM Instruction Manual

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your Avisontek Universal Garage Door Opener Remote (Model 893MAX/893LM). Please read these instructions carefully before use to ensure proper functionality and safety. This remote is designed to operate up to two garage doors.



*Image: The Avisontek 893MAX 893LM Universal Garage Door Opener Remote, a compact black device with two white buttons and a metal keychain ring.*

## COMPATIBILITY

---

The Avisontek Universal Garage Door Opener Remote is compatible with LiftMaster, Chamberlain, and Sears Craftsman garage door openers manufactured since 1993. It supports various learn button colors, including Purple, Red, Orange, Yellow, and Green.

**Important: This remote does NOT support Security+ 3.0 White Learn Button Openers or Dip Switch Openers.**

Refer to the table below to identify your opener's learn button color and corresponding programming steps.



*Image: A compatibility chart showing supported brands (LiftMaster, Chamberlain, Sears Craftsman) and learn button colors (Yellow, Purple, Red, Orange, Green) with their respective manufacturing years.*

## FEATURES

- **Wide Compatibility:** Works with LiftMaster, Chamberlain, and Sears Craftsman garage door openers featuring Purple, Red, Orange, Yellow, or Green learn buttons (since 1993).
- **Rolling Code Encryption:** Generates a new encrypted code with every button press, enhancing security against code-grabbing.
- **Durable Design:** Built with a premium industrial-grade chip and ABS alloy shell for consistent signal transmission, low power consumption, and durability in various conditions.
- **Extended Range:** Offers a 164-foot (50-meter) operating range.
- **Long-Lasting Battery:** Equipped with a pre-installed 240mAh lithium battery for extended use.
- **Two-Button Design:** Features two independently programmable buttons to control up to two garage doors.
- **Portability:** Includes a keychain for convenient carrying.
- **FCC Certified:** Complies with North American safety standards.

# Stable & Trusted

Every Time You Use The Remote Control To Open Your Garage Door, A Unique Security Code Is Generated.



Third-Generation Intelligent Low-Power Chips.



100,000+ Rigorous Tests.



*Image: An illustration highlighting the remote's features, including a 240mAh lithium battery, 100,000+ rigorous tests, ABS alloy shell, 3-year warranty, and FCC certification.*

## SETUP AND PROGRAMMING

Follow these steps to program your Avisontek Universal Garage Door Opener Remote to your garage door opener.

1. **Identify Color of Button:** Locate the opener hanging in your garage and identify the color of the 'Learn' button on the back.
2. **Programming Initiation:** Press and hold both buttons on the remote until the LED stays on.
3. **Choose Code Type:** Choose the button you want to program and press it 1-4 times according to the color of the 'Learn' button:
  - Yellow Learn Button: Press 1 time
  - Purple Learn Button: Press 2 times
  - Orange/Red Learn Button: Press 3 times
  - Green Learn Button: Press 4 times
4. **Confirm:** Press another button on the remote (except the one chosen in step 3) to confirm. The LED will turn off.
5. **Garage Door Opener Learning:** Press the 'Learn' button on the back of the opener. After the 'Learn' LED glows steadily, press and hold the remote button you programmed. When the opener lights flash or clicks 2 times, the remote is programmed.



# UNIVERSAL GARAGE DOOR OPENER REMOTE

## 1 Identify Color of Button

Locate The Opener Hanging In Your Garage And Identify The Color Of The Learn Button On The Back.



## 2 Programming Initiation

Press And Hold 2 Buttons Until The LED Stays On.



## 3 Choose Code Type

Choose The Button You Want To Program And Press It 1-4 Times According To The Color Of The Learn Button.

Learn Button Color	Number of Presses
Yellow	1
Purple	2
Orange Red	3
Green	4



## 4 Confirm

Press Another Button On The Remote (Except The One Chose In Step 3) To Confirm, Then The LED Will Turn Off.

## 5 Garage Door Opener Learning

Press The Learn Button On The Back Of Opener, After The Learn LED Glow Steadily, Press & Hold The Remote Button You Chose In Step 3 Until The Opener Lights Flash Or 2 Clicks Are Heard, Then The Remote Is Programmed.



**WARM TIPS** Try Instructions For A Different Color Of learn Button When This Remote Cannot Work With Your Garage Door Opener.

Image: A visual guide illustrating the 5-step programming process for the universal garage door opener remote, including identifying the learn button, initiating programming, selecting code type, confirming, and final learning with the opener.

## Programming Video Guide

Your browser does not support the video tag.

Video: An official Avisontek video demonstrating the programming steps for the 893MAX Universal Garage Door Remote with a Chamberlain garage door opener.

## OPERATING INSTRUCTIONS

Once programmed, simply press the desired button on your Avisontek remote to open or close your garage door. The remote has an effective range of up to 164 feet (50 meters).

# VERSATILE AND EASY TO USE

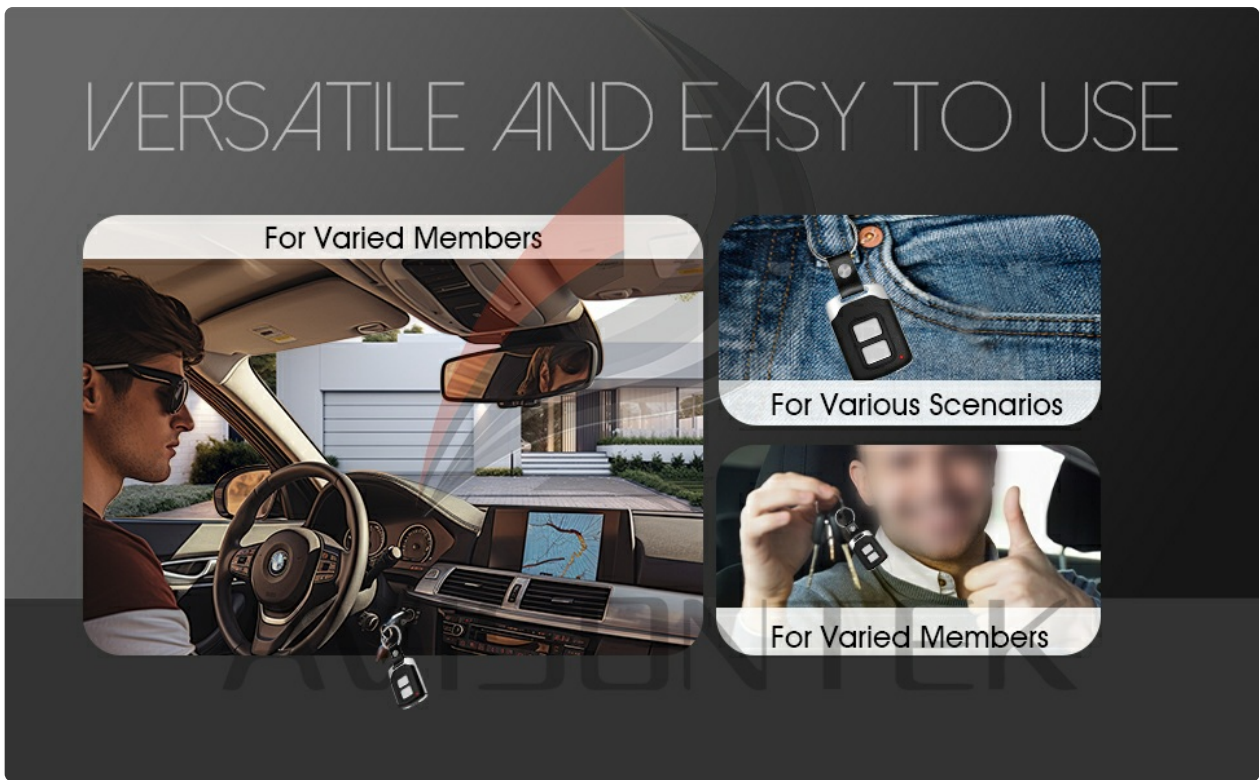


Image: A person operating the garage door opener remote from inside a car, demonstrating the remote's effective range.

## MAINTENANCE

The remote comes with a pre-installed 240mAh lithium battery (CR2032). If the remote stops working or its range decreases significantly, the battery may need replacement.

### Battery Replacement

1. Carefully open the remote casing.
2. Remove the old CR2032 lithium battery.
3. Insert a new CR2032 lithium battery, ensuring correct polarity.
4. Close the remote casing securely.

## TROUBLESHOOTING

If you encounter issues with your remote, try the following solutions:

Problem	Solution
---------	----------

Problem	Solution
Remote cannot program to my garage door opener.	<ul style="list-style-type: none"> <li>• Ensure your garage door opener is manufactured by The Chamberlain Group and has a Yellow, Purple, Orange, Red, or Green Learn button.</li> <li>• Be sure to press any button, other than the remote button for confirmation after performing step 3.</li> <li>• Ensure the Learn LED glows steadily when performing step 5.</li> <li>• Move closer to your garage door opener before you start to program. Otherwise, programming may fail.</li> <li>• Try to program the remote using the other button.</li> <li>• If the opener's memory is full, clear it and try programming again.</li> </ul>
Remote stops working after a few days.	<ul style="list-style-type: none"> <li>• Replace the CR2032 Lithium battery.</li> <li>• Try to long press the remote button and wait for the opener to engage before letting go.</li> </ul>

## SPECIFICATIONS

Feature	Detail
Brand	Avisontek
Model Name	Universal Garage Door Opener Remote
Model Number	893LM/893MAX
Connectivity Technology	Radio Frequency
Button Quantity	2
Maximum Range	164 Feet (approx. 50 meters)
Battery Type	Lithium (CR2032, included)
Shell Material	ABS
Color	Black
Code Type	Security+ 2.0 Rolling Code

# ROBUST ABS ALLOY MATERIAL




**ABS** Alloy For Durability And Drop Resistance.



*Image: A diagram showing the dimensions of the remote (1.18 x 1.57 x 0.39 inches) and key specifications like working range, frequency, channel, battery model, shell material, product weight, warranty, color, and code type.*

## WARRANTY AND SUPPORT

Your Avisontek Universal Garage Door Opener Remote comes with a 3-year warranty, ensuring long-term peace of mind. For any technical assistance or inquiries, please contact Avisontek customer support.

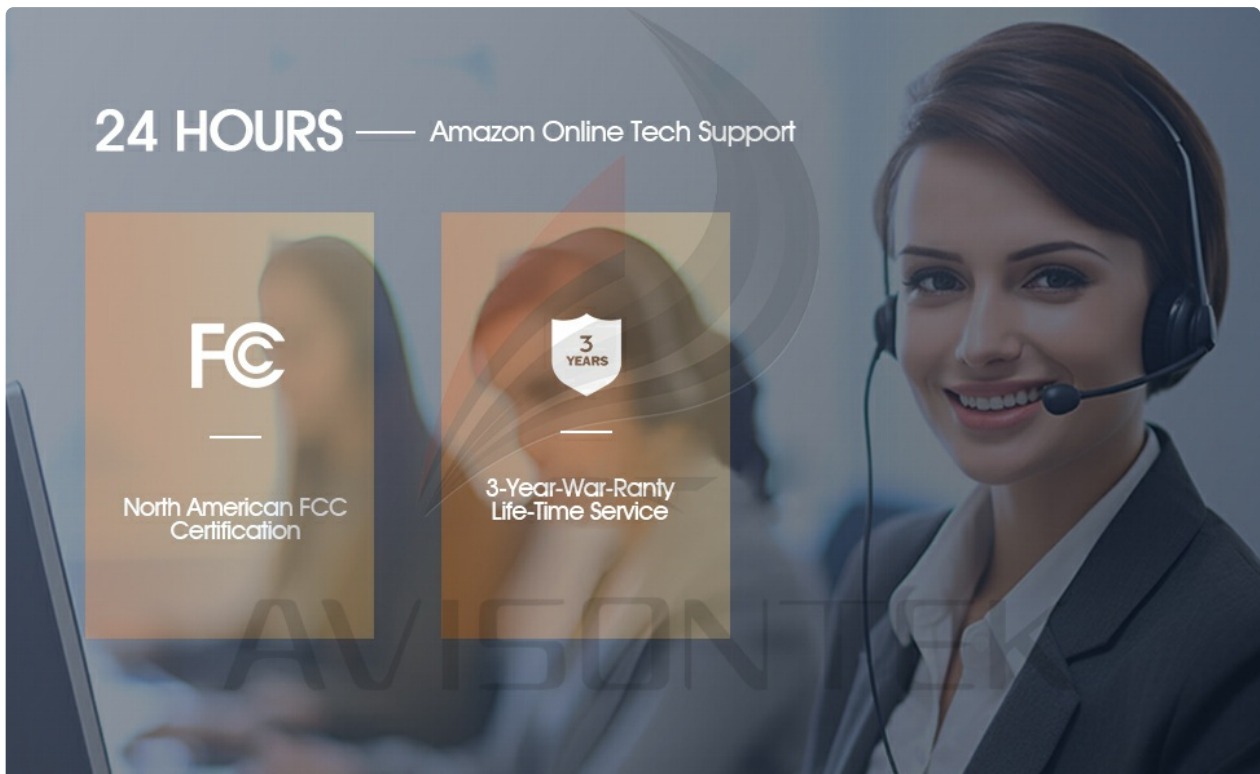

*Image: An image depicting customer service representatives, highlighting 24-hour online tech support, FCC certification, and a 3-year warranty.*

