

- Manuals.plus /
- › Mefine /
 - › Mefine 132cm Reversible Ceiling Fan with LED Light and Remote Control (Model 60005)

Mefine 60005

Mefine 132cm Reversible Ceiling Fan with LED Light and Remote Control

Model: 60005

INTRODUCTION

Thank you for choosing the Mefine 132cm Reversible Ceiling Fan with LED Light. This product is designed to provide efficient air circulation and versatile lighting for your indoor spaces. Featuring a quiet DC motor, reversible blades for all-season use, an integrated dimmable LED light with adjustable color temperature, and convenient remote control operation, this ceiling fan enhances comfort and ambiance in your home. Please read this manual thoroughly before installation and use to ensure proper function and safety.



Image: The Mefine 132cm Reversible Ceiling Fan with LED Light and Remote Control, featuring light wood blades and a white motor housing.

SETUP AND INSTALLATION

This section provides step-by-step instructions for installing your Mefine ceiling fan. Ensure all components are present and undamaged before beginning. Installation is designed to be straightforward, typically taking around 30 minutes.

1. Unpacking and Component Check

- Carefully remove all parts from the packaging.
- Verify that all components listed in the parts diagram are included and free from damage.
- Keep packaging materials until installation is complete.

2. Mounting the Ceiling Bracket

- Turn off power at the main circuit breaker.

- Securely attach the mounting bracket to a ceiling joist or a suitable electrical junction box capable of supporting the fan's weight (approximately 6.3 kg). Use appropriate screws and anchors for your ceiling type.
- For sloped ceilings, use the included 15° adapter if necessary.

3. Wiring the Fan

- Connect the fan's electrical wires to your household wiring according to local electrical codes. Typically, this involves connecting live, neutral, and ground wires.
- Ensure all connections are secure and insulated.
- The control box for the remote receiver needs to be carefully placed within the canopy.

4. Assembling and Attaching the Fan Body

- Attach the downrod to the motor housing.
- Carefully lift the fan assembly and hang it onto the mounting bracket.
- Secure the canopy to cover the wiring and mounting bracket.

5. Installing the Fan Blades

The fan features reversible blades, allowing you to choose between a light wood finish or a white finish to match your decor.

- Select your desired blade finish.
- Attach each blade to the blade arms using the provided screws.
- Secure the blade assemblies to the motor housing. Ensure all screws are tightened evenly to prevent wobbling.

Deux Styles, Une Combinaison Parfaite



Image: Close-up of the fan blades, showing the reversible design with a white side and a light wood side.


6. Installing the LED Light Panel

- Connect the LED light panel wires to the fan's light kit wires.
- Secure the LED light panel to the bottom of the fan motor housing.
- Attach the light cover.

7. Final Checks

- Ensure all connections are secure and all screws are tightened.
- Restore power at the circuit breaker.
- Test the fan and light functions using the remote control.

Dimensions du Produit

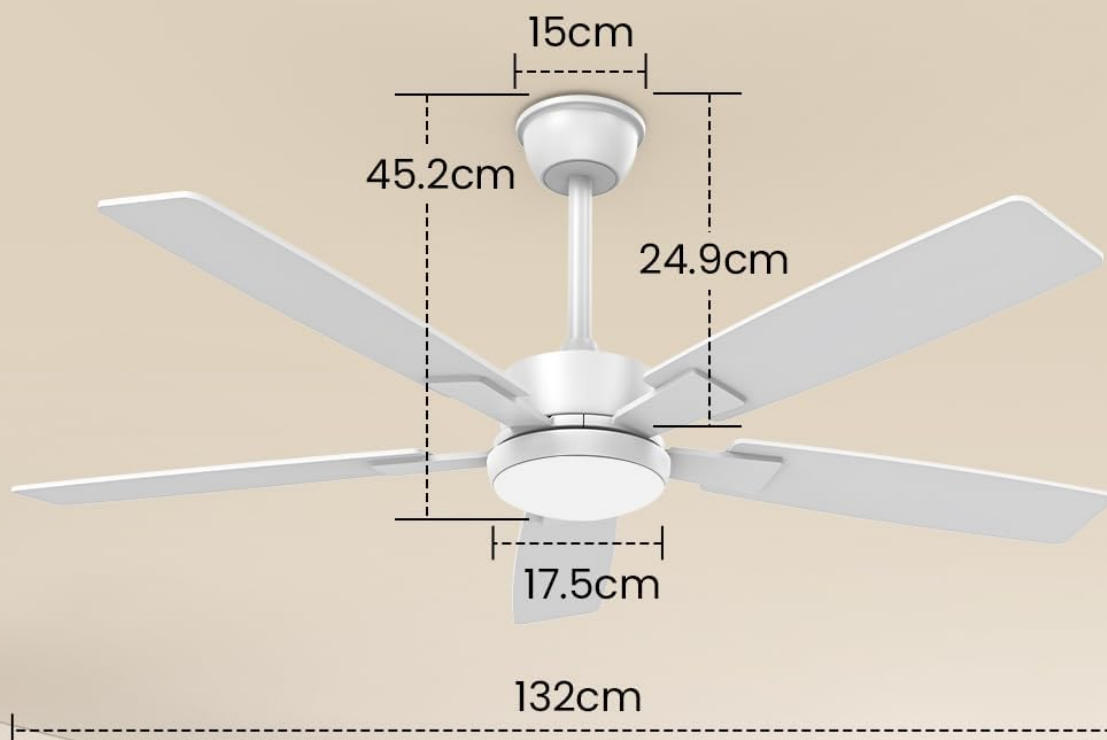

Taille de la Pièce

18-25 m²

12.7cm

25.4cm

Image: A technical diagram illustrating the dimensions of the ceiling fan, including blade span (132cm) and drop from ceiling.

OPERATING INSTRUCTIONS

Your Mefine ceiling fan is operated via the included remote control, offering convenient access to all functions.

Remote Control Functions

- **Power On/Off:** Press the power button to turn the fan and light on or off.
- **Fan Speed Control:** Use the speed buttons to cycle through 6 fan speeds.
- **Light On/Off:** Separate button to control the LED light independently.
- **Light Color Temperature Adjustment:** Cycle through three color temperatures: 3000K (warm amber), 4500K (natural light), and 6500K (cool white). The fan remembers your last setting.
- **Light Dimming:** Adjust the brightness of the LED light continuously from 20% to 100%.
- **Timer Function:** Set the fan to automatically turn off after 1, 2, or 4 hours.
- **Summer/Winter Mode (Reversible Motor):** Switch between downward airflow for cooling in summer and upward airflow for heat distribution in winter.

Créez Votre Atmosphère Lumineuse Préférée



Image: The remote control displaying options for adjusting light color temperature (3000K, 4000K, 6500K) and dimming levels.

Fan Speed Settings

The fan offers 6 precise speeds to suit your comfort needs:

- **Speeds 1-2:** Gentle breeze, ideal for quiet environments or light air circulation.
- **Speeds 3-4:** Natural wind, suitable for moderate cooling.
- **Speeds 5-6:** Powerful cooling, for maximum airflow in warmer conditions.

Profitez d'un Air Frais dans Chaque Coin

Flux d'Air Grand Angle **360°** Jusqu'à **4580** CFM



6 Vitesses. Contrôle Parfait



Niveaux 1-2

Vent Agréable



Niveaux 3-4

Vent Naturel



Niveaux 5-6

Air Rafrâchissant



Image: A Mefine ceiling fan installed in a modern living room, illustrating the wide-angle airflow distribution.

Reversible Motor Function (Summer/Winter)

The fan's DC motor allows for reversible blade rotation, optimizing comfort year-round:

- **Summer Mode:** Blades rotate counter-clockwise, pushing air downwards to create a cooling breeze.
- **Winter Mode:** Blades rotate clockwise, drawing air upwards to circulate warm air trapped near the ceiling, helping to distribute heat evenly.

Confort Toutes Saisons, Tout au Long de l'Année



Image: A split image demonstrating the fan's reversible function, with blue arrows indicating downward airflow for summer cooling and orange arrows indicating upward airflow for winter heat distribution.

Quiet Operation and Timer

The fan operates at an ultra-low noise level of 25 dB, ensuring a peaceful environment. The integrated timer allows you to set the fan to turn off automatically after 1, 2, or 4 hours, ideal for use during sleep.

**Fonctionne Silencieusement
pour des Nuits
Reposantes**



Image: A couple sleeping soundly, illustrating the fan's quiet operation (25 dB) and timer function for undisturbed rest.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Mefine ceiling fan.

Cleaning

- **Before Cleaning:** Always turn off the power to the fan at the main circuit breaker to prevent electric shock.
- **Fan Blades:** Wipe the blades with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- **Motor Housing:** Clean the motor housing with a soft, dry cloth.
- **Light Cover:** Remove the light cover and wash it with mild soap and water if necessary. Ensure it is completely dry before reattaching.

General Care

- Periodically check all screws and connections to ensure they are tight.
- Do not bend the blade holders when cleaning or performing maintenance.
- No lubrication is needed for the motor.

TROUBLESHOOTING

If you encounter any issues with your Mefine ceiling fan, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or faulty.	Check circuit breaker and wall switch; Verify all wire connections are secure; Replace remote control batteries (AAA).
Light does not work	No power to the light; Loose wire connections; Faulty LED panel.	Check light switch and circuit breaker; Verify light kit wire connections; Contact support if LED panel is suspected faulty.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Ensure blades are balanced (use a balancing kit if necessary); Verify mounting bracket is securely fastened to the ceiling.
Remote control not responding	Low or dead batteries; Remote not paired; Obstruction between remote and receiver.	Replace batteries (2x AAA); Refer to pairing instructions in the full manual (if applicable); Ensure clear line of sight to the fan's receiver.
Fan is noisy	Loose screws; Motor issues; Blades hitting an obstruction.	Check and tighten all screws; Ensure no obstructions are in the fan's path; If motor noise persists, contact support.

SPECIFICATIONS

Detailed technical specifications for the Mefine 132cm Reversible Ceiling Fan (Model 60005).

Feature	Specification
Brand	Mefine
Model Number	60005
Product Dimensions (L x W x H)	45L x 34W x 60H cm (Note: This seems to be package dimensions, actual fan span is 132cm)
Fan Size	132 cm (52 inches)

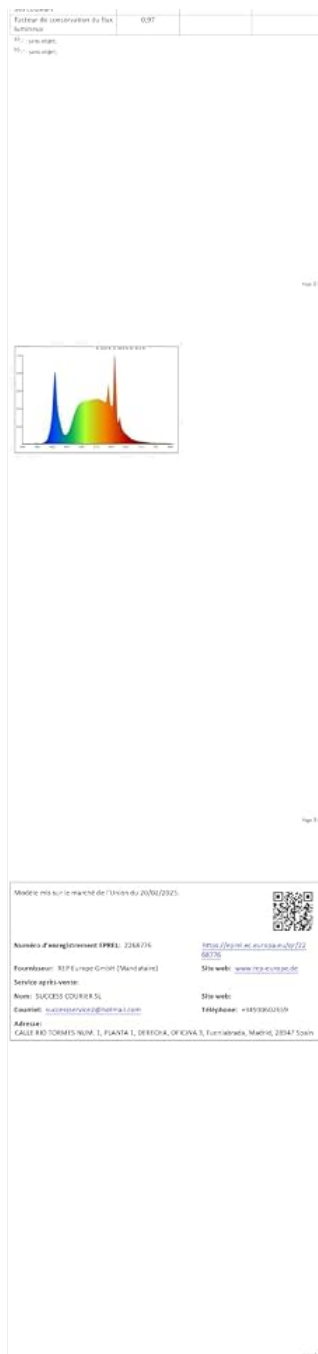


Image: EU Energy Label for Model 60005, indicating an energy efficiency class D and 24 kWh/1000h consumption. For more details, visit [EPREL Database](#).

WARRANTY AND SUPPORT

Mefine is committed to providing quality products and reliable customer service.

Warranty Information

- **1-Year General Warranty:** Covers general product defects and malfunctions.
- **3-Year Warranty:** Specifically covers the fan blades against manufacturing defects.
- **5-Year Warranty:** Covers the DC motor for long-term reliability.

These warranties cover defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.



Image: An illustration detailing Mefine's service and support, including 1-year general, 3-year fan blade, and 5-year DC motor warranties, along with 24/7 support.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Mefine customer support through the retailer's platform or the contact information provided with your purchase. Our support team is available to assist you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F2HNPY6W>

More documents and user manuals: <https://manuals.plus/>