

Bcofo 6147

Bcofo Wireless Mobile Game Controller (Model 6147) Instruction Manual

Your guide to setting up and using your new gaming controller.

1. INTRODUCTION

Thank you for choosing the Bcofo Wireless Mobile Game Controller. This versatile gamepad is designed to enhance your gaming experience across multiple platforms, including iOS, Android, Nintendo Switch, and PC. Featuring advanced Hall Effect triggers, programmable buttons, vibrant RGB lighting, and a robust battery, this controller provides precise control and immersive feedback for all your favorite games.

2. KEY FEATURES

- **Multi-Platform Compatibility:** Easily switch between iOS, Android, Switch, and PC modes. Supports iPhone, iPad, Mac, Apple Arcade MFi Games, Android mobile smart phones, Android HID Games, tablets, Switch/Lite/OLED, and laptops via Bluetooth. Wired connection is available for PC (Windows 7/8/10/11/Steam Deck).
- **Hall Effect Triggers:** Experience smoother and more accurate gameplay with advanced Hall Effect sensors, providing a competitive edge in fast-paced action games.
- **2 Programmable Buttons (N1/N2):** Customize complex skill operations by programming up to 30-second combinations using the 21 available buttons (A/B/X/Y, etc.).
- **Cool RGB Lighting:** Personalize your gaming setup with 8 lights and 1 colorful gradient. Choose from 4 lighting modes (color, wave, breathing, static) and 9 different RGB colors. Toggle RGB lights on/off by pressing and holding the 'RGB' button.
- **Six Gyro Sensor & Dual Vibration:** The 6-Axis motion control allows rapid movement detection for quick responses. Dual vibration provides realistic feedback for impacts, explosions, and collisions.
- **3 Turbo Speeds:** Enhance your action and arcade game experience with adjustable turbo speeds of 5, 12, or 20 shots per second.

- **Long-Lasting Battery:** The built-in 1200mAh high-performance battery provides up to 15 hours of playtime on a 2-3 hour charge. The controller can be used while charging.
- **Integrated Phone Clip:** Securely attach your smartphone to the controller for mobile gaming. The clip is designed for easy attachment and removal.



Image: The Bcofo Mobile Gaming Controller showcasing its RGB lighting effects.



Image: The Bcofo controller with a smartphone attached via the integrated phone clip, demonstrating mobile gaming.

3. PACKAGE CONTENTS

Please ensure all items are present in your package:

- Bcofo Wireless Mobile Game Controller
- Detachable Phone Clip
- USB Charging Cable
- User Manual

4. SETUP AND CONNECTION

The controller features a mode switch button on the back to select the appropriate platform. After selecting the mode, press and hold the 'HOME' button to initiate pairing.

4.1. Attaching the Phone Clip

The phone clip can be easily inserted into the slot on the top of the controller. It extends and retracts freely to accommodate various phone sizes and can be disassembled effortlessly when not in use. Ensure the clip is securely attached before placing your phone.

Your browser does not support the video tag.

Video: Demonstration of attaching and detaching the phone clip, and its secure hold during gameplay. This video also shows the control buttons demo and mode switching.

4.2. Connecting to iOS Devices (iPhone/iPad/Mac)

1. On the back of the controller, slide the mode switch to the 'iOS' position.
2. Short press the 'HOME' button for a few seconds until the LED lights flash quickly, indicating pairing mode.
3. On your iOS device, go to **Settings > Bluetooth**.
4. Select the Bluetooth name: "**Xbox Wireless Controller**" to pair.
5. Once connected, the LED lights will stop flashing and remain solid.

Your browser does not support the video tag.

Video: Step-by-step guide on how to connect the Bcofo controller to an iOS device.

4.3. Connecting to Android Devices

1. On the back of the controller, slide the mode switch to the 'Android' position.
2. Short press the 'HOME' button for a few seconds until the LED lights flash quickly, indicating pairing mode.
3. On your Android device, go to **Settings > Bluetooth**.
4. Select the Bluetooth name: "**6147 Gamepad**" to pair.
5. Once connected, the LED lights will stop flashing and remain solid.

Your browser does not support the video tag.

Video: Step-by-step guide on how to connect the Bcofo controller to an Android device.

4.4. Connecting to Nintendo Switch

1. On the back of the controller, slide the mode switch to the 'NS' (Nintendo Switch) position.
2. On your Nintendo Switch, go to **System Settings > Controllers and Sensors > Change Grip/Order**.
3. Press and hold the 'HOME' button on the controller until the LED lights flash quickly.
4. The Switch will detect the controller and pair automatically.

4.5. Connecting to PC (Wired)

1. On the back of the controller, slide the mode switch to the 'PC' position.
2. Connect the controller to your PC using the provided USB cable.
3. The PC should automatically recognize the controller. No additional drivers are typically required for Windows 7/8/10/11 or Steam Deck.

5. OPERATING INSTRUCTIONS

5.1. Programmable Back Buttons (N1/N2)

The controller features two programmable back buttons, N1 and N2, allowing you to map complex button sequences or single button presses for quick execution.

1. Press the 'SET' button on the back of the controller. The indicator light will start flashing.
2. Press either N1 or N2.
3. Press the button(s) or sequence of buttons you wish to program (up to 30 seconds).
4. Press the 'SET' button again to save the programming. The indicator light will turn off.

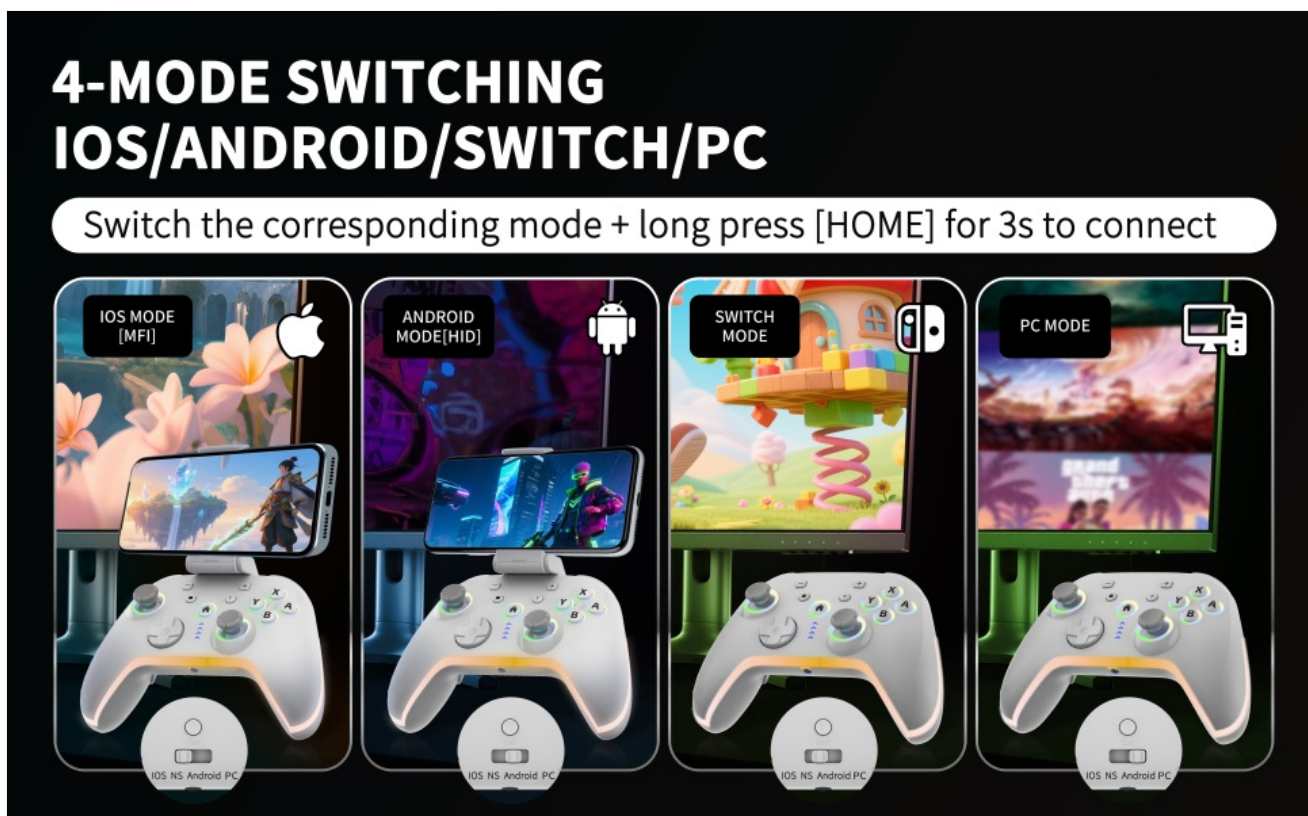


Image: Close-up of the controller's back, showing the N1 and N2 programmable buttons and the mode switch.

5.2. RGB LED Lighting Control

The controller is equipped with customizable RGB LED lighting.

- To cycle through 9 different RGB colors, press the 'RGB' button on the back of the gamepad.
- To switch between 4 lighting modes (color, wave, breathing, static), press the 'RGB' button repeatedly.
- To turn the RGB lights on or off, press and hold the 'RGB' button for a few seconds.

5.3. Turbo Speed Adjustment

Activate turbo function for rapid button presses in action and arcade games.

1. Press and hold the 'Turbo' button (T).

2. While holding 'Turbo', press the button you wish to apply turbo to (e.g., A, B, X, Y).
3. To adjust turbo speed (5/12/20 shots per second), press and hold 'Turbo' and move the right joystick up or down.
4. To clear turbo for a specific button, press and hold 'Turbo' and press the assigned button again.
5. To clear all turbo settings, press and hold 'Turbo' and press the 'HOME' button.

6. MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the controller or subjecting it to strong impacts.
- Charge the controller regularly to maintain battery health, even if not in frequent use.

7. TROUBLESHOOTING

7.1. Controller Not Connecting

- Ensure the correct mode (iOS/Android/NS/PC) is selected using the switch on the back of the controller.
- Make sure the controller is charged. Connect it to a power source using the USB cable.
- Verify Bluetooth is enabled on your device and that the controller is in pairing mode (LEDs flashing quickly).
- Forget the device in your device's Bluetooth settings and attempt to pair again.
- For PC wired connection, ensure the USB cable is securely connected and try a different USB port.

7.2. Buttons or Joysticks Not Responding

- Check if the controller is properly connected to your device.
- Restart the controller and your gaming device.
- Ensure the game you are playing supports external controllers.
- Perform a factory reset by pressing the 'Reset' button on the back of the controller (a small pin might be needed).

7.3. RGB Lights Not Working

- Press the 'RGB' button to cycle through modes and colors.
- Press and hold the 'RGB' button to ensure the lights are not turned off.
- Ensure the controller has sufficient battery charge.

8. SPECIFICATIONS

Model Number	6147
Connectivity	Wireless (Bluetooth), Wired (USB)
Compatibility	iOS, Android, Nintendo Switch, PC (Windows 7/8/10/11, Steam Deck)
Battery Capacity	1200mAh
Charging Time	2-3 hours
Playing Time	Up to 15 hours

Weight	11.3 ounces (approx. 320g)
Dimensions	6.38 x 4.57 x 2.83 inches (approx. 16.2 x 11.6 x 7.2 cm)

9. WARRANTY AND SUPPORT

For any questions or issues regarding your Bcofo Wireless Mobile Game Controller, please refer to the seller's return policy or contact customer support through your purchase platform. Keep your proof of purchase for warranty claims, if applicable.