

## Feelworld FW759 Pro

# FEELWORLD FW759 Pro 7 Inch Touch Screen Field Monitor User Manual

## 1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your FEELWORLD FW759 Pro 7-inch Touch Screen Field Monitor. Please read this manual thoroughly before using the product to ensure proper function and to extend its lifespan. Keep this manual for future reference.

## 2. PRODUCT OVERVIEW

### 2.1 Key Features

The FEELWORLD FW759 Pro is a portable 7-inch touch screen field monitor designed for professional HDV and HD SLR cameras. It combines portability with advanced functionality to enhance your shooting experience.

- **7-inch Touch Screen Display:** Features an innovative touch interface for exceptional control, a 7-inch IPS wide-angle panel, and an ultra-thin 17mm design. Full HD 1280 x 800 pixel resolution with 400 nits brightness, 1000:1 contrast ratio, and 16:10 aspect ratio.
- **Wide Viewing Angle:** The IPS panel offers a 178°/178° wide viewing angle, ensuring accurate, consistent, and bright images from any perspective.

### INTELLIGENT FULL TOUCH CONTROL



The bottom of the screen  
Slide up to call out shortcut menu



The left half of the screen  
Slide up/down to adjust the backlight brightness



The right half of the screen  
Slide up/down to adjust the volume



Image: IPS 178° wide viewing angle for consistent image quality.

- **Rich Colors and High Quality Display:** The monitor provides precise and vibrant color reproduction for critical monitoring.

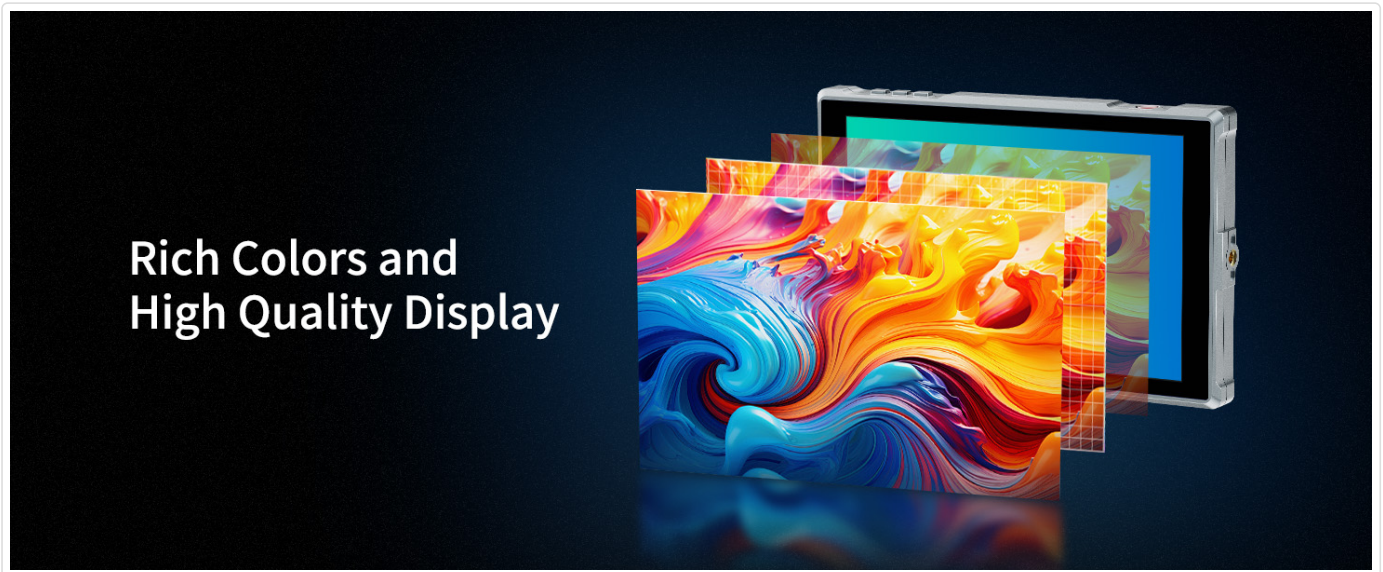


Image: Representation of rich colors and high-quality display.

- **4K HDMI & AV Input:** Supports 4K 30Hz signal for sharp and smooth image reproduction, compatible with modern DSLR cameras. Includes AV interface and 3.5mm headphone jack for audio monitoring.
- **Vertical Screen Marker:** Features various aspect ratio markers, including a 9:16 vertical marker, ideal for vertical content platforms.
- **Versatile Compatibility:** Two standard 1/4" threads (bottom and right) for easy connection to cameras or other devices. Includes a mini hot shoe adapter for quick mounting.
- **Slim and Lightweight Design:** Only 22mm thick and weighing 300g, designed for portability and functionality.

## 2.2 What's in the Box

The FEELWORLD FW759 Pro package includes the following items:

- 1x FW759 Pro Monitor
- 1x F750 Battery
- 1x Sunshade
- 1x Mini Hot Shoe Mount + Hex Wrench
- 1x USB-A to USB-C Adapter
- 1x Management Tie
- 1x Carrying Bag
- 1x Quick Start Guide
- 1x Micro HDMI Cable
- 1x HDMI Cable

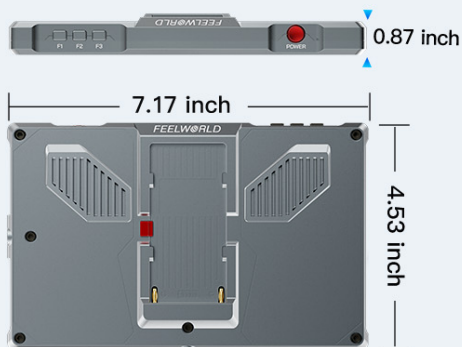


Image: Contents of the FEELWORLD FW759 Pro package, showing the monitor, F750 battery, sunshade, mini hot shoe mount, USB adapter, management tie, carrying bag, quick start guide, Micro HDMI cable, and HDMI cable.

## 2.3 Sunshade Installation

The included sunshade helps to improve screen visibility in bright outdoor conditions. Attach the sunshade to the monitor by aligning its clips with the grooves on the monitor's frame and securing it in place.



Image: Monitor equipped with a sunshade for improved outdoor visibility.

## 3. SETUP

### 3.1 Powering the Monitor

The FW759 Pro offers versatile power options:

- **NP-F Series Battery:** Attach a compatible NP-F series battery to the battery plate on the back of the monitor.
- **DC 12V Input:** Connect the included DC power adapter to the "DC IN 12V" port.
- **Type-C 5V Input:** Use a 5V/2A Type-C power supply for convenient charging or continuous power.



Image: Versatile power options for the monitor, including NP-F series battery, DC 12V input, and Type-C 5V input.

### 3.2 Mounting the Monitor

The monitor features multiple mounting points for flexible positioning:

- **1/4" Screw Threads:** Two standard 1/4" screw threads are located on the bottom and right side of the monitor.
- **Mini Hot Shoe Mount:** Use the included mini hot shoe mount to attach the monitor to your camera's hot shoe or other compatible accessories.

#### 4K HDMI & AV Input

4K HDMI  
3840X2160p (30/29.97/25/24/23.98)  
4096X2160p(24Hz)



Image: Multiple mounting points on the monitor, showing its flexibility for various monitoring setups.

### 3.3 Connecting to a Camera

Connect your camera to the monitor using the appropriate cable:

- **HDMI Input:** Use the included HDMI or Micro HDMI cable to connect your camera's HDMI output to the monitor's HDMI IN port. The monitor supports 4K HDMI signals (3840x2160p at 30/29.97/25/24/23.98Hz and 4096x2160p at 24Hz).
- **AV Input:** For devices with AV output, connect to the monitor's AV port.
- **Audio Monitoring:** Connect headphones to the 3.5mm earphone slot for audio monitoring.

#### Rich Auxiliary Functions

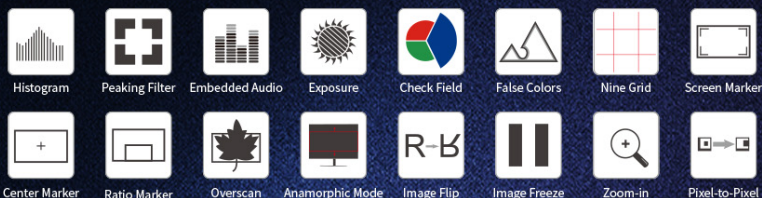


Image: Input and output ports on the monitor, highlighting 4K HDMI and AV inputs.

## 4. OPERATING INSTRUCTIONS

## 4.1 Touch Screen Control

The FW759 Pro features an intuitive full touch control interface:

- **Shortcut Menu:** Slide up from the bottom of the screen to access the shortcut menu.
- **Brightness Adjustment:** Slide up/down on the left half of the screen to adjust backlight brightness.
- **Volume Adjustment:** Slide up/down on the right half of the screen to adjust the volume.

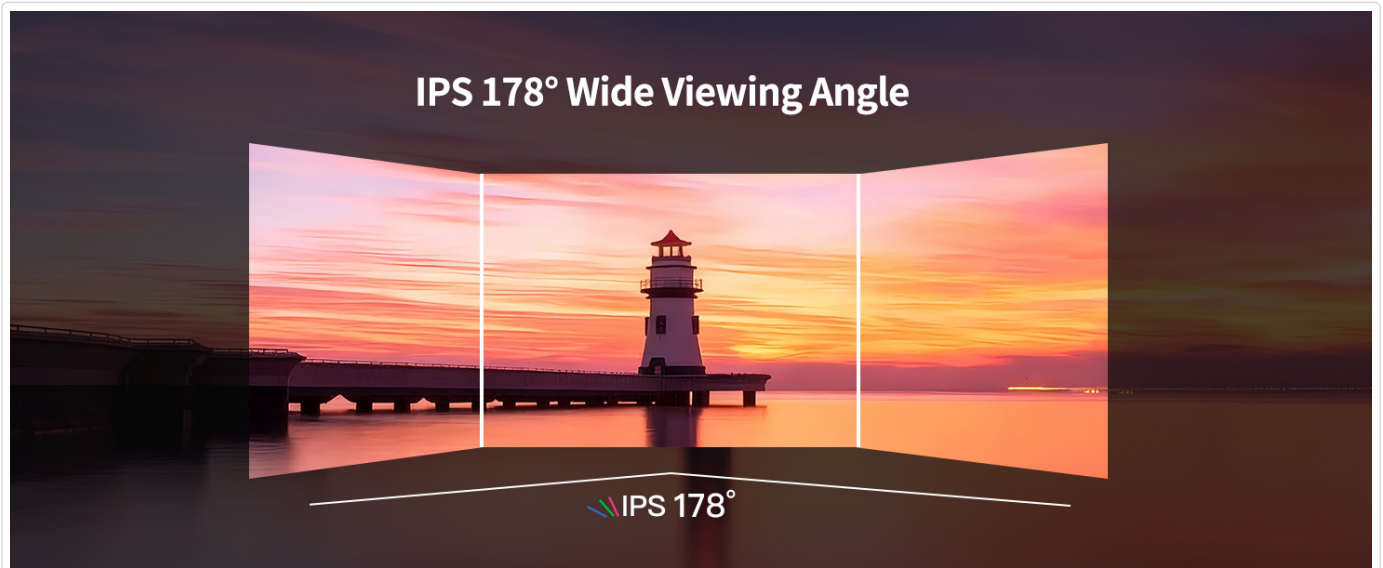


Image: Intelligent full touch control gestures for the monitor.

## 4.2 Professional Functions

The monitor includes various professional auxiliary functions to assist with your shooting:

- **Histogram:** Displays the tonal distribution of your image.
- **Peaking Filter:** Highlights sharp edges to assist with focus.
- **Embedded Audio:** Monitors audio levels.
- **Exposure:** Helps evaluate exposure levels.
- **Check Field:** Assists in color calibration.
- **False Colors:** Provides an objective way to set exposure.
- **Nine Grid:** Helps with composition using the rule of thirds.
- **Screen Marker:** Customizable frame markers.
- **Center Marker:** Displays a crosshair in the center of the screen.
- **Ratio Marker:** Provides various aspect ratio guides.
- **Overscan:** Adjusts the display area.
- **Anamorphic Mode:** De-squeezes anamorphic footage.
- **Image Flip:** Flips the image horizontally or vertically.
- **Image Freeze:** Freezes the current frame.
- **Zoom-in:** Magnifies a portion of the image for critical focus.
- **Pixel-to-Pixel:** Displays the image at its native resolution without scaling.



Image: Professional functions menu with icons for various monitoring tools.

### 4.3 Using the 9:16 Vertical Screen Marker

The FW759 Pro includes a dedicated 9:16 vertical screen marker, useful for composing shots for vertical video platforms like TikTok and Instagram. Access this feature through the Ratio Marker menu and select the 9:16 option.



Image: The 9:16 vertical screen marker in use, demonstrating its application for vertical video content.

## 5. MAINTENANCE

### 5.1 Cleaning the Monitor

- Use a soft, lint-free cloth to gently wipe the screen and body of the monitor.
- For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the screen and finish.

### 5.2 Storage

- When not in use, store the monitor in a cool, dry place, away from direct sunlight and extreme temperatures.
- Use the included carrying bag to protect the monitor from dust and scratches.
- Remove the battery if the monitor will not be used for an extended period to prevent battery drain or leakage.

## 6. TROUBLESHOOTING

If you encounter issues with your FEELWORLD FW759 Pro monitor, refer to the following common problems and solutions:

| Problem                             | Possible Cause                                                                               | Solution                                                                                                                                                  |
|-------------------------------------|----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| No image on screen                  | Monitor not powered on; incorrect input selected; faulty HDMI/AV cable; camera output issue. | Ensure monitor is powered and battery is charged. Check cable connections. Verify camera output settings. Select correct input source on monitor.         |
| Image flickering or distorted       | Loose cable connection; incompatible resolution/frame rate; electromagnetic interference.    | Secure all cable connections. Ensure camera output resolution and frame rate are supported by the monitor. Move away from strong electromagnetic sources. |
| Touch screen unresponsive           | Software glitch; screen dirty; extreme temperature.                                          | Restart the monitor. Clean the screen with a soft cloth. Ensure operating within recommended temperature range.                                           |
| No audio output from headphone jack | Volume too low; headphones not properly connected; camera not sending audio.                 | Increase monitor volume. Ensure headphones are fully plugged in. Check camera's audio output settings.                                                    |

## 7. SPECIFICATIONS

Detailed technical specifications for the FEELWORLD FW759 Pro monitor:

- **Display Size:** 7 inches
- **Panel Type:** IPS
- **Resolution:** 1280 x 800 pixels
- **Brightness:** 400 cd/m² (nits)
- **Contrast Ratio:** 1000:1
- **Viewing Angle:** 178° H/V
- **Aspect Ratio:** 16:10
- **Input Ports:** HDMI, AV, Type-C (5V power)
- **Output Ports:** 3.5mm Headphone Jack
- **HDMI Support:** 4K (3840x2160p @ 30/29.97/25/24/23.98Hz, 4096x2160p @ 24Hz)
- **Power Input:** DC 12V, Type-C 5V, NP-F Series Battery
- **Dimensions:** Approximately 18.2 cm (7.17 inches) x 11.5 cm (4.53 inches) x 2.2 cm (0.87 inches)
- **Weight:** Approximately 300g
- **Manufacturer:** Zhangzhou Seetec Optoelectronic Co.,Ltd
- **Model Number:** FW759 Pro

## 9:16 Vertical Screen Marker



Image: Slim and lightweight design with key dimensions.

### 8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Feelworld website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

#### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

##### Name

Anonymous

##### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

##### Question

Example: How do I reset this device or fix this error?

##### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

