

CIUZL C94

CIUZL C94 Dog Training Collar User Manual

Model: C94 | Brand: CIUZL

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your CIUZL C94 Dog Training Collar. This device is designed to assist in training dogs through various modes including beep, vibration, and static stimulation, helping to correct undesirable behaviors and reinforce positive ones. Please read this manual thoroughly before operation to ensure proper usage and the well-being of your pet.

2. IMPORTANT SAFETY INFORMATION

- **Not for Aggressive Dogs:** Do not use this product on aggressive dogs. If your dog exhibits aggressive behavior, consult a professional dog trainer or veterinarian.
- **Age and Weight Suitability:** This collar is suitable for dogs weighing 10-120 pounds with a neck circumference of 6-26 inches. Ensure your dog meets these criteria.
- **Collar Fit:** The collar must fit snugly but not too tightly. You should be able to fit two fingers comfortably between the collar and your dog's neck. A loose fit can cause inconsistent stimulation and skin irritation.
- **Duration of Wear:** Do not leave the collar on your dog for more than 12 consecutive hours. Prolonged wear can lead to skin irritation or pressure sores.
- **Skin Checks:** Regularly inspect your dog's neck for any signs of skin irritation, redness, or sores. If irritation occurs, discontinue use and consult a veterinarian.
- **Supervised Use:** Always supervise your dog during training sessions. This collar is a training aid, not a substitute for direct supervision.
- **Avoid Over-Correction:** Use stimulation modes judiciously. Over-correction can cause stress or fear in your dog.

- **Water Safety:** The receiver is IPX7 waterproof, but the remote control is only splash-proof. Keep the remote away from water.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Remote Control (x1)
- Receiver (x1)
- Charging Cable (x1)
- Short Metal Probes (x2)
- Long Metal Probes (x2)
- Short Silicone Covers (x2)
- Long Silicone Covers (x2)
- Test Bulb Tool (x1)
- Wrist Strap (x1)
- User Manual (x1)



Figure 3.1: Package Contents. All items are clearly laid out for identification.

4. PRODUCT FEATURES

- **Three Training Modes:** Features Beep (Level 1-8), Vibration (Level 1-16), and Safety Shock (Level 1-16) for versatile training.

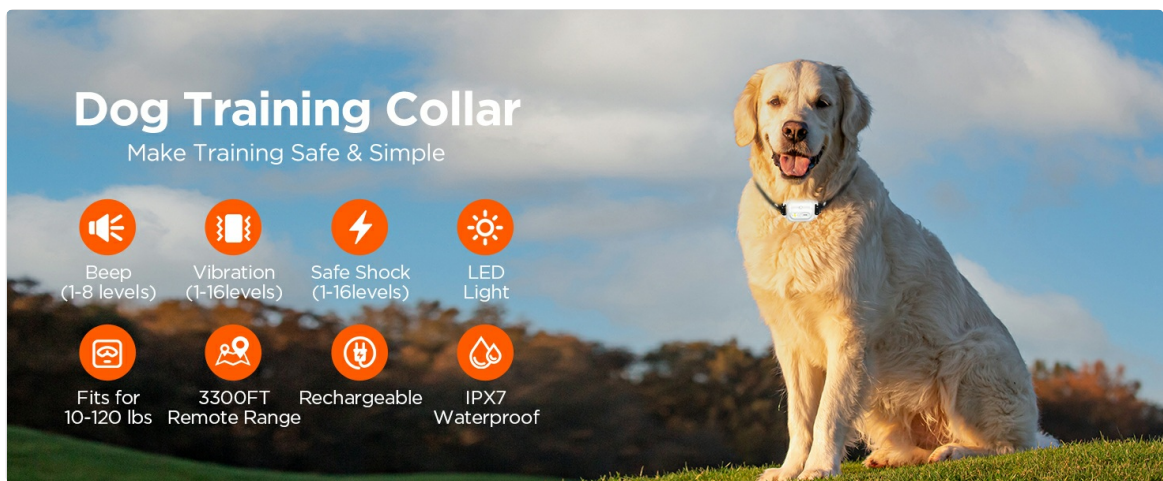


Figure 4.1: Overview of Training Modes and their application for behavior correction.

- **Extended Remote Range:** Operates up to 3300 feet (1000 meters), suitable for training in various environments.



Figure 4.2: Remote Control Range capabilities.

- **IPX7 Waterproof Receiver:** The receiver collar is fully waterproof, allowing your dog to play in water without damage. The remote is splash-proof.



Figure 4.3: IPX7 Waterproof Receiver in action.

- **Two Safety Anti-lost Light Modes:** Features flashing and constant white light modes to help locate your dog in low-light conditions.

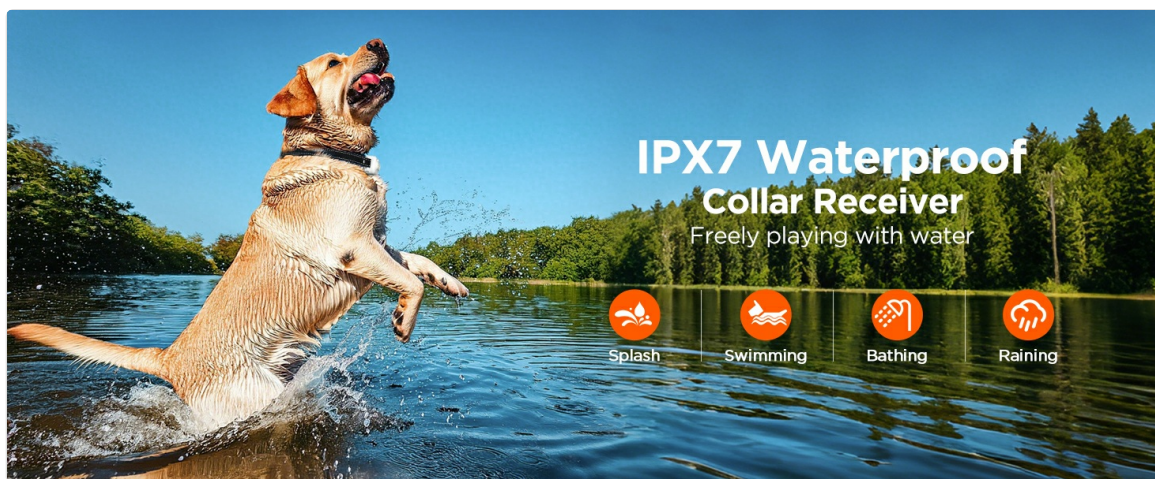


Figure 4.4: Light Modes for visibility and locating your dog.

- **Rechargeable & Long Battery Life:** Built-in lithium batteries. Receiver standby up to 15 days, remote standby up to 45 days. Full charge in 2 hours (4 hours for first charge).



Figure 4.5: Charging and Battery Life details.

- **Adjustable Collar for All Sizes:** Fits dogs with neck circumference 6-26 inches and weight 10-120 pounds. Includes short and long probes with conductive silicone sleeves for comfort and effectiveness on different coat types.

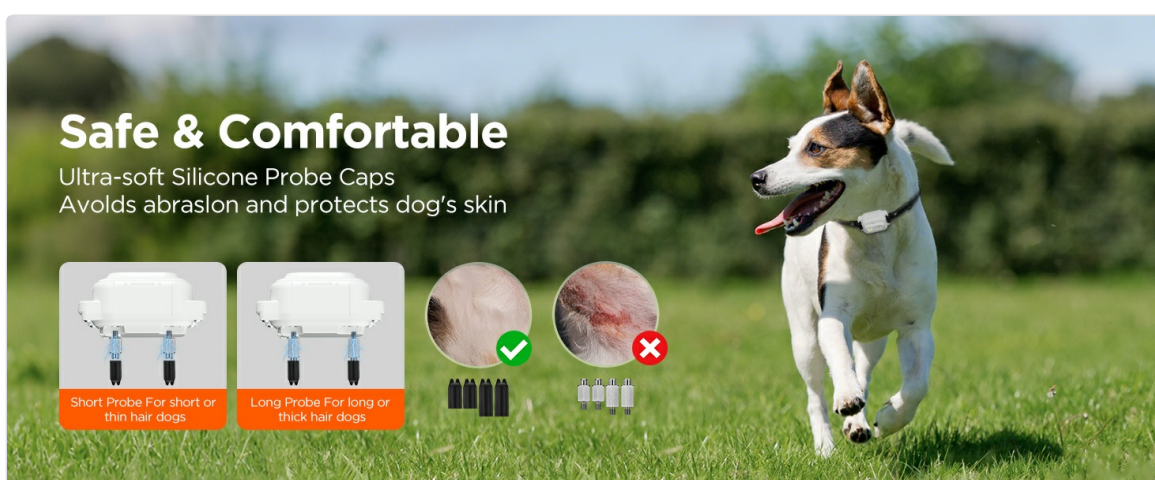


Figure 4.6: Collar Adjustment and suitability for different dog sizes.

5. SETUP GUIDE

5.1 Charging the Devices

1. Connect the charging cable to the charging ports on both the remote control and the receiver.
2. Plug the USB end of the cable into a power adapter, computer, or power bank.
3. For the first charge, allow 4 hours for both devices to fully charge. Subsequent charges typically take 2 hours. The battery indicator on the remote and receiver will show charging status.

5.2 Attaching and Fitting the Collar

1. Thread the nylon strap through the receiver unit.
2. Select the appropriate metal probes (short for short-haired dogs, long for long/dense-haired dogs) and screw them firmly onto the receiver.
3. Place the conductive silicone covers over the metal probes for added comfort and to prevent direct metal-to-skin contact.
4. Place the collar around your dog's neck, ensuring the receiver is positioned centrally under the chin or on the side of the neck.
5. Adjust the strap so it is snug but not tight. You should be able to fit two fingers comfortably between the collar and your dog's neck. A proper fit ensures consistent contact of the probes with the skin.

5.3 Testing the Static Stimulation (Safety Shock)

1. Turn on both the remote and the receiver.
2. Place the test bulb tool over the two metal probes on the receiver.
3. Press the static stimulation button on the remote control. The test bulb should light up, indicating the static function is working.
4. Do not test the static stimulation on yourself or another person.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **Remote:** Press and hold the power button for 2 seconds to turn on/off.
- **Receiver:** Press and hold the power button for 2 seconds to turn on/off.

6.2 Mode Selection

The remote control features dedicated buttons for each training mode:

- **Beep Mode:** Press the 'Beep' button to emit an audible tone from the receiver. Levels 1-8.
- **Vibration Mode:** Press the 'Vibration' button to activate vibration on the receiver. Levels 1-16.
- **Safety Shock Mode:** Press the 'Shock' button to deliver static stimulation. Levels 1-16. Use this mode cautiously and only after your dog understands the beep and vibration commands.

6.3 Adjusting Intensity Levels

Use the '+' and '-' buttons on the remote control to adjust the intensity level for Vibration and Safety Shock modes. Beep mode has fixed levels.

6.4 Using Light Modes

The receiver has built-in lights for visibility:

- Press the light button once for a constant white light.
- Press the light button twice for a flashing light.

7. TRAINING GUIDELINES

- **Start with Low Levels:** Always begin with the lowest effective level for vibration and static stimulation. Observe your dog's reaction and increase only if necessary.
- **Consistency is Key:** Use the collar consistently with clear, concise commands.
- **Positive Reinforcement:** Always pair corrections with positive reinforcement (praise, treats) when your dog performs the desired behavior.
- **Short Sessions:** Keep training sessions short (10-15 minutes) and positive to maintain your dog's engagement.
- **Avoid Punishment:** The collar is a training aid, not a punishment tool. Use it to interrupt unwanted behaviors and guide your dog towards correct actions.
- **Familiarize Your Dog:** Allow your dog to wear the collar for a few days without activation to get accustomed to it.

8. MAINTENANCE

- **Cleaning:** Regularly clean the receiver and probes with a damp cloth. Ensure the probes are free of dirt, debris, or hair that could interfere with contact.
- **Battery Care:** Charge the devices regularly, even if not in frequent use, to maintain battery health. Avoid fully depleting the battery for extended periods.
- **Storage:** Store the collar and remote in a cool, dry place when not in use.
- **Probe Inspection:** Periodically check the probes and silicone covers for wear and tear. Replace if damaged.

9. TROUBLESHOOTING

- **Collar not responding:** Ensure both the remote and receiver are turned on and fully charged. Check if they are paired correctly (refer to pairing instructions if available, typically automatic or simple button press).
- **No static stimulation:** Verify the probes are making good contact with the dog's skin. Ensure the intensity level is not set to 0. Use the test bulb tool to confirm functionality.
- **Shortened range:** Check for environmental interference (e.g., large metal objects, thick walls). Ensure the remote's battery is not low.
- **Skin irritation:** Remove the collar immediately. Clean the area and consult a veterinarian. Ensure the collar is not worn for too long and is fitted correctly. Consider using the silicone covers if not already in use.
- **Battery not charging:** Check the charging cable and adapter for damage. Ensure connections are secure. Try a different charging port or power source.

10. SPECIFICATIONS

Feature	Detail
Model Number	C94
Remote Range	Up to 3300 ft (1000 meters)
Waterproof Rating (Receiver)	IPX7
Training Modes	Beep (1-8 levels), Vibration (1-16 levels), Safety Shock (1-16 levels)
Battery Type	Lithium Polymer (included)
Charging Time	Approx. 2 hours (4 hours for first charge)
Receiver Standby Time	Up to 15 days
Remote Standby Time	Up to 45 days
Collar Material	Nylon
Neck Circumference	6 - 26 inches
Dog Weight Suitability	10 - 120 pounds
Item Weight	8.8 ounces
Manufacturer	SHENZHEN PAPANI PET PRODUCTS CO.,LTD

11. WARRANTY AND SUPPORT

This CIUZL C94 Dog Training Collar comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. For warranty claims, technical support, or any questions regarding your product, please contact CIUZL customer service through your purchase platform or the contact information provided with your product packaging.