

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TODIMART](#) /

› [TODIMART T3 Electric Scooter User Manual](#)

## TODIMART T3

# TODIMART T3 Electric Scooter User Manual

Model: T3 | Brand: TODIMART

[Safety](#) [Contents](#) [Assembly](#) [Operation](#) [App](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

## 1. SAFETY INFORMATION

Before operating your TODIMART T3 Electric Scooter, please read this manual carefully and retain it for future reference. Failure to follow the instructions can lead to serious injury or property damage.

### General Safety Guidelines:

- Always wear a helmet and appropriate protective gear (knee pads, elbow pads) when riding.
- Adhere to all local traffic laws and regulations regarding electric scooters.
- Do not ride under the influence of alcohol or drugs.
- Ensure the scooter is in good working condition before each ride. Check brakes, tires, and battery level.
- Do not exceed the maximum load capacity of 120 kg.
- Avoid riding in adverse weather conditions (heavy rain, snow, ice) or on slippery surfaces.
- Maintain a safe distance from other vehicles and pedestrians.
- Children aged 12-15 should be supervised by an adult.
- Do not perform stunts or dangerous maneuvers.

## 2. PACKAGE CONTENTS

Carefully unpack your TODIMART T3 Electric Scooter and check that all items are present and in good condition.

- TODIMART T3 Electric Scooter
- Charger
- Tools (Hexagonal screws and wrench)
- User Manual



Image: The TODIMART T3 Electric Scooter, shown both unfolded and folded for transport.

### 3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your TODIMART T3 Electric Scooter:

- 1. Remove the Scooter from the Box:** Carefully lift the electric scooter out of its packaging.

Your browser does not support the video tag.

Video: Demonstrates unboxing the scooter and removing protective foam.

- 2. Connect the Wires:** Ensure the wires from the handlebar are correctly connected to the main pole.

- 3. Insert Wires into the Pole:** Carefully insert the connected wires into the scooter's pole.

- 4. Attach the Handlebar:** Align the handlebar with the pole and slide it into place.

- 5. Secure the Handlebar:** Use the provided hexagonal screws and wrench from the tool kit to firmly secure the handlebar to the pole. Ensure all screws are tightened to prevent wobbling.

Your browser does not support the video tag.

Video: Shows the process of connecting wires and securing the handlebar with screws.

### 4. OPERATING INSTRUCTIONS

#### 4.1. Power On/Off

- To power on, press and hold the power button on the display for a few seconds.
- To power off, press and hold the power button again until the display turns off.



Image: Close-up of the scooter's display, showing speed, battery level, and Bluetooth icon, with a smartphone displaying the companion app.

#### 4.2. Speed Modes

The scooter features three speed modes: ECO, D (Drive), and S (Sport). Press the power button briefly to cycle through the modes:

- **ECO Mode:** Energy-saving mode for longer range, typically around 10 km/h.
- **D Mode:** Standard mode for balanced speed and range, typically around 20 km/h.
- **S Mode:** Sport mode for maximum speed and power, up to 25 km/h.

Your browser does not support the video tag.

Video: Demonstrates the scooter's three driving modes and display features.

#### 4.3. Lights and Braking

- **Headlight:** Press the power button twice quickly to turn the headlight on or off.
- **Brake Light:** The rear brake light illuminates automatically when the brake lever is engaged.


- **Braking System:** The scooter is equipped with an electronic front brake and a mechanical disc brake on the rear wheel for effective stopping power.

## Conduite en toute sécurité des trottinettes électriques

Bénéficiez d'un contrôle précis et d'un freinage réactif grâce aux freins à disque haute performances.



Phare et feu arrière super lumineux pour la conduite de nuit.

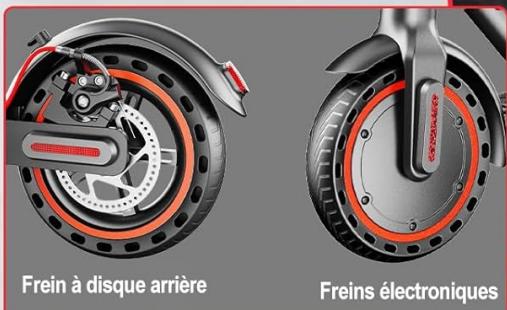

Pneus antidéflagrants en nid d'abeille



Image: A rider on the scooter, with insets highlighting the LED headlight, rear brake light, and diagrams of the dual braking system (disc and electronic).

### 4.4. Folding and Unfolding

The TODIMART T3 is designed for quick folding in approximately 3 seconds for easy transport and storage.

- **Folding:** Locate the folding mechanism near the base of the handlebar stem. Release the latch and fold the stem downwards until it clicks into place.
- **Unfolding:** Release the latch, lift the handlebar stem until it locks upright, and ensure it is securely fastened before riding.

# 3 Étapes faciles pour plier

Pratique pour voyager.



**<12 kg**  
Poids net



Image: A person demonstrating the folding process of the scooter, showing its compact dimensions when folded.

## 5. APP CONNECTIVITY

Enhance your riding experience by connecting your TODIMART T3 Electric Scooter to the companion mobile application via Bluetooth.

### 5.1. Pairing Your Device:

1. Ensure your scooter is powered on and Bluetooth is enabled on your smartphone.
2. Open the TODIMART app and follow the on-screen instructions to add a new device.
3. The app will search for nearby scooters. Select your T3 model to pair.
4. Once paired, the Bluetooth icon on the scooter's display will illuminate.

Your browser does not support the video tag.

Video: Demonstrates connecting the TODIMART T3 Electric Scooter to a smartphone app via Bluetooth.

### 5.2. App Features:

Through the app, you can access various functions including:

- **Lock/Unlock:** Secure your scooter remotely.
- **Custom Max Speed:** Adjust the maximum speed limit to suit your preferences or local regulations.

- **Cruise Control:** Activate and manage cruise control for consistent speed on longer rides.
- **Real-time Data:** View current speed, battery level, mileage, and other riding statistics.
- **Fault Detection:** Receive alerts and diagnostic information for potential issues.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

### 6.1. Battery Care:

- Charge the battery fully before first use.
- Do not allow the battery to completely drain. Recharge after each use.
- Store the scooter in a cool, dry place when not in use, and ensure the battery is partially charged (around 50-70%) if storing for extended periods.
- Use only the original charger provided.

### 6.2. Tire Maintenance:

- The TODIMART T3 uses 8.5-inch solid (honeycomb) tires, which are puncture-proof and require no inflation.
- Regularly inspect tires for wear and tear. Replace if significant damage is observed.

### 6.3. Brake System:

- Periodically check the brake levers and cables for proper tension and responsiveness.
- Ensure the disc brake pads are not excessively worn. Consult a professional for brake adjustments or replacements if needed.

### 6.4. Cleaning and Storage:

- Clean the scooter with a damp cloth. Do not use high-pressure water jets or corrosive cleaners.
- Avoid exposing the scooter to direct sunlight or extreme temperatures for prolonged periods.
- Store the scooter in a dry, secure location.

## 7. TROUBLESHOOTING

If you encounter issues with your TODIMART T3 Electric Scooter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scooter does not power on.	Low battery; loose power connection.	Charge the battery; check all power connections.
Motor not engaging or weak power.	Low battery; incorrect speed mode; motor issue.	Charge battery; switch to a higher speed mode (D or S); contact support if issue persists.
Bluetooth app not connecting.	Bluetooth off; scooter not in pairing mode; app issue.	Ensure scooter is on and Bluetooth is active on phone; restart app and scooter; try re-pairing.
Brakes feel loose or ineffective.	Brake cable tension; worn brake pads.	Adjust brake cable tension; inspect and replace brake pads if necessary. Seek professional assistance.

For further assistance, please refer to the contact information in the Warranty and Support section.

## 8. SPECIFICATIONS

Feature	Detail

Feature	Detail
Model	T3
Motor Power	350W (Brushless, 650W Peak)
Max Speed	25 km/h
Battery	36V 7.8Ah (280.8Wh) Lithium
Max Range	30-35 km (depending on conditions)
Tires	8.5-inch Solid (Honeycomb)
Braking System	Electronic Front Brake, Mechanical Rear Disc Brake
Max Load Capacity	120 kg
Net Weight	11.8 kg
Folded Dimensions (L x W x H)	108 x 43 x 49 cm
Material	Aluminum
Special Features	Digital Display, Speedometer, Lightweight, Foldable, Anti-slip Surface, App Control, Anti-theft

## 9. WARRANTY AND SUPPORT

TODIMART offers a comprehensive after-sales service. For any issues or inquiries, please contact our support team. The product includes a warranty as per local regulations. Please retain your proof of purchase.


**Spare Parts Availability:** 3 Years

For detailed warranty information and support, please visit the official TODIMART website or contact your retailer.

**Contact Information:** Refer to your purchase documentation or the TODIMART official website for the most up-to-date contact details.

© 2025 TODIMART. All rights reserved.

## Related Documents - T3

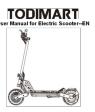	<p><a href="#">TODIMART Electric Scooter User Manual: Operation, Safety, and Maintenance Guide</a></p> <p>Comprehensive user manual for the TODIMART electric scooter, detailing setup, safe operation, maintenance procedures, and troubleshooting tips for optimal performance and longevity.</p>
	<p><a href="#">Electric Scooter User Manual</a></p> <p>Comprehensive user manual for the electric scooter, covering product overview, assembly, riding basics, display operation, safety instructions, maintenance, troubleshooting, and after-sales services.</p>

 <b>T3 CURLWRAP</b> User Guide Glossary/Translator Manual del usuario 1" automatic rotating curling iron Fer à friser automatique à 360° de 25 mm Rasier gummis automatisch 25 mm Model No. /Nº de modelo: T3-CW	<p><b><a href="#">T3 CurlWrap Automatic Rotating Curling Iron User Guide</a></b></p> <p>Comprehensive user guide for the T3 CurlWrap automatic rotating curling iron, covering safety instructions, operating procedures, maintenance, temperature settings, and warranty information.</p>
 <b>Hair Straightener User Manual - Model T3</b> User manual for the Model T3 hair straightener, providing instructions on usage, advantages, specifications, and safety precautions. Features include ceramic tourmaline plates, adjustable temperature with LCD display, and a 360° rotating cord.	
 <b>T3 SINGLEPASS CERAMIC™</b> User Guide Glossary/Translator Manual del usuario 1" straightening and styling iron Fer à lisser et à styliser de 25 mm Planchette pour lisser et styliser de 25 mm Model No. /Nº de modelo: T3SP, T3SPB, T3SPB2, T3SPB3, T3SPB4, T3SPB5, T3SPB6, T3SPB7, T3SPB8, T3SPB9	<p><b><a href="#">T3 SinglePass Ceramic 1" Styling Iron User Guide</a></b></p> <p>Comprehensive user guide for the T3 SinglePass Ceramic 1" straightening and styling iron, covering safety instructions, operating procedures, maintenance, and warranty information.</p>
 <b>T3 SINGLEPASS CURL X</b> User Guide Glossary/Translator Manual del usuario 1" professional curling iron and styling iron Fer à friser professionnel avec lissage et stylage de 25 mm, 25 mm, 30 mm Fer à friser professionnel avec lissage et stylage de 25 mm, 30 mm, 30 mm Model No. /Nº de modelo: T3SPC, T3SPCB, T3SPCB2, T3SPCB3, T3SPCB4, T3SPCB5, T3SPCB6, T3SPCB7, T3SPCB8, T3SPCB9	<p><b><a href="#">T3 SinglePass Curl X User Guide</a></b></p> <p>User guide for the T3 SinglePass Curl X professional curling iron, including safety instructions, operating instructions, maintenance, and warranty information.</p>