

## Nillkin B0FDKPY2P2

# Nillkin Foldable Bluetooth Keyboard with Touchpad and Numeric Keypad User Manual

Model: B0FDKPY2P2

## 1. INTRODUCTION

Thank you for purchasing the Nillkin Foldable Bluetooth Keyboard. This compact and versatile keyboard is designed to enhance your productivity across multiple devices, offering a comfortable typing experience with an integrated touchpad and numeric keypad. Please read this manual carefully to ensure proper use and maintenance of your device.

## 2. PRODUCT OVERVIEW

### Key Features:

- **Foldable & Portable Design:** Weighing approximately 238g, this keyboard folds to a compact size (18.2 x 10.8 x 1.6cm when folded) for easy portability.
- **Integrated Touchpad & Numeric Keypad:** Features a large, responsive touchpad (59mm x 64mm) for smooth cursor control and multi-gesture operations. The touchpad can be switched to a numeric keypad using Fn + Right Command key.
- **Comfortable Typing Experience:** Utilizes a pantograph key structure with a 19mm key pitch and 1.2mm key travel for quiet and efficient typing, similar to a laptop keyboard.
- **Long Battery Life & Energy Saving:** Built-in large capacity battery provides over 1 week of continuous use and 150 days of standby time on a single charge. Features automatic sleep mode after 10 minutes of inactivity and auto power on/off upon folding/unfolding.
- **Multi-Device Connectivity:** Supports simultaneous connection to up to 3 devices via Bluetooth 5.0, compatible with Android, Windows, iPad OS, macOS, and iOS. Easily switch between devices with a single touch.
- **Durable Silicone Material:** Made with organic silicone material that is skin-friendly, durable,

and resistant to extreme temperatures (-40°C to 200°C).

- **Convenient Indicators:** Five LED lamps on the top indicate battery level and connection status.

### Package Contents:

- Nillkin Foldable Bluetooth Keyboard x 1
- USB-C Charging Cable x 1
- User Manual x 1
- Storage Pouch x 1

### Product Dimensions:

- Unfolded Size: 34.2 cm (L) x 10.8 cm (W) x 0.95 cm (H)
- Folded Size: 18.2 cm (L) x 10.8 cm (W) x 1.6 cm (H)



Image: Nillkin Foldable Bluetooth Keyboard showing its unfolded and folded dimensions.



Image: The Nillkin keyboard in its compact, folded state.

## 3. SETUP

### 3.1. Charging the Keyboard

- Connect the provided USB-C charging cable to the keyboard's charging port and a power source.
- The red indicator light will stay on during charging.
- The indicator light will turn off when charging is complete. A full charge takes approximately 2 hours.

## フルサイズで操作の効率化 ノートパソコンのように使用できる

折りたたみ部分の設計が合理的で、特定のキーが小さくなってしまことはありません



すべてのキー間隔は合理的な19cm

機能キーも充実しています

37%

折りたたみ部分の設計が不合理で、一部のキーキャップが小さくなっています



キーのピッチが狭く、タイピングの感触が悪いです

機能キーが揃っていません

Image: The keyboard connected via USB-C for charging, showing the charging indicator.

### 3.2. Bluetooth Pairing

1. Unfold the keyboard to automatically power it on.
2. Turn on Bluetooth on your device (e.g., iPad, smartphone, computer).
3. Press **Fn + Q** (for BT1), **Fn + W** (for BT2), or **Fn + E** (for BT3) to select a Bluetooth channel.
4. Press **Fn + C** to enter pairing mode. The blue indicator light will flash.
5. On your device, search for "Cube Pocket Keyboard" in the Bluetooth settings and tap to connect.
6. Once connected, the blue indicator light on the keyboard will turn off.

Video: This video demonstrates the Bluetooth pairing process for the Nillkin Foldable Bluetooth Keyboard, including how to select a channel and enter pairing mode.

## 4. OPERATING INSTRUCTIONS

### 4.1. Multi-Device Switching

After successfully pairing with up to three devices (BT1, BT2, BT3), you can quickly switch between them by pressing **Fn + Q**, **Fn + W**, or **Fn + E** respectively.



Image: The keyboard demonstrating multi-device connectivity and switching between a smartphone, laptop, and tablet.

#### 4.2. Numeric Keypad / Touchpad Toggle

The integrated touchpad can function as a numeric keypad. To switch between touchpad mode and numeric keypad mode, press **Fn + Right Command** key. This allows for convenient numerical input without needing a separate mouse.



Image: Illustration of the touchpad and numeric keypad functionality, highlighting the toggle feature.

#### 4.3. Multimedia and Shortcut Keys

The keyboard features various multimedia and shortcut keys for enhanced productivity:

- Pressing a multifunction key alone will activate numeric input mode.
- Pressing **Shift + Multifunction Key** allows for symbol input.
- Pressing **Fn + Multifunction Key** activates multimedia functions (e.g., brightness, volume, media control).
- For Windows users, **Fn + Shift + Multifunction Key** can be used for specific shortcut functions.

## ユーザーフレンドリーなデザインの詳細




・高品質なPC素材使用



・シザー式(はさみ式)デザイン



・LEDインジケーター搭載

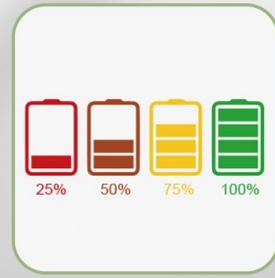

Fn+左Commandキーを押すと、現在のキーボードのバッテリー残量を確認できます

Image: A visual guide to the Fn key shortcuts for various functions like brightness, volume, and media control.

### 4.4. Language Switching

- **iOS / Mac:** Press **Ctrl + Spacebar**.
- **Android:** Press **Ctrl + Spacebar** or **Shift + Spacebar**.
- **Windows:** Press **Alt + Shift**.

### 4.5. Battery Level Check

To check the battery level, press **Fn + Command**:

- Green light flashes 3 times: 70% - 100% battery.
- Blue light flashes 3 times: 30% - 70% battery.
- Red light flashes 3 times: 0% - 30% battery.

## 5. MAINTENANCE

- Keep the keyboard clean by wiping it with a soft, dry cloth.
- Avoid exposing the keyboard to extreme temperatures, direct sunlight, or liquids.
- Store the keyboard in its provided pouch when not in use to protect it from dust and scratches.

## 6. TROUBLESHOOTING

- **Keyboard not connecting:** Ensure Bluetooth is enabled on your device and the keyboard is in pairing mode. Try restarting both the keyboard and your device.
- **Keys not responding:** Check the battery level and charge the keyboard if necessary. Ensure the keyboard is properly connected via Bluetooth.
- **Touchpad issues:** For iPad users, ensure "Settings → General → Trackpad" is turned on. Some gestures may not be supported depending on the OS or application.
- **Unexpected input:** Ensure the keyboard is placed on a stable surface. If keys are registering multiple presses or not at all, try cleaning around the keys.

## 7. SPECIFICATIONS

Feature	Description
Brand	Nillkin
Model	B0FDKPY2P2
Connectivity Technology	Bluetooth 5.0
Compatible Devices	iPad OS, Windows 10+, Mac OS X 10.10+, Android 4.3+, Smartphones, Tablets, Laptops, PCs
Keyboard Layout	QWERTY
Switch Type	Mechanical (Pantograph)
Power Source	Battery Powered
Material	ABS, Silicone, Polycarbonate
Color	Khaki

## 8. WARRANTY AND SUPPORT

Nillkin products come with a 2-year manufacturer's warranty from the date of purchase. In case of any issues, please contact customer service. We offer a 30-day quality guarantee (return/exchange for defective products) and 2-year after-sales service.

To contact support, navigate to "Account Service" → "Order History" → "Contact Seller". We aim to respond within 24 hours.