

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WUBEN](#) /

› [WUBEN E7 & L3 Rechargeable Flashlight Bundle User Manual](#)

WUBEN E7, L3

WUBEN E7 & L3 Rechargeable Flashlight Bundle User Manual

Models: WUBEN E7, WUBEN L3

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your WUBEN E7 and WUBEN L3 Rechargeable Flashlight Bundle. Please read this manual thoroughly before operating the flashlights and retain it for future reference.



Image: The WUBEN E7 mini flashlight and the WUBEN L3 tactical flashlight shown together.

WUBEN L3 Battery Installation & Initial Charge

1. **Remove Battery Insulation:** Unscrew the tail cap of the WUBEN L3 flashlight. Locate and remove the blue insulation sheet covering the battery. This sheet prevents battery discharge during shipping.
2. **Reinsert Battery:** Ensure the battery is inserted with the positive (+) end facing towards the head of the flashlight.
3. **Secure Tail Cap:** Screw the tail cap back on tightly. The flashlight features a weather-sealing O-ring to ensure water resistance when properly closed.
4. **Initial Charging:** Twist the ring near the head of the L3 flashlight to reveal the USB-C charging port. Connect the provided Type-C charging cable to the port and a compatible USB power source. The indicator light will be red during charging and turn blue when fully charged. Charging from empty to full takes approximately 100-160 minutes depending on the charger (e.g., 9V/2A: ~100 mins, 5V/2A: ~160 mins).



Image: The WUBEN L3 flashlight being charged via its USB-C port, illustrating its fast-charging feature.

WUBEN E7 Initial Charge

The WUBEN E7 also features a USB-C charging port. Connect it to a compatible USB power source using the provided

cable. Refer to the indicator light for charging status (red for charging, blue for fully charged).

Attaching Accessories (WUBEN L3)

- **Belt Clip:** The L3 flashlight comes with a removable belt clip for convenient carrying. It can be attached or removed by sliding it along the body of the flashlight.
 - **Lanyard:** A lanyard is included for added security and ease of access. Attach it to the designated loop on the tail cap.
-

OPERATING INSTRUCTIONS

WUBEN L3 Flashlight Operation

The WUBEN L3 is controlled by a single tail switch button.

- **Momentary On:** Tap the tail switch button for momentary illumination. The light will turn off when the button is released.
- **Constant On/Off:** Fully press and click the tail switch button to turn the flashlight on or off.
- **Mode Switching (Low, Medium, High):** When the flashlight is on, lightly tap the tail switch (without clicking) to cycle through the brightness modes: *Moon (5 lumens) → Low (150 lumens) → Medium (500 lumens) → High (1500 lumens)*. The flashlight will remember the last used mode when turned off and on again.
- **Turbo Mode (3000 lumens):** From any mode, press and hold the tail switch for approximately 0.5 seconds to activate *Turbo mode* (3000 lumens). Release the button to return to the previously used mode. Note: The L3 will automatically step down from 1500 lumens (High mode) to 1100 lumens after 4 minutes to prevent overheating.
- **Strobe Mode:** Double-click the tail switch to activate *Strobe mode*.
- **SOS Mode:** Triple-click the tail switch to activate *SOS mode*.

WUBEN E7 Flashlight Operation

The WUBEN E7 offers 6 lighting modes and a memory function.

- **Mode Switching:** Click the switch and long press to trigger gear selection (specific details on button interaction for E7 are not fully provided in the source, but generally implies cycling through modes).
- **Super Bright Mode:** Double-click the switch to activate *Super Bright mode* (1800 lumens).
- **Burst Flash Mode:** Triple-click the switch to activate *Burst Flash mode* (Strobe).
- **Lock Function:** Four consecutive clicks will lock the flashlight to prevent accidental activation.
- **Memory Function:** The E7 will remember the last used brightness mode when turned off and on.

POCKET EDC FLASHLIGHT

A versatile torch that can be carried anywhere

6500K  | 132 Meters

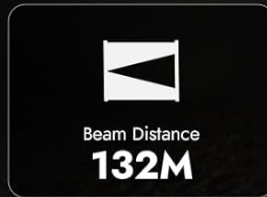


Image: Key features of the WUBEN E7, including maximum output, beam distance, runtime, drop resistance, waterproofing, and floodlight angle.

Power Bank Function (WUBEN L3)

The WUBEN L3 can function as a power bank to charge other devices.

- **Activate Power Bank:** Twist the ring near the head of the L3 flashlight to reveal the USB-C port. Connect your device (e.g., smartphone) to the L3 using a compatible USB-C cable.
- **Output:** The L3 provides up to 18W output for charging. Note that actual output may vary depending on the connected device and cable.

Discharge Support

A backup source to keep you connected when it matters most



Max 18W Output
1.2 Charges



Image: The WUBEN L3 flashlight connected to a smartphone, demonstrating its capability to act as a backup power source.

MAINTENANCE

- **Cleaning:** Regularly clean the flashlight body with a soft, damp cloth. Keep the lens free of dust and debris for optimal light output.
- **O-Ring Maintenance:** The L3 flashlight uses O-rings for waterproofing. Periodically inspect the O-rings for wear and tear. Lubricate them with silicone grease if necessary to maintain the IP68 rating. Replacement O-rings are included in the package.
- **Battery Care:** Store the flashlights in a cool, dry place. If storing for extended periods, charge the batteries to approximately 50% capacity to prolong their lifespan. Avoid fully discharging the batteries.
- **Waterproofing:** Both E7 and L3 models are IP68 rated, meaning they are protected against dust ingress and can withstand immersion in water up to 2 meters for 1 hour. Ensure all caps and ports are securely closed before exposing

the flashlights to water.



Image: WUBEN E7 flashlights showcasing their magnetic base and IP68 waterproof design in a rainy environment.

TROUBLESHOOTING

- **Flashlight Not Turning On:**
 - Ensure the battery insulation sheet has been removed (for L3).
 - Check if the battery is inserted correctly with the correct polarity.
 - Verify the battery is charged. Refer to the power indicator.
 - For E7, check if the lock function is activated (four clicks to unlock).
- **Flashlight Overheating (L3):** The L3 is designed to automatically reduce brightness from 1500 lumens (High mode) to 1100 lumens after 4 minutes to manage heat. This is a normal safety feature. If the flashlight becomes excessively hot

to touch, turn it off and allow it to cool down.

- **Charging Issues:**

- Ensure the USB-C cable is securely connected to both the flashlight and the power source.
- Try a different USB-C cable or power adapter.
- Verify the charging port is clean and free of debris.

- **Power Bank Function Not Working (L3):** Ensure the L3 battery has sufficient charge. Some devices may require specific charging protocols not fully supported by the L3's 5V output.
-

SPECIFICATIONS

WUBEN E7 Mini Flashlight

- **Max Output:** 1800 Lumens
- **LED:** P9 High Color Rendering 6500K LED
- **Floodlight Angle:** 175° Ultra-wide
- **Modes:** High/Med/Low/Super Bright/Strobe/SOS (6 modes with memory function)
- **Waterproof Rating:** IP68

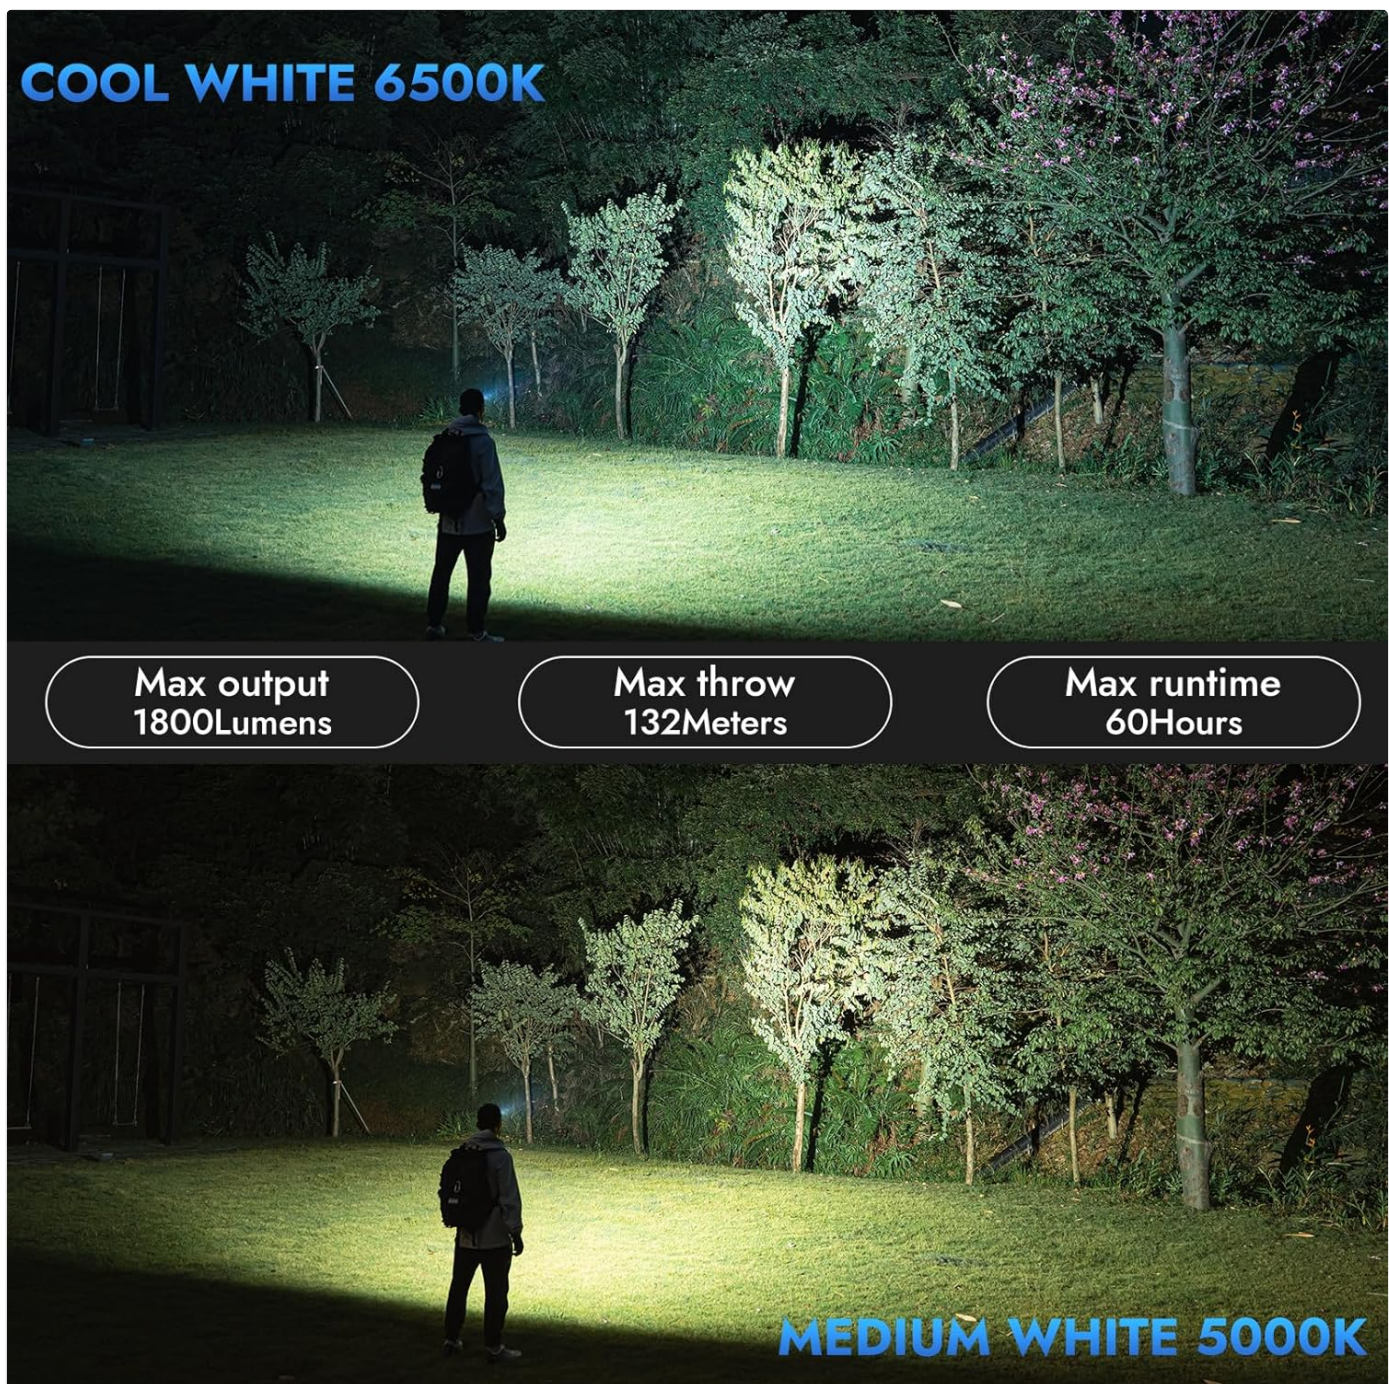


Image: Comparison of light output and color temperature from the WUBEN E7, showing Cool White 6500K and Medium White 5000K.

WUBEN L3 Tactical Flashlight

- **Max Output:** 3000 Lumens
- **Max Beam Distance:** 226 meters
- **Battery:** 4800mAh Rechargeable Li-ion (21700, 3.7V, 17.76Wh)
- **Charging:** Dual-way USB-C (Max 18W input/output)
- **Modes:** Turbo/High/Med/Low/Moon/Strobe/SOS (7 modes with mode memory)
- **Waterproof Rating:** IP68
- **Material:** III MIL-Spec Anodized Finish

Ultra-Bright Output

Illuminate your workspace, trail, or garage with incredible brightness.



3000
LUMENS



226
METERS

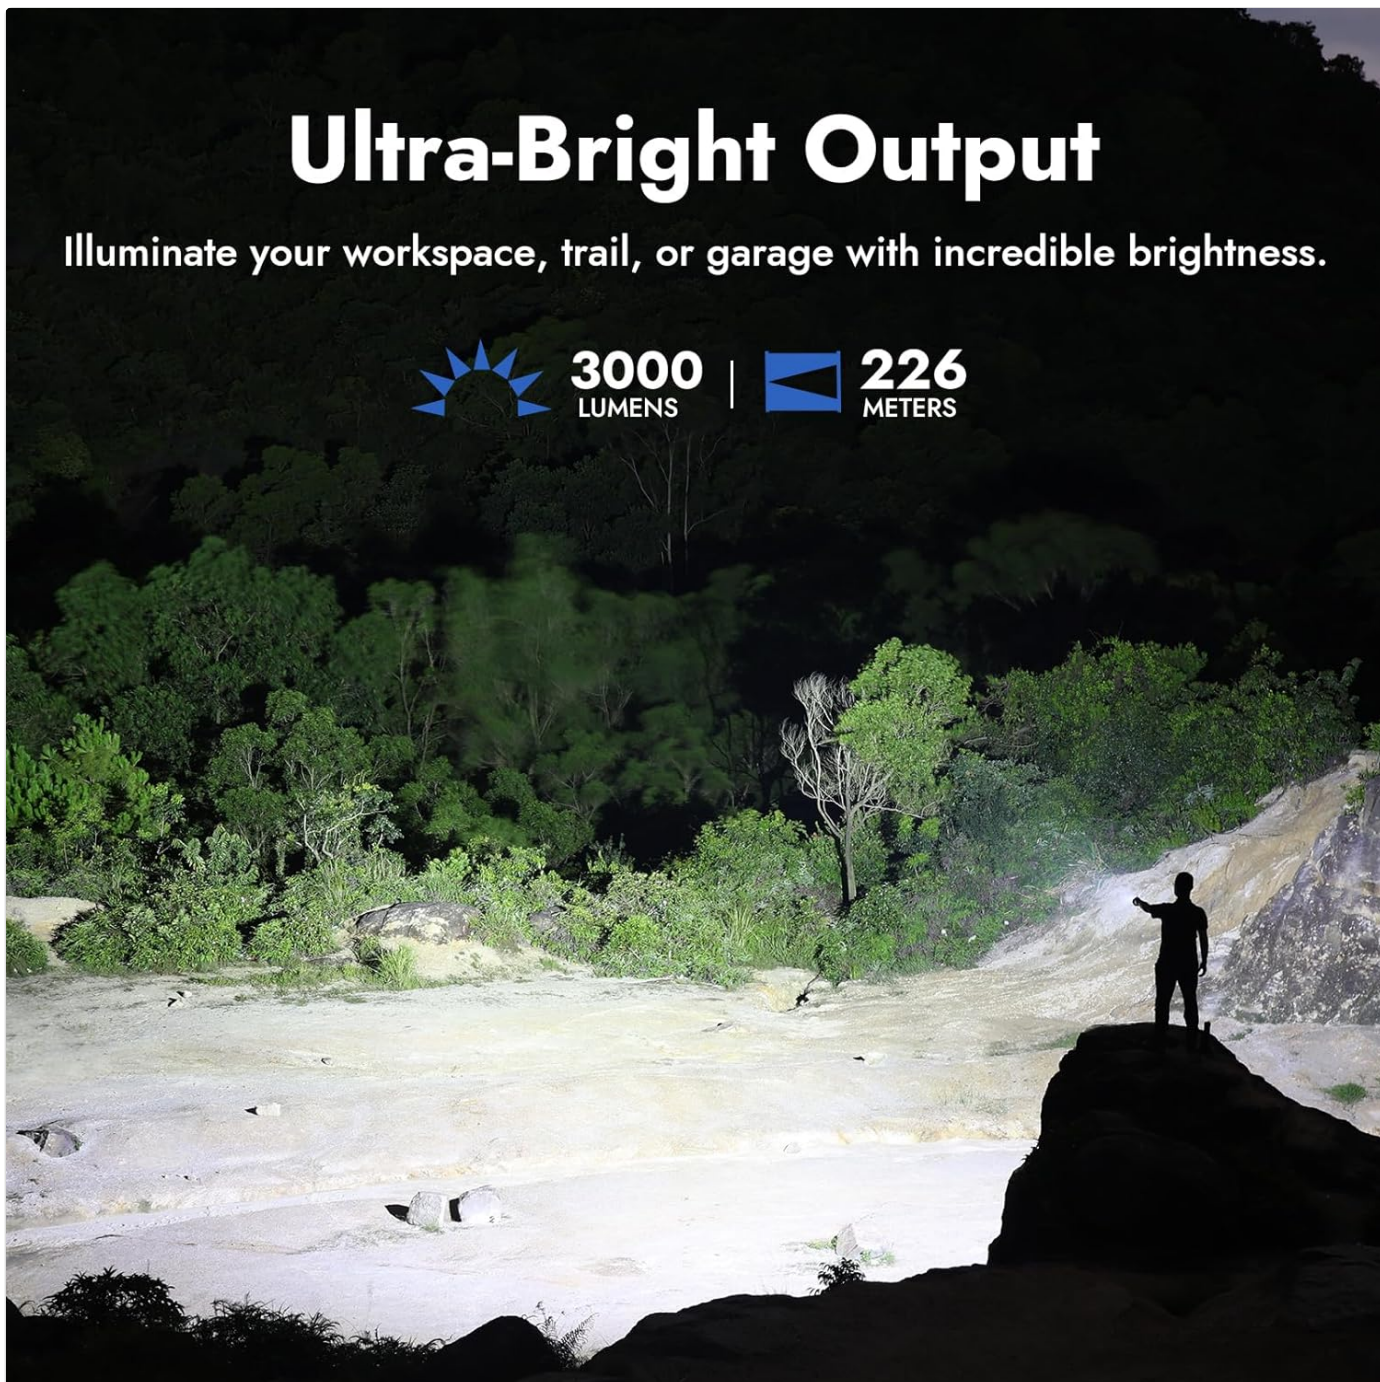


Image: The WUBEN L3 flashlight demonstrating its ultra-bright output of 3000 lumens over a significant distance in an outdoor setting.

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your WUBEN E7 & L3 Flashlight Bundle, please refer to the official WUBEN website or contact WUBEN customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

You can visit the official WUBEN store for more information: [WUBEN Store](#)

Related Documents - E7, L3

	<p>WUBEN H8 LED Flashlight User Manual: Performance and Operation Guide</p> <p>Comprehensive user manual for the WUBEN H8 LED flashlight. Learn about its powerful 1800-lumen output, 1000-meter beam, Outdoor and Tactical modes, charging, maintenance, and specifications. Essential guide for optimal use and care of your WUBEN H8 flashlight.</p>
	<p>WUBEN L60 Flashlight User Manual</p> <p>Comprehensive user manual for the WUBEN L60 flashlight, detailing features, operation, specifications, and maintenance. Includes information on charging, modes, and safety.</p>
	<p>Wuben L1 Flashlight: Operation, Features, and Specifications</p> <p>Comprehensive user manual for the Wuben L1 flashlight, detailing its features, operation, maintenance, troubleshooting, and warranty information. Includes specifications for dual light sources, brightness levels, and battery performance.</p>
	<p>WUBEN X4 Flashlight User Manual - Operation, Features, and Specifications</p> <p>Comprehensive user manual for the WUBEN X4 flashlight. This guide covers package contents, product components, detailed operation modes (main light, side light, moonlight, turbo, strobe), charging indicators, maintenance, troubleshooting FAQs, warranty policy, and technical specifications.</p>
	<p>WUBEN C2 Flashlight User Manual and Warranty Information</p> <p>Comprehensive user manual for the WUBEN C2 flashlight, covering operation, maintenance, troubleshooting, and warranty details. Includes specifications and safety warnings.</p>
	<p>WUBEN TO46R Flashlight User Manual</p> <p>Comprehensive user manual for the WUBEN TO46R flashlight, covering package contents, product features, operation, maintenance, FAQs, warranty policy, and technical specifications. Includes multilingual instructions.</p>