

PROALLER OB20U-001

PROALLER Heated Blanket User Manual

Model: **OB20U-001** | Brand: **PROALLER**

1. INTRODUCTION

Thank you for choosing the PROALLER Heated Blanket. This manual provides essential information for the safe and efficient use of your electric blanket. Please read all instructions carefully before first use and retain this manual for future reference.

This heated blanket, measuring 200x150 CM, features double-sided flannel and Sherpa fleece for comfort, 10 adjustable heat settings, and a programmable timer up to 9 hours with automatic shut-off. It is designed for use on sofas, beds, or in office environments.


2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.


- **Read all instructions:** Ensure you understand all operating and safety guidelines before use.
- **Overheat Protection:** The blanket is equipped with an automatic overheat and overcurrent protection system. If the temperature exceeds safe limits, the power will automatically cut off.
- **Proper Placement:** Do not fold, curl up, or press the blanket excessively during use. This can cause localized overheating and damage the heating elements.



Please don't fold or curl up

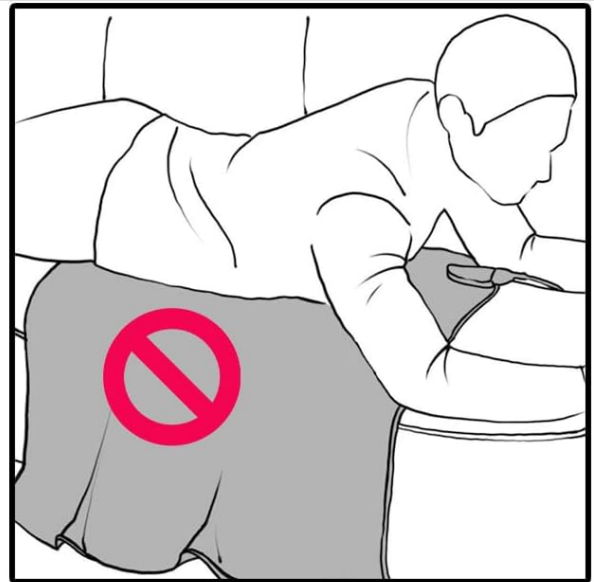

Please don't press the blanket.

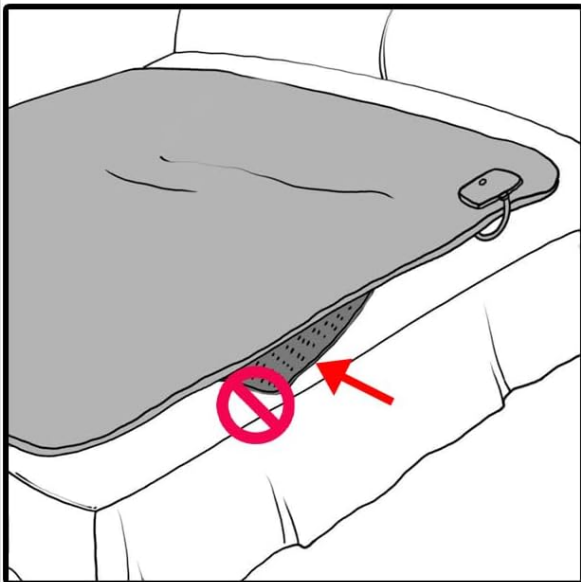

Please do not use with other heating products

Kind tips:

Please avoid the above situations during use. Because this will cause the blanket to overheat locally and cause it to no longer work.

Image Description: This image illustrates common misuse scenarios. It shows a person sitting on a folded blanket, a person lying on a blanket that is pressed, and a blanket being used with another heating product. Each scenario is marked with a red 'no' symbol, indicating these actions should be avoided to prevent overheating and damage.

- **Avoid Other Heating Products:** Do not use this heated blanket in conjunction with other heating devices (e.g., hot water bottles, other electric blankets).
- **Children and Persons with Reduced Capabilities:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Medical Conditions:** Consult a physician before use if you have a medical condition, are pregnant, or have a pacemaker.
- **Storage:** Store the blanket in a cool, dry place when not in use.
- **Power Cord:** Regularly inspect the power cord and controller for any signs of damage. Do not use if damaged.

3. PRODUCT COMPONENTS

Your PROALLER Heated Blanket package includes:

- 1 x PROALLER Heated Blanket (200x150 CM)
- 1 x Detachable Controller with Power Cord



Image Description: This image highlights the dual-material construction of the blanket. One side is labeled 'A SIDE SOFT FLANNEL' and the other 'B SIDE PLUSH SHERPA', demonstrating the soft textures of both materials.

4. SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the heated blanket and controller from its packaging.

2. **Inspect:** Check the blanket and controller for any visible damage. Do not use if damaged.
3. **Connect Controller:** Locate the connector on the blanket and firmly plug in the detachable controller. Ensure it clicks securely into place.
4. **Position Blanket:** Lay the blanket flat on your desired surface (sofa, bed, etc.). Ensure it is not folded, bunched, or creased.
5. **Plug In:** Plug the power cord of the controller into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

The controller allows you to adjust heat settings and set a timer for automatic shut-off.



Image Description: This image displays the blanket's controller. It clearly shows the control panel with buttons for power, adjusting heat levels, and setting the timer. Text overlays indicate '1-9 Hours Time Settings' and '10 Heat Settings', highlighting the main functionalities.

Power On/Off

- Press the power button on the controller to turn the blanket on or off.

Adjusting Heat Settings

- The blanket offers 10 adjustable heat settings.
- Use the '+' and '-' buttons on the controller to increase or decrease the heat level. The current setting will be displayed on the controller's screen.
- The blanket heats up quickly, providing warmth within minutes.

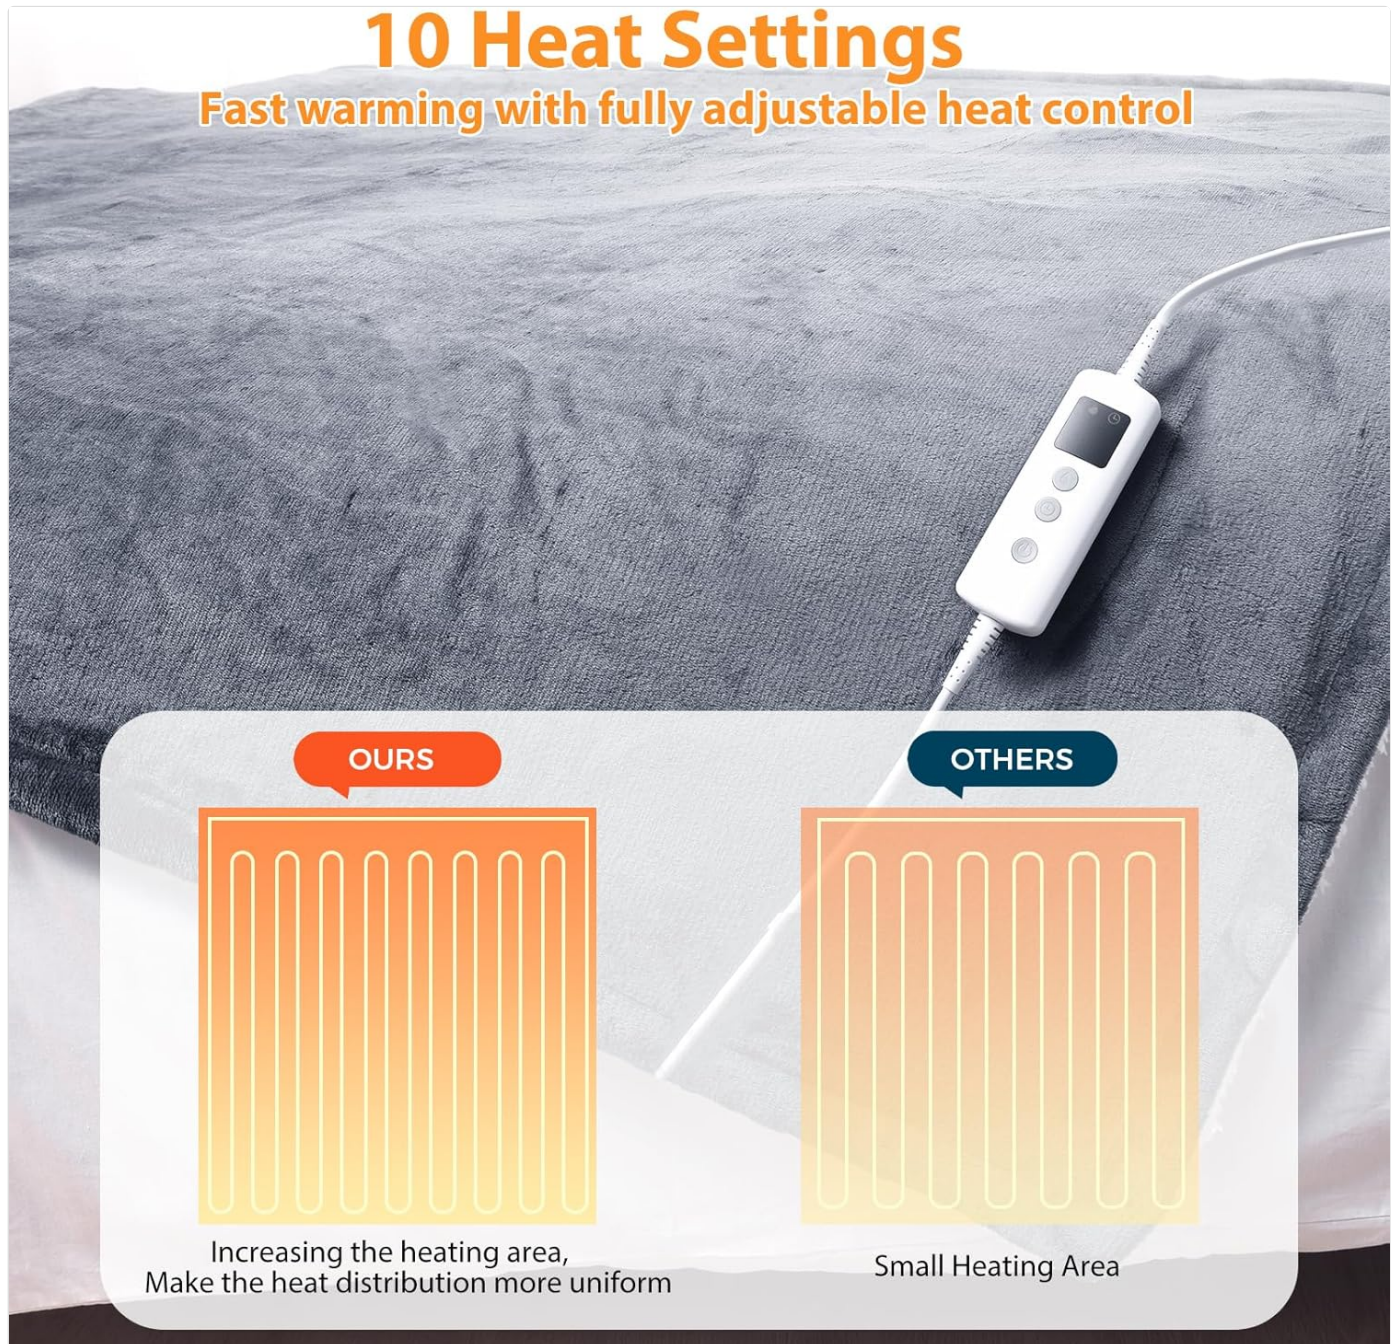


Image Description: This image compares the heating area of the PROALLER blanket ('OURS') with a generic blanket ('OTHERS'). It shows that the PROALLER blanket has an increased heating area for more uniform heat distribution, while the 'OTHERS' blanket has a smaller heating area.

Setting the Timer


- The programmable timer allows you to set the blanket to operate for 1 to 9 hours.
- Press the timer button to cycle through the available time settings.
- Once the set time expires, the blanket will automatically shut off for safety and energy saving.

Keeping You Cosy On The Sofa Settee Or In Bed



FAST HEATING

You can feel the temperature rise significantly in 5 minutes

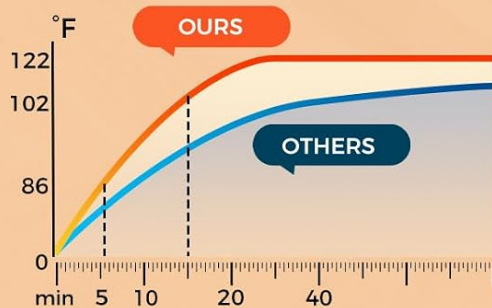

ENERGY-EFFICIENT

Saving heating costs, Saving electricity bills

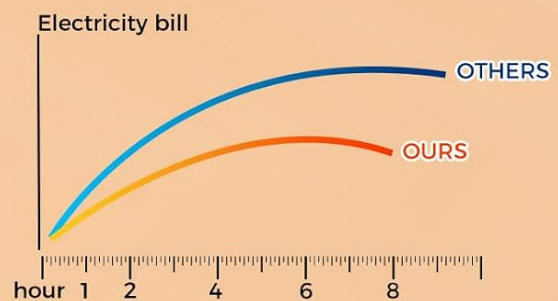


Image Description: This image presents two graphs. The first graph, 'FAST HEATING', shows that the PROALLER blanket ('OURS') reaches a higher temperature significantly faster (within 5 minutes) compared to other blankets ('OTHERS'). The second graph, 'ENERGY-EFFICIENT', illustrates that the PROALLER blanket consumes less electricity over time compared to other blankets, indicating energy savings.

6. MAINTENANCE AND CLEANING

Proper care ensures the longevity and performance of your heated blanket.

Hand and Machine Washable

Before washing, unplug the power connector



Unplug the connector



Washing without Hot Water



Don't Dry-Clean



Don't Iron



Image Description: This image provides visual instructions for cleaning the heated blanket. It shows icons and text indicating to 'Unplug the connector' before washing, 'Washing without Hot Water' (implying cold or warm water), 'Don't Dry-Clean', and 'Don't Iron'. A washing machine with the blanket inside is also depicted.

- **Before Cleaning:** Always ensure the blanket is unplugged from the wall outlet and the controller is detached from the blanket.
- **Machine Washable:** The blanket is machine washable. Wash on a gentle cycle at a maximum temperature of 40°C (104°F).
- **Detergent:** Use a mild detergent. Do not use bleach.
- **Drying:** Do not tumble dry. Air dry the blanket completely before reattaching the controller and using it again. Ensure all moisture has evaporated from the fabric and internal wiring.
- **Do Not Dry Clean:** Dry cleaning chemicals can damage the heating elements.
- **Do Not Iron:** Ironing can damage the heating elements and fabric.

7. TROUBLESHOOTING

If you encounter issues with your PROALLER Heated Blanket, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blanket does not heat up.	Not plugged in, controller not connected securely, power outage, or safety shut-off activated.	Ensure power cord is firmly plugged into outlet. Check controller connection to blanket. Verify power supply. If safety shut-off activated, unplug, wait 30 minutes, and try again.
Blanket heats unevenly.	Blanket is folded, bunched, or pressed.	Lay the blanket completely flat. Avoid folding or placing heavy objects on it during use.
Controller display is off or flashing.	Power issue or internal fault.	Unplug the blanket from the wall for 5 minutes, then plug it back in. If the issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact PROALLER customer support.

8. SPECIFICATIONS

- **Model Number:** OB20U-001
- **Dimensions:** 200 x 150 CM (Length x Width)
- **Material:** Double Flannel, Sherpa Fleece
- **Color:** Grey
- **Heat Settings:** 10 levels
- **Timer:** 1-9 hours with automatic shut-off
- **Safety Features:** Overheat and overcurrent protection
- **Care Instructions:** Machine washable (detachable controller), air dry.
- **Certifications:** CE, UKCA, RoHS compliant

9. WARRANTY AND SUPPORT

PROALLER products are manufactured to high-quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact PROALLER customer service directly.

Customer Support: Please visit the official PROALLER website or contact your retailer for support contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question